

Cleaning Instructions

PhoXi 3D Scanner


PhoXi 3D Scanners are generally low maintenance. To preserve their performance and quality of the scans, please check and maintain their outer optical parts regularly.

The glasses covering the camera unit and the projection should not be touched by bare hands to avoid staining of the glass which could interfere with light passing through them. In case when the glass was touched or lightly stained by any other mechanism, wipe the glass **with lint free wipes** intended for optical components.

In cases where the scanner is used in an environment with lots of dust, especially when the dust contains sharp or hard particles that could potentially damage the glass, clean the glasses **with specialized cleaning solution** for optical components, eg: First Contact™ Cleaning Solution¹.

To clean the glasses:

1. Coat the glass with the solution using the applicator. Make sure not to spread it to the edges. The solution immediately dries and creates a film over the glass.
2. Remove the film from the glass using peel tabs with wooden or plastic tips.
3. The film removes any dirt or particles from the glass.

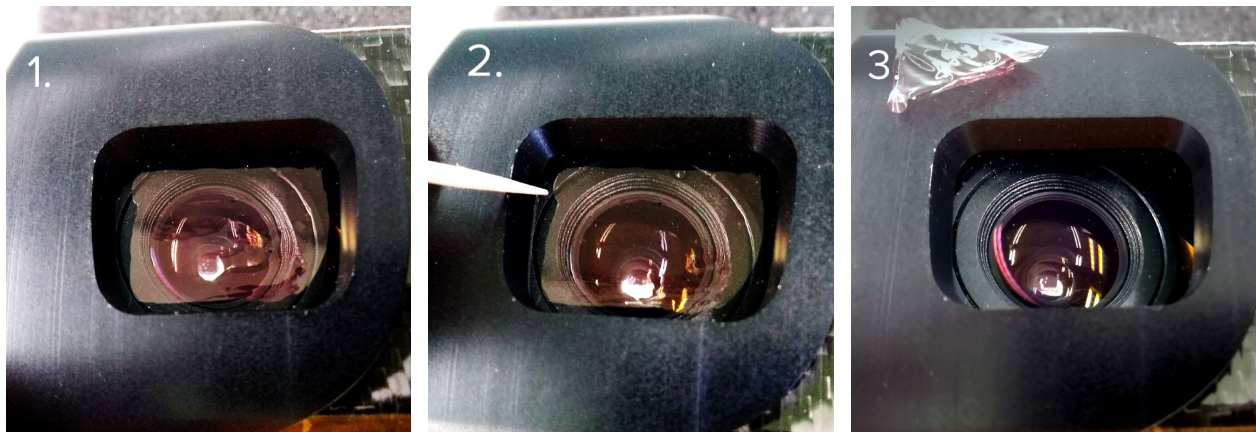

¹ <http://www.photoniccleaning.com/product-p/rfcr.htm>