
ZEBRA | Photoneo
Focused on 3D
NOW PART OF ZEBRA TECHNOLOGIES

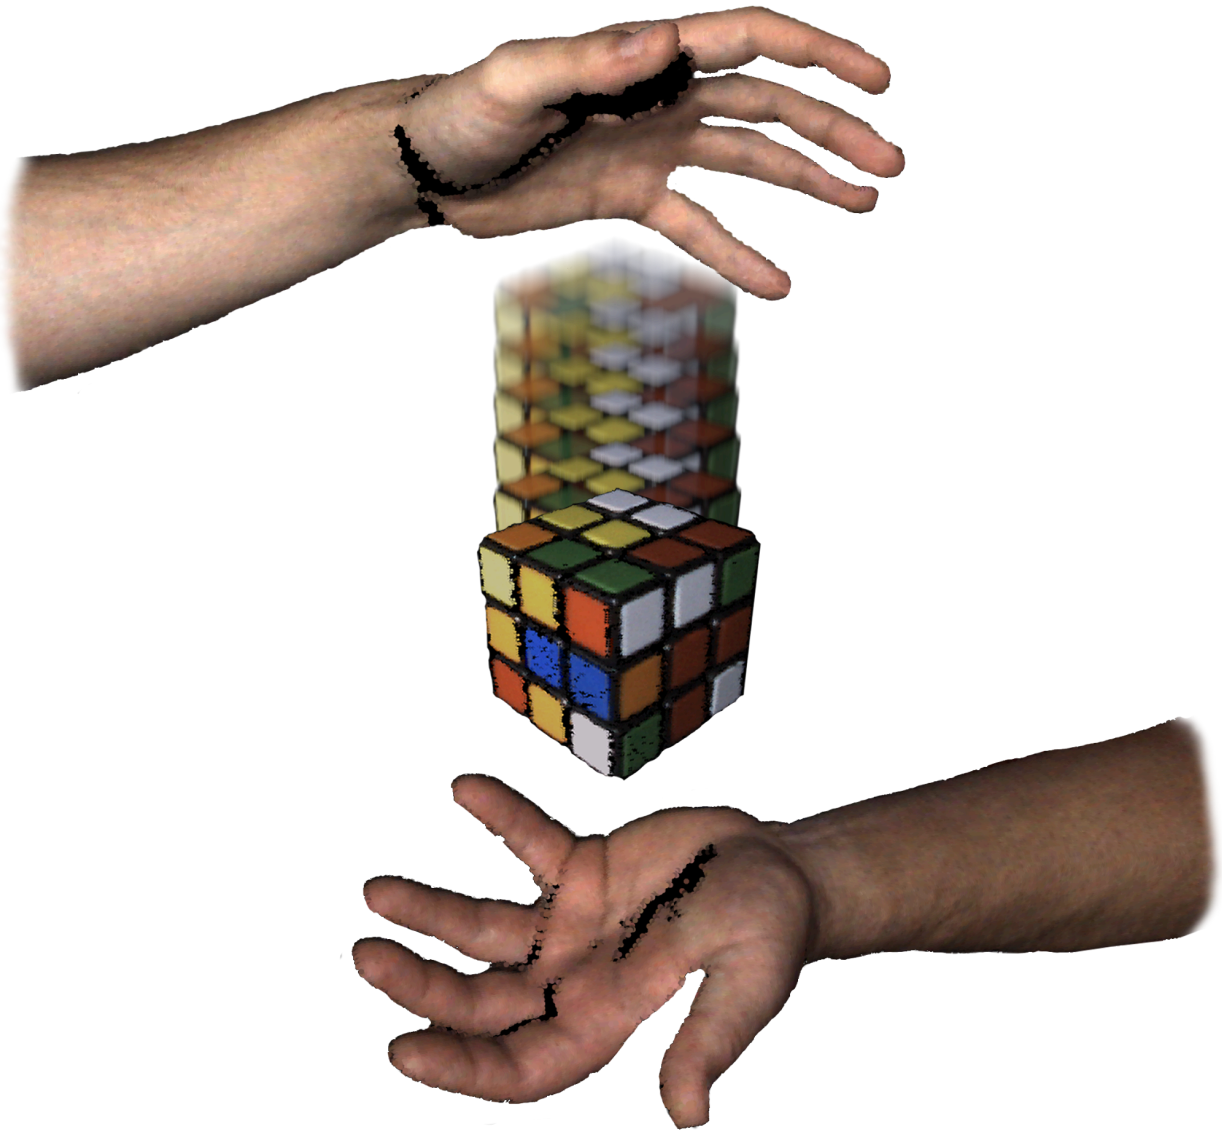

PhoXi™ Control 1.17

User Manual

User Manual for PhoXi Control version 1.17.

All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

Copyright © 2014-2024 by Photoneo s.r.o., Bratislava, Slovakia

Copyright © 2026 by Zebra Technologies Slovakia s.r.o., Bratislava, Slovakia

Photoneo™, PhoXi™ Control, PhoXi™ 3D Scanner, MotionCam-3D are registered trademarks of Zebra Technologies Slovakia s.r.o.

Microsoft, Windows, Windows 10, and Visual Studio C++ are either trademarks or registered trademarks of Microsoft Corporation.

Linux is a trademark of Linus Torvalds.

NVIDIA and CUDA are either trademarks or registered trademarks of NVIDIA Corporation.

OpenGL is a trademark of Silicon Graphics, Inc.

All other nationally and internationally recognized trademarks and tradenames are hereby recognized.

About This User Manual

This manual is intended for users who want to familiarize themselves with PhoXi Control software for MotionCam-3D, MotionCam-3D Color, PhoXi 3D Scanners, and Alpha 3D Scanners. PhoXi Control provides both a graphical user interface (GUI) and an application programming interface (API).

The MotionCam-3D (Color) is a high-resolution and high-accuracy 3D camera that uses a patented CMOS sensor and Parallel Structured Light technology developed by Photoneo. It provides the scanning quality of structured light devices with the ability to scan static and dynamic scenes at the speed of Time of Flight devices. Additionally, output from the RGB camera unit on the color models is mapped on the point cloud, adding an important layer of information for further processing.

PhoXi 3D Scanner is a compact yet powerful 3D scanner with state-of-the-art performance in terms of precision, noise, and overall efficiency. It can be used for scanning a wide variety of objects, making it a universal tool for all kinds of industrial applications, mainly automated object manipulation and inspection.

Alpha 3D Scanner takes advantage of the structured light technology, providing high-quality 3D point clouds for a great variety of machine vision tasks, making it a perfect choice for scanning large objects with a simple shape, such as boxes or containers in measurement, inspection, and similar applications.

This manual is based on the Photoneo 3D Sensors on firmware version 1.17. Using a Photoneo 3D Sensor on a different version may result in slight differences. It is recommended to use the newest firmware version available at Firmware Updater. Consult the Versioning Guide to see the newest firmware version for your device.

Visit www.photoneo.com for the most up-to-date information and documents.

Please read the **PhoXi Control User Manual** before using the software, and the **Photoneo 3D Sensor User Manual** to become familiar with the safety and assembly instructions before using the devices.

> Notice: New Online Documentation
> The latest, fully searchable version of this manual and all other 3D Sensor technical documentation is now available at docs.photoneo.com.

Contact us:

Headquarters:
Zebra Technologies Slovakia s.r.o.
Plynárenská 6
821 09 Bratislava,
Slovakia

Technical support

Contact us at the Help Center.

See the Troubleshooting section at the end of this manual.

Visit Photoneo support pages at www.photoneo.com/support.

Orders and inquiries:
sales@photoneo.com

Table of Contents

About This User Manual 3
Table of Contents 4
Introduction 9
PhoXi Control 9
GenICam interface (discontinued) 9
GigE Vision 10
Common Terms 10
Getting Started 11
Computer Requirements 11
Supported Compilers 11
Installation 12
Windows 12
Linux 12
Multiple Versions of PhoXi Control 13
Windows 13
Linux 13
Running the Application 15
Disabling GUI or 3D Viewer 15
Command Line Parameters 15
Graphical User Interface 17
Overview 17
Drop-down menus 17
Menu 17
Network Discovery 17
Open File Camera 17
Add device via Address 17
Lock GUI 17
Turn Off PhoXi Control 17
3D Cameras 17
Languages 18
Tools 18
Marker Patterns 18
Options 18
Help 18
Switch to Admin 18
About 19
Network Discovery 20
Device States Overview 21
Connecting to the device 22
Relationship Between GUI and API 22
File Cameras 22
Setting the order of scans in an internal file camera 23
Scanning Settings and *.praw Files Compatibility 24
Offline Inspection of P(M)RAW Files 24
Configuring Device Network Settings 24
Network Media 24
Network Topology 25
Network Configuration 25

Checking Computer Network Configuration 27
Network Environment Variable for IPv4 Preference 28
Adding device via Address 28
Utils 29
Reboot 29
Factory Reset 29
Log Downloader 29
Verification Report 29
Maintenance Tool 29
Autonomous Maintenance Reset 29
Sensor Alignment Tool 29
Device Window 29
Main Controls 30
Acquisition Modes - Triggering Scan 30
Assistant 31
Saving 3D Scans 34
List of Supported Formats 34
Saving Single Scan Manually 35
Saving Scans Automatically - Recording 35
Recording Options 36
Specifics of File Formats 36
Understanding Scanner Outputs - Topology of the 3D Scan 36
Understanding MotionCam-3D Output - Topology of the 3D Scan 37
Diagnostic recording 37
Diagnostic Scan 37
Tools 38
Test Speed 38
View 38
Device Logout 39
Select Frame 39
Device Settings Pane 39
Scanning Profiles 39
Using a Custom Profile 40
Scanning Parameters 40
PhoXi 3D Scanner 40
MotionCam-3D 41
Controls 41
Structure 41
Search history 43
Visualization pane 43
3D Viewer 44
OpenGL support 44
Changing the Visualisation 44
Transformation matrix 45
Intrinsic Parameters 46
Frame Information 46
3D Viewer Controls 47
File Camera Controls 48
2D Image Tabs 48
Confidence Map 48
Depth Map 49

Texture 50
Event Map 50
2D Image Tabs Visualisation Controls 52
Overlays 52
Image Information 52
Debug Information 52
Controls 52
Measuring tool 53
Undock Device Tabs 54
Status bar 56
Tools for Infield Maintenance 57
Maintenance Tool 57
Prerequisites 57
Using Maintenance Tool 58
Marker Dots 60
Prerequisites 60
Marker Dot Correction Process 60
Operation Modes 61
Marker Dot Shift Threshold 61
Correct Marker Dot Placement and Conditions for Recognition 61
Autonomous Maintenance 62
Requirements 62
Status messages: 63
API 65
Introduction 65
Prerequisites 65
API Examples 65
Running the Examples 68
Windows OS 68
Linux OS 69
API and Multiple Versions of PhoXi Control 70
Logs 70
Scanning Guide 72
How to Scan 72
Factors Affecting the Quality of Scan 72
Assessing the Quality of the Scan 73
Scanning Parameters 73
Capturing parameters (MotionCam-3D, MotionCam-3D Color) 74
General Settings 74
Color Settings (MotionCam-3D Color, PhoXi 3D Scanner Gen3) 76
Camera Mode (MotionCam-3D, MotionCam-3D Color) 77
Scanner Mode (MotionCam-3D, MotionCam-3D Color) 78
Capturing parameters (PhoXi 3D Scanner, Alpha 3D Scanner) 80
General Settings (PhoXi 3D Scanner, Alpha 3D Scanner) 80
Log Level 80
Capturing Settings (PhoXi 3D Scanner, Alpha 3D Scanner) 80
Processing Settings (Photoneo 3D Sensor) 85
Coordinate Settings (Photoneo 3D Sensor) 88
Primary Camera to Point Cloud Space transformations 90
Current Camera to Point Cloud Space transformations 90
3D ROI Configuration 91

General Behavior & Constraints 91
Configuration Modes 91
1. Interactive Mode (Graphical) 91
Activation 92
Manipulating the Bounding Box 92
ROI Toolbar Controls 94
2. Manual Mode (Numerical) 94
Hardware trigger 95
Software Configuration 96
Simple configurations 96
Single device triggered by HW trigger (SEXT) 96
Photoneo 3D Sensor output signal to PLC or other device (OUT) 97
Multiple devices triggered by HW trigger independently from each other (MEXT) 97
Daisy Chain and Daisy Chain in a Loop 97
Two or more devices triggered sequentially in a daisy chain (EXTSEQ, INTSEQ) 97
Two or more devices triggered sequentially in a loop - daisy chain in a loop (EXTDCL) 98
Troubleshooting 100
Collecting Log Files 100
Downloading Logs From Device 100
PhoXi Control built-in functionality 101
Standalone LogDownloader Utility 101
Device Log Level 102
PhoXi Control Log Files 102
PhoXi Control Log Level 103
PhoXi Control Core Dumps 103
API Log Files 103
API Core Dumps 104
Troubleshooting Network Connection 105
Cannot connect to the device or scanning time is too long 105
The device is not visible in PhoXi Control on a network with a dynamic IP assignment 105
12 V devices 106
PoE devices: 106
Bonjour Service cannot be started on Windows 107
Ubuntu does not show IPv4 address - creating a Link-local connection 107
In case of other issues 108
Appendix 1 - Marker Space 110
Introduction 110
Marker Space 112
Marker Pattern 112
Marker Space Set Up 118
Calibration 118
Usage 119
Marker Space Advantages and Use 120
Troubleshooting and FAQ 123
How do I find out if my point cloud is in the Marker space? 123
Point cloud is not generated, and the status bar shows Error: Marker pattern was not recognized (3D-Based)!. 123
The point of origin of Marker Space is not in the center of the circle. 124
Does the origin point of Marker Space have to be visible to the device? 124
Appendix 2 - Sensor Alignment Tool 125
Alignment Methods 125
General Alignment Workflow 125

Method-Specific Preparations and Instructions 127
Method 1: Texture-Based 127
Method 2: Sphere-Based 128
Method 3: Multi-Marker 128
Method 4: Marker-Dot 129
Standalone Application 129
Windows: 129
Ubuntu: 129
Sensor Alignment Tool Configuration 130
Windows: 130
Ubuntu: 130
The Configuration section of this guide explains how to use the config.txt file. 130
Appendix 3 - External Camera Calibration 131
Introduction 131
Running the Example with Sample Data 131
Calibration 132
Aligned Depth Map Computation 132
Colored Point Cloud Computation 133
Integration of External Camera 133
External Camera 133
Marker Pattern 133
External Camera Implementation 134
Calibration 134
Using Already Saved Data 134
Aligned Depth Map Computation 134
Using Already Saved Data 134
Colored Point Cloud Computation 135
Using Already Saved Data 135
Appendix 4 - Intrinsic Parameters 136
Use Cases 136
Point Cloud Calculation from Depth Map 136
Image Processing on Undistorted Data 136
Intrinsic Parameters Provided by Photoneo Devices 136
Intrinsic Camera Matrix and Distortion Coefficients 137
Global Method 137
Per Frame Method 138
Reprojection Map 139
Global Method 139
Overview 140
Contact Information 141

Introduction

This user manual will first guide you through the use of PhoXi Control Graphical user interface (GUI) and the API, and then provide a quick scanning guide with references to further resources. Additionally, alternative ways of operating Photoneo 3D Sensors are referenced or described.

Photoneo sensors can be operated via:

- PhoXi Control
    - GUI
    - API
    - GenICam (discontinued)
- GigE Vision protocol

PhoXi Control application enables users to control Photoneo 3D Sensors manually via the GUI or by a computer program using the provided API or GenICam interface. Alternatively, Photoneo sensors can run in GigE Vision compatible mode in which PhoXi Control cannot be used.


PhoXi Control

The GUI is primarily used to set up the scanning environment, configure the device parameters, and test the output. In addition, the GUI can also be used as a powerful debugging tool for development with the API, since the calls to the API trigger the same response in the GUI as the user inputs. After triggering the scan by calling the API method, the application will execute the scan, send it as an output of the call, and display it simultaneously on the GUI.

The API has been designed to serve as a central platform for the development of custom applications. To facilitate the development process as well as to reduce computing demands, all 3D data computations are performed on the device itself. The postprocessing of the data (e.g. Localization of object) happens on the user's computer.

GenICam interface (discontinued)

IMPORTANT NOTE: GenICam interface was discontinued and removed from PhoXi Control 1.16.4 and onward.

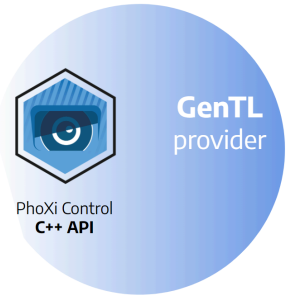

The Generic Interface for Cameras standard is the base for plug-and-play handling of cameras and devices. It was developed by the European Machine Vision Association (EMVA)

GenICam support is provided via the GenTL library that works as a wrapper around the PhoXi Control C++ API. PhoXi Control has to be running in order to use the GenICam interface.

The available examples for Python and Halcon support can be found in the installation directory:

- On Windows OS, the path to the GenTL directory is usually:
    - `Program Files/Photoneo/PhoXiControl-1.16.x/API/Examples/GenTL`

- On Linux OS, the path to the GenTL directory is usually:
    - `/opt/Photoneo/PhoXiControl-1.16.x/API/GenTL`

User guides for GenICam integrations contain more detailed information and requirements for running the examples.

GigE Vision

GigE Vision is a high-speed communication protocol and interface standard that is designed for transmitting data over Ethernet networks. Third-party software with GigE support can be used to operate Photoneo 3D Sensors without a running instance of PhoXi Control.
User guides for GigE integrations contain more detailed information and requirements for running the examples.

GigE Vision functionalities can be turned on and off. For that please download and install the necessary utilities, that you can find on the corresponding links:

- GigE Vision utilities for Windows : www.photoneo.com/dl/gigev-utils-win
- GigE Vision utilities for Linux: www.photoneo.com/dl/gigev-utils-lin

Common Terms

Clarification of several terms used in this document.

Photoneo 3D Sensor	General term for PhoXi 3D Scanner or MotionCam-3D (Color).
device	General term for PhoXi 3D Scanner or MotionCam-3D (Color).
MotionCam-3D	General term for MotionCam-3D devices including the MotionCam-3D Color if not stated otherwise
2D camera	Refers to the 2D camera unit inside PhoXi 3D Scanners.
image sensor	'Image sensor' refers to the CMOS sensor inside the 2D camera unit. More information about camera components can be found in Photoneo 3D Sensors User Manual
RGB camera	Refers to the 2D RGB camera unit inside the MotionCam-3D Color and Phoxi 3D Scanner Gen3.

Getting Started

Computer Requirements

Please ensure that your computer meets the minimum recommended requirements in order to run PhoXi Control smoothly.

Processor	Any x64 architecture, Intel or AMD but Intel Core i7 or Ryzen 7 for best performance. (Processor performance affects the responsiveness of the application)
Operating system:	Only 64-bit platform Windows 10 / 11 Ubuntu 18 / 20 / 22 / 24
RAM:	Recommended 16 GB (minimum 2 GB for the application connected to 1 device)
SSD:	128 GB (Minimum 4 GB free disk space)
GPU:	GeForce GTX 1060 3 GB or similar external graphics card with OpenGL v 3.0 support.

Note: *Photoneo 3D Sensors have a very high resolution mode producing up to 3 million 3D points, therefore the requirements made on the graphical performance of your graphics cards are higher. Old or slow graphics cards can reduce the performance of the 3D viewer.*

Supported Compilers

To use the API, the following compilers are supported:

- Windows OS:
  - Visual Studio 14 2015 Win64
  - Visual Studio 15 2017 Win64
  - Visual Studio 16 2019 Win64
  - Visual Studio 17 2022 Win64
- Ubuntu 18:
  - g++ 7.4.0
- Ubuntu 20:
  - g++ 9.3.0
- Ubuntu 22:
  - g++11.3.0
- Ubuntu 24:
  - g++ 13.2.0

Installation

Download the latest version of PhoXi Control: www.photoneo.com/downloads/phoxi-control

By installing and using PhoXi Control, you agree to the End User License Agreement (EULA), which can be found in the installation directory.

While the installer will prompt you to uninstall any existing version of PhoXi Control, this step can be ignored as Multiple versions of PhoXi Control can be installed on one computer. However, only one instance can run at a time.

Windows

To install PhoXi Control on Windows, proceed as follows:

1. Double-click the downloaded *.exe installation file.
2. Follow the setup wizard and restart the computer if this is your first installation of PhoXi Control.
3. Run PhoXi Control as a standard Windows application. The application automatically starts after the computer starts.

Note: The user is able to install PhoXi Control with or without the included file camera examples or the API. This can be changed during the *Choose Components* part of the installation process.

Default installation paths:

- Shortcut folder:
  `C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Photoneo PhoXi Control`
- Installation folder:
  `C:\Program Files\Photoneo\PhoXiControl-<version>`
- Application data folder:
  `%AppData%/PhotoneoPhoXiControl/`

Linux

To install PhoXi Control on Ubuntu, proceed as follows:

1. Unpack the downloaded *.tar file.

```
$ tar -xvf PhotoneoPhoXiControlInstaller-<version>-Ubuntu[22 20 18]-STABLE.tar.gz
```

2. Make the file executable and then execute with `sudo`. The installation requires the user to accept EULA, to do this automatically, pass the `--accept` flag to the installer script.

```
$ chmod +x PhotoneoPhoXiControlInstaller-<version>-Ubuntu[22 20 18]-STABLE.run
$ sudo ./PhotoneoPhoXiControlInstaller-<version>-Ubuntu[22 20 18]-STABLE.run
$ sudo ./PhotoneoPhoXiControlInstaller-Ubuntu-<version>.run --accept
/opt/Photoneo/PhoXiControl-<version>
```

3. Successful installation output will show you the installation path and will ask you to reboot.

4. Restart your computer.

```
$ sudo reboot
```

5. Run PhoXi Control from a command line or from a launcher.

```
$ PhoXiControl
```

Default installation paths:

- Installation folder:
  `/opt/Photoneo/PhoXiControl-<version>`
- Application data folder:
  `/home/<username>/.PhotoneoPhoXiControl`

Multiple Versions of PhoXi Control

Multiple versions of PhoXi Control can be installed on one computer. This is achieved by choosing different installation directories during the installation. The process is as follows:

Windows

On Windows, the installer asks for a path where the application should be installed. By default, this path is:

`C:\Program Files\Photoneo\PhoXiControl-<version>`

When another version of PhoXi Control is being installed, a different path should be specified, for example:

`C:\Program Files\Photoneo\PhoXiControl-custom`

Linux

Ubuntu installer automatically installs PhoXi Control in the following folder:

`/opt/Photoneo/PhoXiControl-1.16.x`

To install PhoXi Control to a different folder, pass it as an argument to the install script:

```
$ sudo ./PhotoneoPhoXiControlInstaller-1.16.x-Ubuntu.run /your/custom/path
```


To match the old behavior of the Ubuntu installer use the original location:

```
$ sudo ./PhotoneoPhoXiControlInstaller-1.16.x-Ubuntu.run /opt/Photoneo/PhoXiControl
```

Important note: PhoXi Control path environment variable is set to the latest installed version of PhoXi Control, not the most recent PhoXi Control version (Example: User installs PhoXi Control 1.16 and then installs PhoXi Control 1.12). This may affect access to certain features only available in the newest release and are dependent on the path defined in the environment variable.

Starting with PhoXi Control 1.17, a warning notification appears if an application utilizing a newer version of the PhoXi API attempts to connect to a running instance of PhoXi Control. This alert is designed help prevent unexpected behavior,

communication errors, or missing settings that may occur due to version mismatches between the API client and the host application.

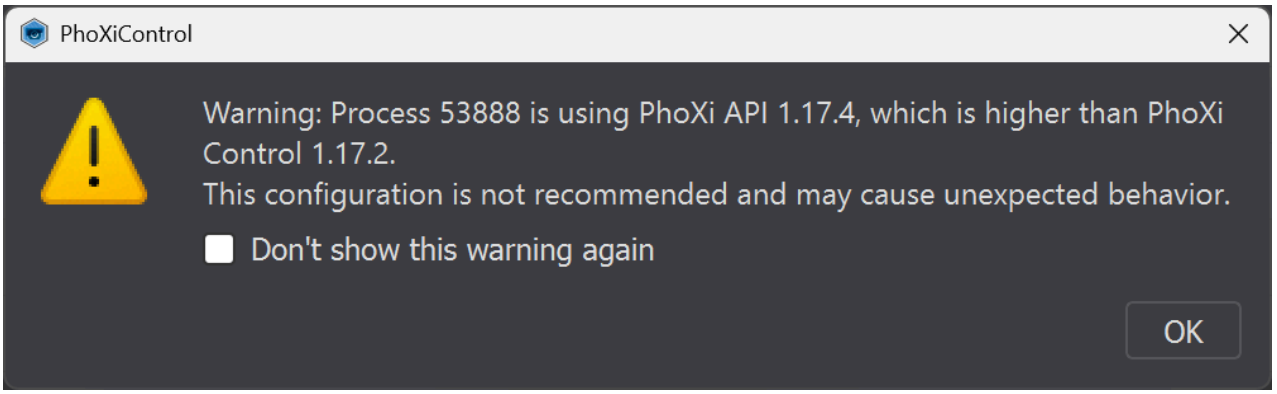

Running the Application

By default, PhoXi Control starts automatically after the operating system is started. Users can change the default application behavior by setting up specific environment variables or by command line parameters.

Disabling GUI or 3D Viewer

Disabling GUI or the 3D Viewer is used mainly in the following situations:

- Need to save computer resources or when the computer has insufficient performance (3D Viewer)
- Applications with their own GUI using only the API

Desired behavior	Action needed
Permanently disable GUI	Set environment variable: `PHOXI_WITHOUT_DISPLAY=ON`
Permanently disable the 3D Viewer only	Set environment variable: `PhoXi3DViewer=0`
Temporarily disable GUI	Run script: - Windows: `%PHOXI_CONTROL_PATH%\bin\support\PhoXi_Control_as_background_process.bat` - Linux: `/opt/PhotoneoPhoXiControl/bin/support/RunPhoXiControlOnBackground.sh`
Temporarily enable GUI (when permanently disabled by the environment variable)	Run script: - Windows: `%PHOXI_CONTROL_PATH%\bin\support\PhoXi_Control_enable_gui.bat`

Command Line Parameters

PhoXi Control can be started with the following command line parameters:

```
-minimised
```

- PhoXi Control will be started minimized.

```
-lock
```

- Used to lock the application against unauthorized use. The application will ask you to set up a password and then to restart. Users are prompted to enter a password every time they start the application. The API can connect to the device only after the password is entered.

```
-unlock
```

- Removing the authorization request after the application startup. The application prompts you to enter the password and then restarts. This means PhoXi Control can be used without authorization.

```
-kill
```

- Any instance of PhoXi Control will be switched off.

```
-forceRun
```

- Used together with -kill. While -kill alone stops all running instances of PhoXi Control, additional argument `-forceRun` ensures that a new instance of PhoXi Control will be started as next.

Example command:

```
PhoXiControl -kill -forceRun
```

Graphical User Interface

Overview

The initial window of the application is called Network Discovery. It displays a list of all the devices available on the network. A new connection to the device opens a new Device window. Device windows can be organized by dragging the window title. The application minimizes itself into the system tray. To close the application, use the Menu or right-click on the system tray icon and select the option to **Turn off PhoXi Control**.
The version of the PhoXi Control is displayed in the title bar of the GUI window.

Drop-down menus

This chapter explains the use of drop-down menu items.


Menu

Network Discovery

- Opens the Network Discovery window. After a successful connection to the device, the Network Discovery window is usually hidden in the background.

Open File Camera

- Loads 3D scans in *.praw format into a new File Camera, which remains available until the application is shut down.

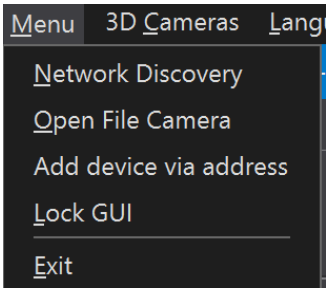

Add device via Address

- Allows adding Photoneo 3D Sensor into PhoXi Control via its IP address

Lock GUI


- Option to protect GUI against unauthorized use.

Turn Off PhoXi Control


- Shuts down the application. (Using the standard close window button will only minimize the application).

3D Cameras

- A list of active devices. Allows switching between windows of the connected devices or virtual File Cameras.

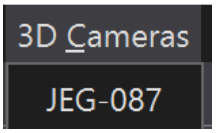


Languages

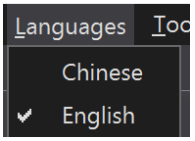

- Switch between supported languages.


Tools

Marker Patterns

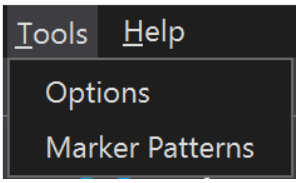

- This option opens a directory containing folders with marker patterns and their metadata.
- Marker patterns are used for changing the coordinate space and device calibration (multiple devices together, hand-eye calibration, calibration with an external 2D camera)
- Marker patterns come in 5 sizes that are intended for different scanning distances. The applicable scanning distances for each pattern are stated in the name of the corresponding pdf file.


Options

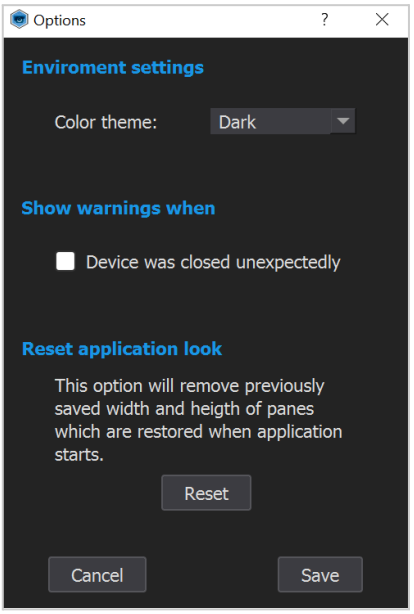

- Switching between different color themes.
- Disabling default warning behavior.
- Reset application look
  - The application remembers your preferences for showing UI components. Use this function to reset PhoXi Control to the default layout. Useful mainly when switching between monitors with different DPI and resolutions.

Help

Switch to Admin

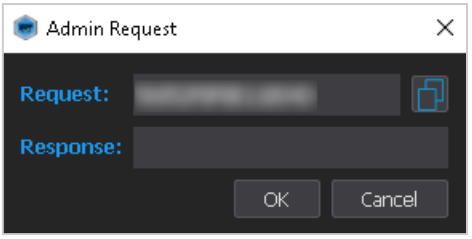


- This function is only used by Photoneo staff during remote sessions to temporarily set admin privileges.


About

- Displays the current PhoXi Control application version and links to the Photoneo web page.
- Third Party Licenses button displays a comprehensive overview of the 3rd party licenses.



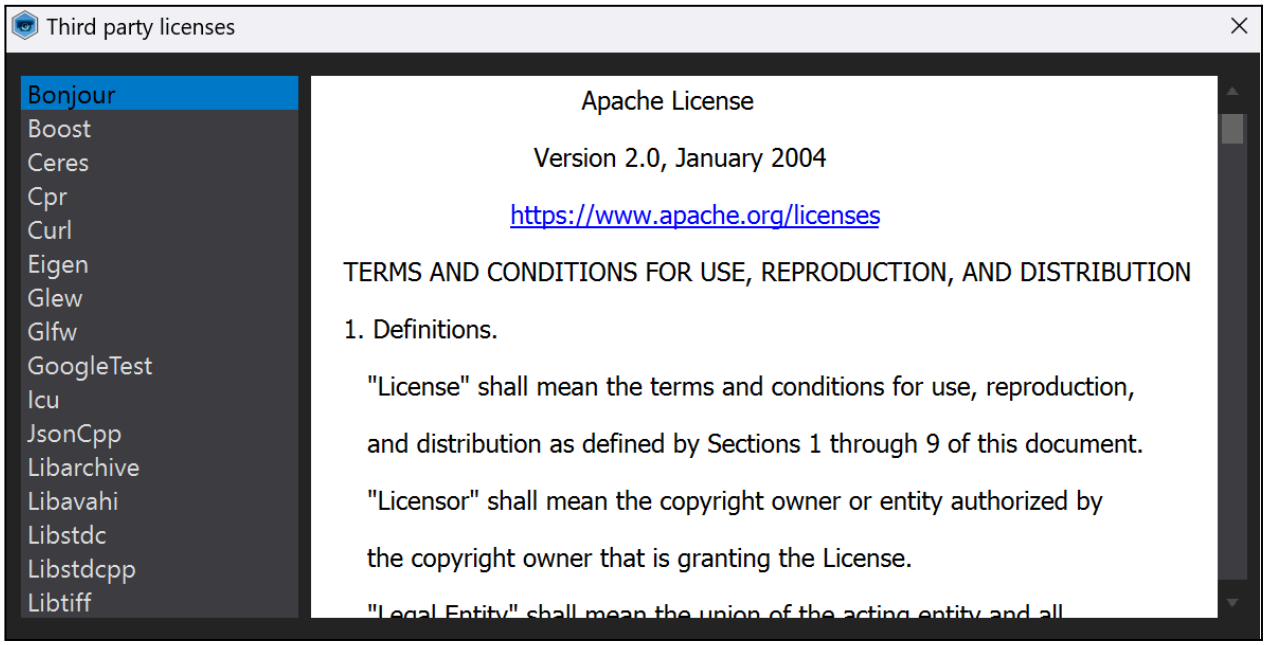

Network Discovery

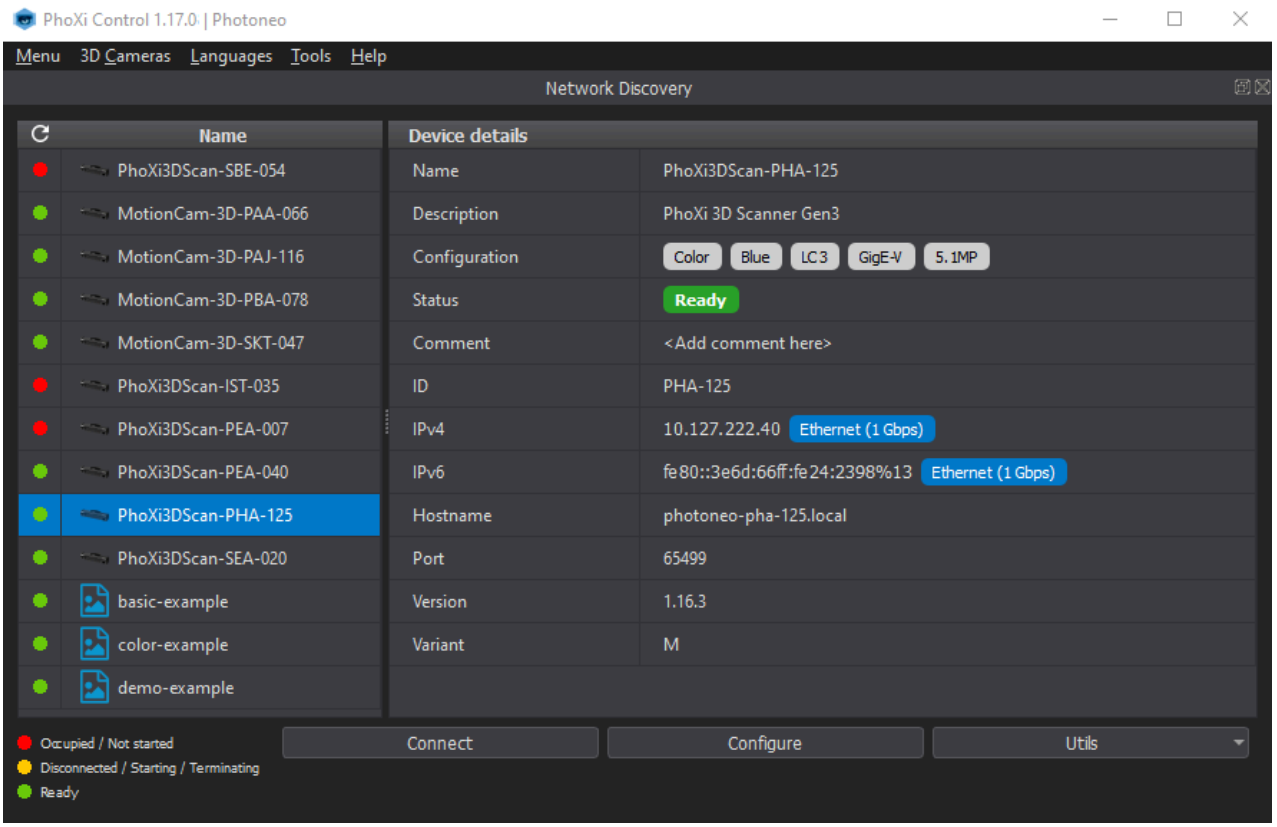

The Network Discovery window lists all available devices on the network. After the application starts, please wait a moment until all devices are found, or click on the refresh button in the upper left corner above the displayed devices.

If your device is not listed, please make sure that it is turned on and connected to the network. After a short time, the device will appear on the list. The time required to discover a newly powered device should be under 3 minutes. The time required to discover the device after it was disconnected or the connection was lost should be under 45 seconds.

If no device is shown on your list, please check your network configuration. See the chapter Configuring Device Network Settings for more information.

Selecting a device will display its details such as *Name*, *Description*, *Configuration*, *Status*, and *ID*, as well as its network settings, *firmware version* and *model*.


Configuration shows the hardware specifications of the given device. Possible tags you can see in the *Configuration* field are:

- **Alpha** - represents the Photoneo Alpha 3D Scanner
- **Color** - represents the devices with built in RGB camera
- **Red** - represents the color of the laser
- **Blue** - represents the color of the laser
- **LC2** - represents the Laser Class 2 (used with Photoneo Scanner Gen 2 and MotionCam-3D)
- **LC3** - represents the Laser Class 3 (used with Photoneo Scanner Gen 2 and MotionCam-3D)

- **GigE-V** - represents the possibility to connect to the device through GigE-V
- **Interlock** - represents the activation of the interlock feature
- **#MP** - represents the maximal supported resolution of the device

Through API, this information can be found under the name *"features"*. *Configuration* and *features* are only available for PhoXi Control version 1.16.2 and higher, as well as firmware version 1.16.2 and higher.

It is possible to "Pin Device" by right-clicking a device in the list. Pinned device will always show on the top of the list. It is also possible to pin a File Camera.

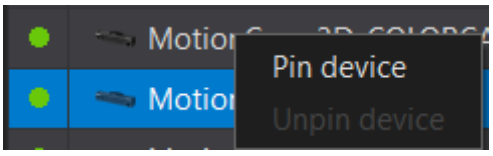

Not all information is available for File Cameras or for devices with an older firmware version. For example, a *comment* field in the network discovery allows the user to describe the device with a custom message (up to 1024 characters). This is possible only for devices with firmware versions higher than 1.9.0. A comment can be added by right-clicking the *Comment* and selecting *Edit comment*.


The status field has three different "Occupied" states :

- Occupied by me (via PhoXi Control): Indicated simply as "Occupied" (means the user is already connected)
- Occupied by someone else (via PhoXi Control): Displayed as "Occupied" with a red box showing the IP address
- Occupied via GigE Vision interface: Displayed as "Occupied" with a red box labeled "GigE Vision" (and the IP address if provided by the device).

IPv4 and IPv6 address rows contain dynamic interface labels. The labels dynamically change color: red for non-routable addresses, orange for sub-1Gbps interface speed, and blue for normal operation (1Gbps).

Device States Overview


The following list represents all the possible device states. It is only possible to connect to a device in Ready state.

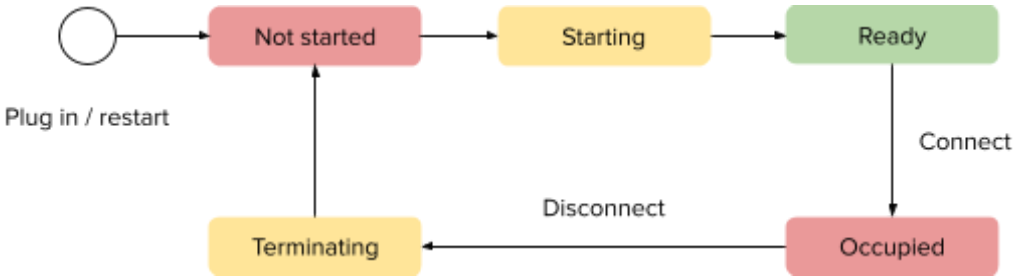

Not started	The device has just been plugged in or was restarted. After a few seconds, the status will change to Starting.
Starting	The device is starting its operating application. After a few moments, the status will change to Ready.
Ready	The device is ready for a new connection.
Occupied	The device appears as occupied after the connection is established. Only one connection at a time is permitted. It is not possible to connect to an occupied device.
Terminating	The device is being terminated after the user disconnects from the device. After a few moments, the status will change to Starting and Ready.

This list can also be found in the lower left corner of the Network Discovery window.

Connecting to the device



To connect to a device, simply double-click on the device name or select it and click **Connect**. It usually takes about 2-5 seconds for the device to connect; however, based on the internal state of the device, it can take up to 1 minute. Once the device is connected, a new Device window will open and its status in Network Discovery will change from Ready to Occupied. Therefore, if you share a device with other users, make sure you disconnect from it after you finish using it.

Please ensure that you are using a wired network connection to the device. WIFI connections are not recommended due to lower speed and reliability.

Relationship Between GUI and API


Connection to the device via API causes the GUI to open the Device window similar to when connecting via the GUI. When you connect to the device through the GUI, it is possible to work with the device through API.

File Cameras

Every 3D scan captured by PhoXi 3D Scanner or MotionCam-3D can be saved into a Photoneo RAW (*.praw) file. The main advantage of this native format is that it contains all the information about the scanning configuration and additional information about the device. All other formats can be exported from *.praw files.

Additionally, dynamic scans taken by MotionCam-3D can be saved into a Photoneo MotionCam-3D RAW (*.pmraw) file. This format is capable of creating a file camera consisting of a single file but containing many scans.

Single or multiple *.praw files can be loaded into PhoXi Control either by using the menu or by dragging & dropping the files anywhere on the GUI. Opening N *.praw files will create a new virtual device called File Camera. This virtual device behaves in a very similar way to a regular device. In case of drag-and-dropping multiple *.praw files or opening a *.pmraw file, you can use “Previous frame” and “Next frame” buttons, which replace the “Trigger” button, to cycle through the frames. While looking at the last scan, you can press Right Arrow to seamlessly move to the first scan. Respectively, you can move to the last scan by pressing Left Arrow, while looking at the first scan.

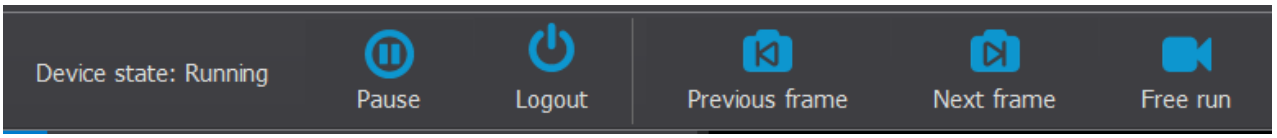


PhoXi Control already contains 2 example file cameras, which contain 1 or more captured frames and can be used for testing purposes.

Note: *The scanning parameters for File Camera are read-only, as these scans have already been taken and processed.*

Network Discovery window offers specific options for File Cameras when **right-click** is used or by using a keyboard shortcut:

- **Add as internal file camera**
  - Internal File Camera remains in Network Discovery even after you restart the PhoXi Control application. Otherwise, the File Camera is present only until the end of the application.
- **Remove from list** (Delete key)
  - This option will remove the File Camera from the list of devices, but keep underlying files on disk.
- **Delete from the filesystem** (Shift + Delete keys)
  - This option will remove the File Camera from the list of devices and also delete underlying files from the disk.

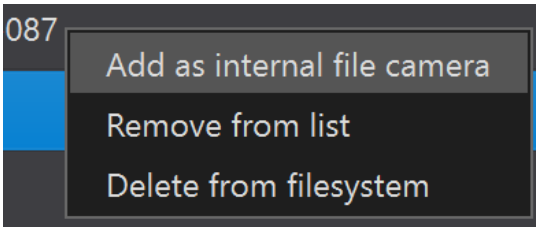

Setting the order of scans in an internal file camera

After creating an internal file camera using a group of scans, it is possible to define the order of the loaded scans using an *order.cache* file in the directory of the internal file camera which can be found at:

```
%AppData%/PhotoneoPhoXiControl/File3DCameras/<file camera name>
```

Create a file *order.cache* and open it in a text editor. The order of the scans being loaded in the internal file camera can be defined as follows:

- Defining the order by name (alphabetical order)
  - Line 1: “order_by_name”
- Defining the order by the last modified date/time

- Line 1: ”order_by_modified_time” custom

- Defining a custom order (**files not mentioned will be skipped**)
  - Line 1: “scan_1.praw”
  - Line 2: “scan_14.praw”

Note: The file camera needs to be set to an Internal File Camera in order to *order.cache* config file to affect the order. Scans loaded to PhoXi Control by *Menu → Open File Camera* or by dragging the scans will be normally loaded in the order they were selected in their original directory.

Scanning Settings and *.praw Files Compatibility

The scanning settings are applicable to the device depending on its FW version. A *.praw file contains complete data about the scan, including scanning settings. It needs to be noted that older versions of PhoXi Control might not display all parameters of devices with newer FW.

Offline Inspection of P(M)RAW Files

Users can inspect and extract image data from proprietary Photoneo RAW files (.praw and .pmraw) offline, without requiring an active instance of PhoXi Control or a connected physical device.

PhoPrawExtractor: A command-line utility included directly in the PhoXi Control installation folder for quick extraction. It can be located at *C:|Program Files|Photoneo|PhoXiControl-<version>|bin|*

PrawReader: A Python module distributed within the phoxi-api package, providing flexible options for exporting data into generic formats for further processing and visualization.

Configuring Device Network Settings



To ensure the smooth operation of the device with your computer, make sure you follow the guidelines for hardware setup and network connection described in the next sections. Before you connect your device to any network, make sure you know how the network is set up or have the administrator of your network do it for you.

Connect the network cable to the device first, then connect the power cable.

Network Media

Always use cables of a Cat5e category or higher that support Gigabit Ethernet or 10 Gigabit Ethernet standards. Do not use cables of the Cat5 category as their speed is usually 10 - 100 Mbps, which is too low to obtain a good scanning performance. To distinguish these two types of cables you can try

- reading the labeling on the PVC jacket,
- using the Test speed tool,
- and looking at the IPv4 and IPv6 address rows in the *Networks Discovery* tab which contain dynamic interface labels based on the connection speed.

WiFi connections are not recommended and may result in random disconnection.


If you are connecting your device to a switch, make sure it is able to run at 1 Gbps or more.

Network Topology


We recommend connecting Photoneo devices directly to a computer or a local network, ideally keeping them air-gapped.

Photoneo devices use Zeroconf technology for service discovery. However, this technology is generally not routable outside of local sub-networks. Therefore, the supported network topologies are


- Direct connection between the user's PC and Photoneo 3D Sensor.

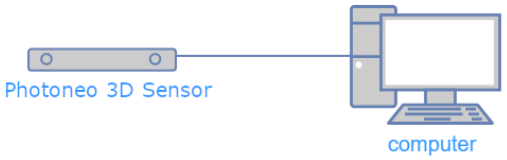

- Star topology with one or more user PCs and one or more Photoneo 3D Sensors connected to a switch, all on a single local subnet. The switch has to be able to run at 1 Gbps or more.

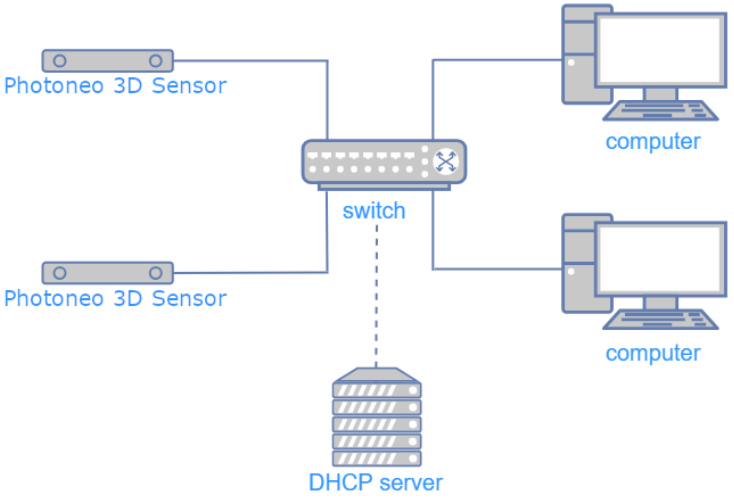

If you connect your device to your network via a router, it will not be accessible since routers usually connect two different subnets. Zeroconf technology is routable only in the same subnet.

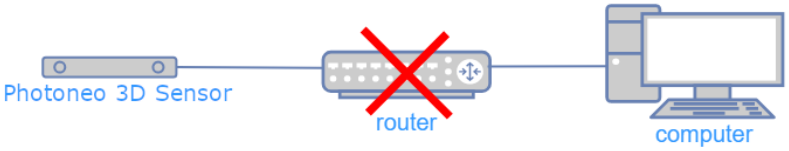

Network Configuration

If you are not sure how your network works or how to set up an IP address assignment, contact your network administrator.

Photoneo 3D sensors are network devices, therefore, they need a unique IP address so that any other computer on the same network can identify them, and communicate with them. IPv4 addresses usually serve this purpose.

There are three ways the device can obtain an IPv4, and how it can be discovered in the network:

- **Dynamic IP assignment via DHCP** (Dynamic Host Configuration Protocol). Ask your network administrator if you have a DHCP server available on your network.
- **Dynamic IP assignment via Zeroconf technology** (for networks without DHCP). Thanks to Zeroconf technology the device is assigned an IPv4 address automatically and can be discovered on the network with no further input from the user. IPv4 addresses assigned by Zeroconf come from the 169.254.0.0/16 network as described in RFC 3927. Some Ubuntu systems require a Link-local connection for the correct Zeroconf IP address assignment.
- **Static IP address assignment.** A static IP address has to be set up manually. Ask your network administrator for a valid and available IPv4 address before configuring it. Be careful not to set an IP address outside of the network you are currently in, as this would make the device in the network undiscoverable. Once you set a static IP address for your device, write it down and store it in case you need to use the device in a different network or want to change your network parameters in the future.


Note: Zeroconf network discovery works with Link-local connections on Ubuntu OS. Using Zeroconf without a Link-local connection may result in IPv4 addresses not being assigned correctly. Symptoms include missing IPv4 address in the corresponding field in PhoXi Control and command

```
ip addr show <INTERFACE-NAME>
```


not showing 169.254.x.x IPv4 address. Read instructions on how to create a Link-local connection in the section Troubleshooting.

Note: A fixed IPv6 Link-local address is assigned to each device. The address starts with fe80:: and can also be used to connect to the device. IPv6 connection is preferred over IPv4.

The three different IP assignment types are reflected in the PhoXi Control setup. The configuration can be done by clicking the **Configure** button in the lower part of the Network Discovery window. You can select between DHCP and Static IP. The device restarts after every change in network configuration.

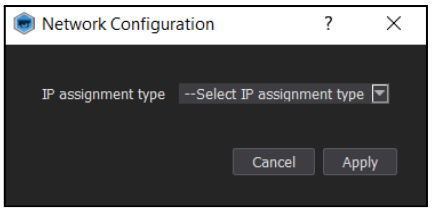

Choosing Static IP changes the window where, IP address, Gateway, Subnet mask, and DNS can be set up. Please note that setting an invalid IP address will make the device undiscoverable on the network, so make sure the IP address is valid and not outside the subnet you are on.

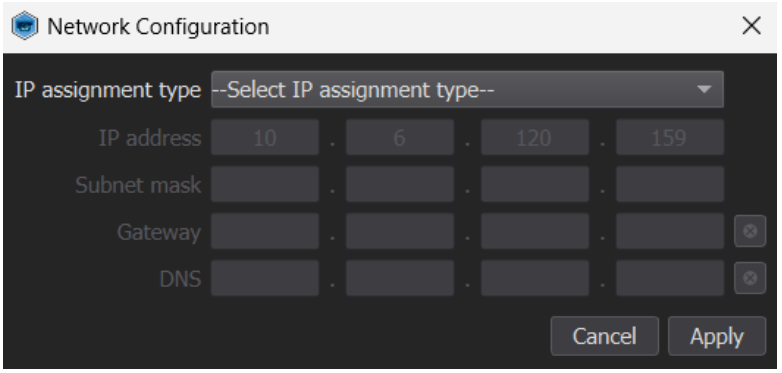

By default, the devices use DHCP for IP assignment. On networks with no DHCP, the IP will be assigned by Zeroconf.



Using Zeroconf technology for service discovery does not rely on any specific PhoXi Control configuration - the IP assignment type can be left blank or set to DHCP. After the device is connected to a network without a DHCP server, it should already be available in PhoXi Control. The only requirement for Zeroconf to work correctly is to have Avahi installed on Linux systems and Bonjour service on Windows systems.

If a device is moved from a network with a static IP address assignment to a network with a dynamic IP address assignment, before the device is disconnected, its IP assignment type should be changed to DHCP.

Checking Computer Network Configuration

Note that the IPv4 addresses used in the following pictures are just for illustrative purposes and may not work on your network.

Windows

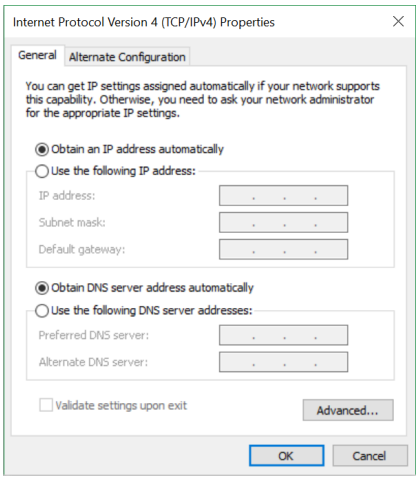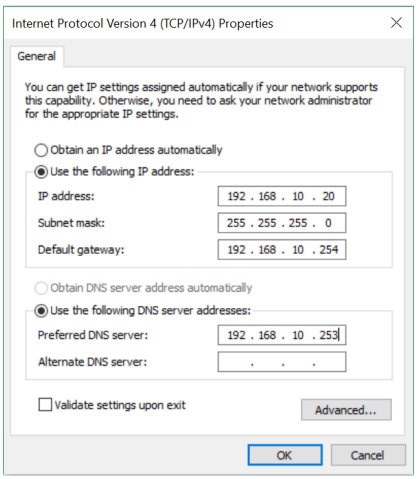
Automatic DHCP method	Static IP
	


1. Network and Internet Sharing Center → Change Adapter Options
2. Right-click on the Ethernet adapter, and select Properties.
4. For the automatic DHCP method select Obtain IP automatically.
5. For the static IP setting select Use the following IP address. Then the IP address, Subnet mask, and Default gateway should

3. Open Internet Protocol Version 4 (TCP/IPv4). be filled in.

Ubuntu

Automatic DHCP method	Static IP

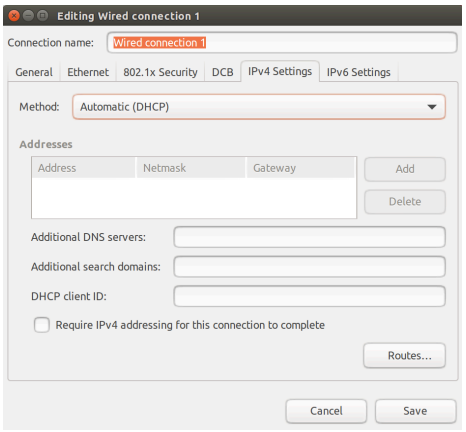

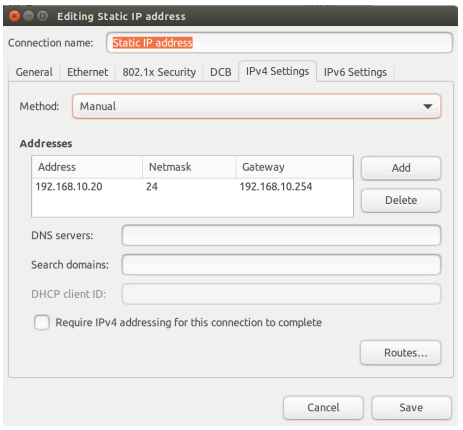

1. Network Connections → Ethernet
2. Add or edit connection
3. In the new window select the IPv4 Settings tab
4. Check which Method is selected. For DHCP or Zeroconf it should be Automatic (DHCP) or Link-local Only
5. For a static IP - the Method should be set to Manual, and the Address, Network, and Gateway should be filled in


Network Environment Variable for IPv4 Preference


If it is possible, the device always establishes a connection via IPv6. To prefer an IPv4 connection before an IPv6 connection, set the environment variable:

```
PHO_PREFER_IPV4 == ON
```


Adding device via Address

A device can be added using its IP address in the **Menu** -> **Add device via Address** which displays the following dialog. A device added in such a way will carry a different icon and user-defined name “DirectConnection-<User-defined>”



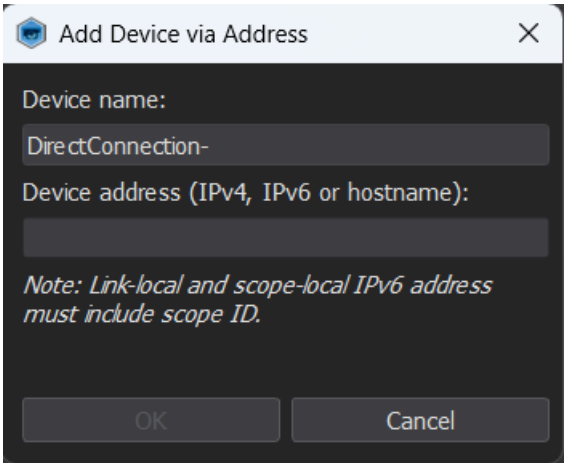

Utils

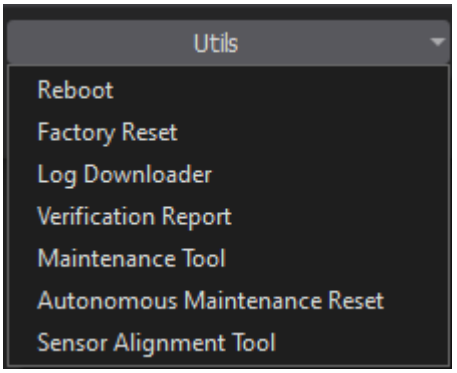

The Utils button (previously “Maintain”) is located at the very right-bottom corner of the Network Discovery tab and offers a list of functions to control the device. A device must be selected to use this option.

WARNING: Rebooting device disconnects anyone currently using the device.

Reboot

Reboot restarts the device.

Factory Reset

Factory Reset restores the device to its factory state.

Note: this will remove all user profiles and applied calibration patches.

Log Downloader

The Log downloader allows the user to download logs from the device directly from the PhoXi Control GUI.

Verification Report

View the Verification report for the selected device. This report confirms the successful completion of the final quality check.

Maintenance Tool

Maintenance tool is a Photoneo software for validation of Photoneo 3D Sensors based on the acquisition of a marker pattern. It is used to verify device calibration and adjust it if necessary. Find out more in the Maintenance Tool section.

Autonomous Maintenance Reset

Autonomous Maintenance Reset restores the device’s calibration to its factory state **without** impacting the user profiles or other settings.

Sensor Alignment Tool

This tool is a command-line application designed for the spatial alignment of multiple Photoneo 3D Sensors. It calculates and applies the spatial transformations to align two or more scanners into a single, shared coordinate system.


For more detailed information, see Appendix 2 - Sensor Alignment Tool.

Device Window

The Device Window is the main screen used to control the device. It is divided into 3 sections:

- Main controls (red)
- Device settings pane (green)
- Visualisation pane (purple)


- Status bar (yellow)

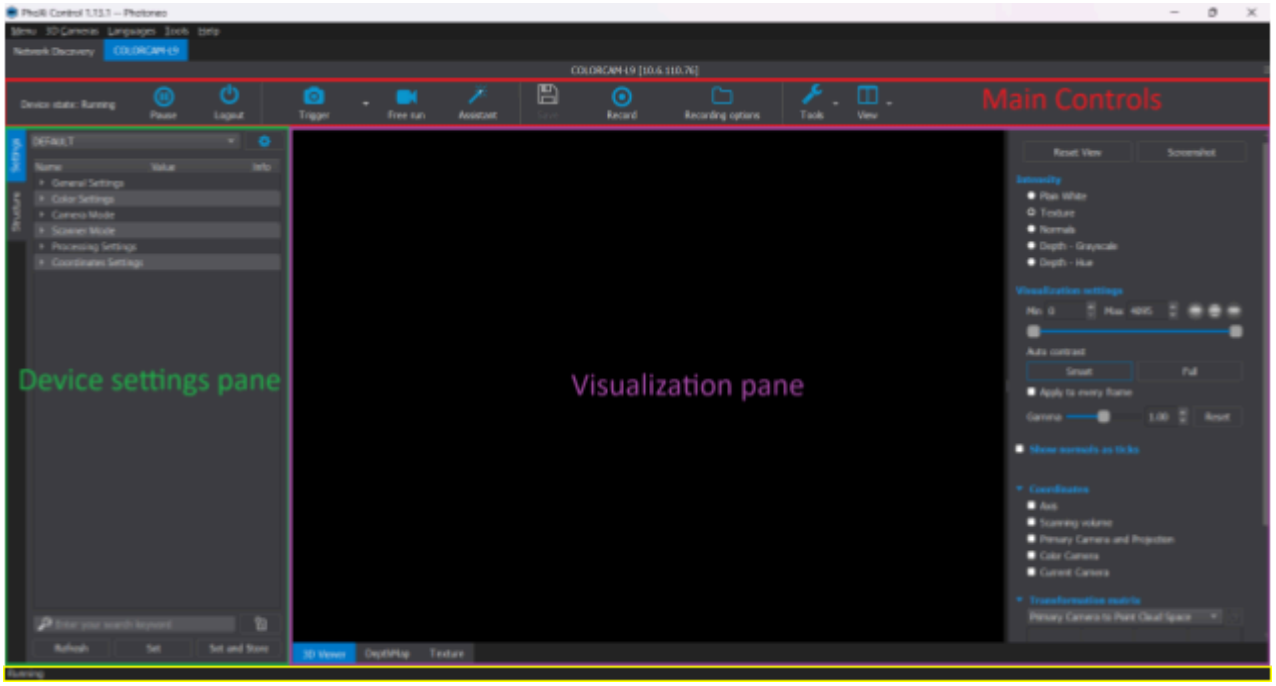

Main Controls

This pane provides the basic functions and advanced tools for triggering and saving scans and for safe disconnection from the device.

Acquisition Modes - Triggering Scan

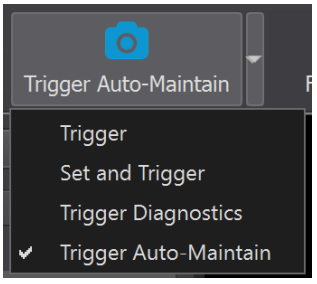

- Single scan mode (default)
  - The device waits for the trigger command to capture a 3D scan.
  - Use the **Trigger** / **Set and Trigger** / **Trigger Diagnostics** button
    - The Set and Trigger button automatically temporarily saves changes made in the Device Settings or Structure tabs and triggers a scan.
    - Trigger Diagnostics takes a special scan that contains the most information, and can take longer to compute. See Diagnostic scan chapter for more information.
    - *Trigger*, *Set and Trigger* and *Trigger Diagnostics* are 3 settings for the same button. Settings are changed through the dropdown menu accessible through the small arrow next to the button.
    - Trigger Auto-Maintain is a dedicated button for Autonomous Maintenance. This feature is available only on MotionCam-3D devices shipped after the 26th of May 2025 and on PhoXi 3D Scanner Gen3.
- Free run mode
  - The device performs consecutive scans at maximum speed (if not slowed down by the Maximum FPS setting).
  - To turn the free run mode on or off, use the button **Free run**.
  - When the device is in Free-run mode, you can pause and restart the acquisition with the **Pause / Start** button.

Photoneo 3D Sensors can also use a hardware trigger to acquire scans. In hardware trigger mode, the scan is triggered by a signal change on a specific GPIO pin. More information can be found in the section Hardware trigger.

You may prevent the device from taking a scan by using the Pause button at any time. Using this function is more intuitive in the API, where a secondary application may prevent the first application from triggering the scan.

Tip:
Once the window is open, hit F5 or the **Trigger** button to trigger a scan.

Assistant

The Settings Assistant guides you through a step-by-step process to find the ideal settings for the specific scene.

Tip: For a step-by-step visual demonstration, you can watch our video tutorial on how to use this feature here.

You can pick one or multiple dimensions:

- 1 - Exposure - Adapts to the light conditions, environment, and scanning distance
- 2 - Material & Object Type - Adapts to object material by adjusting core scanning methods
- 3 - Exposure Fine Tuning - Refines the light settings around the best option from previous step
- 4 - Enhance & Clean up - Perfects the scan by increasing the level of detail and decreasing noise

Once you select each of these dimensions, the Settings Assistant initiates an automated process to explore the best parameters within each chosen category.

For each dimension you pick, the Assistant performs the following actions:


Step	Action	Outcome
1. Automatic Capture	The Assistant automatically captures several frames, each using a different scanning profile relevant to the selected dimension (e.g., 9 different exposure settings).	A gallery of several distinct scans is generated for your review.
2. Data Reporting	It analyzes each of the frames, reporting the scanning time and the number of points in the resulting point cloud.	You receive comparable data to help you evaluate the trade-offs between speed and number of points for each profile.
3. Profile Recommendation	Based on its analysis, the Assistant highlights one of the profiles as the recommended best choice.	You get a suggestion, but the final decision remains in your hands.

4. Custom Profile Creation	Based on your final selection, a new, optimized custom profile can be created and saved.	This delivers a "plug-and-play" experience, providing you with the best possible scanning parameters in just a few minutes.


This systematic process ensures you can quickly fine-tune your scanning setup for optimal quality and performance, tailored precisely to your object and environment.Settings Assistant guide

1. Use the Assistant button to initialize the Settings Assistant tool. 


   Settings Assistant for <Device SN> will open. The following windows contains two tabs “Scan generation” and “Best scan selection” which are switched automatically throughout the process.

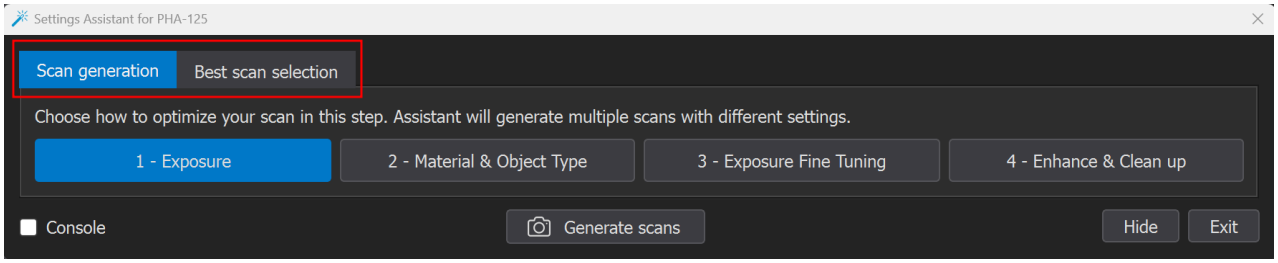


2. Choose one of 4 dimensions (1 - Exposure, 2 - Material & Object Type, 3 - Exposure Fine Tuning, 4 - Enhance & Clean up) or use the default order as represented by the numbers enumerating each of the dimensions starting with the *1 - Exposure* (recommended).

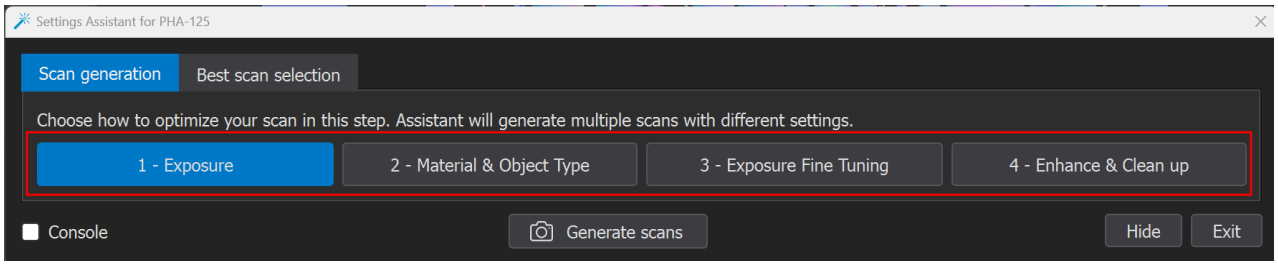


3. Hit the “Generate scans” button. The tool will automatically capture several scans with different parameters according to the chosen dimension.

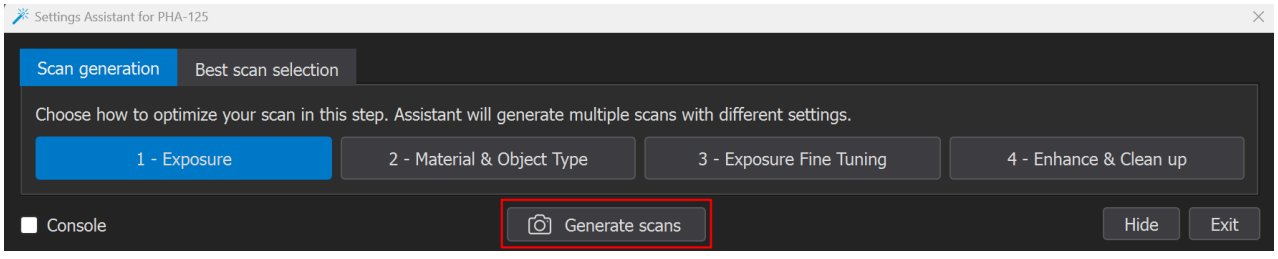


4. Afterwards, a new file camera named <Device SN>-<dimension> (in our case PHA-125-Exposure) will be connected.

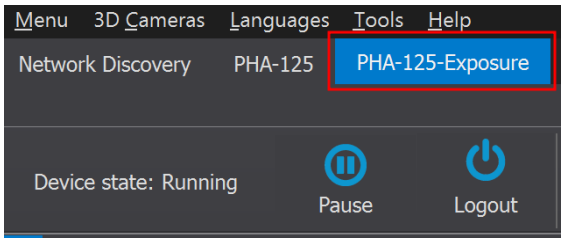

5. The Settings Assistant automatically switches to the “Best scan selection” tab, where you can compare individual scans. Each scan is represented by a button that displays its scanning time and the number of points in the point cloud (taking the selected resolution into account). Scans are sorted based on the total scanning time from shortest to longest. One scan is always designated as the reference scan, and another is marked as Suggested based on a combined rank of the scanning time and the amount of point cloud data it contains. You can cycle through the scans by using the buttons, the blue arrows, or the left/right arrow keys on your keyboard.
Tip: Hovering over each scan's button will display its Acquisition, Computation, and Transfer times, as well as any adjusted parameters.

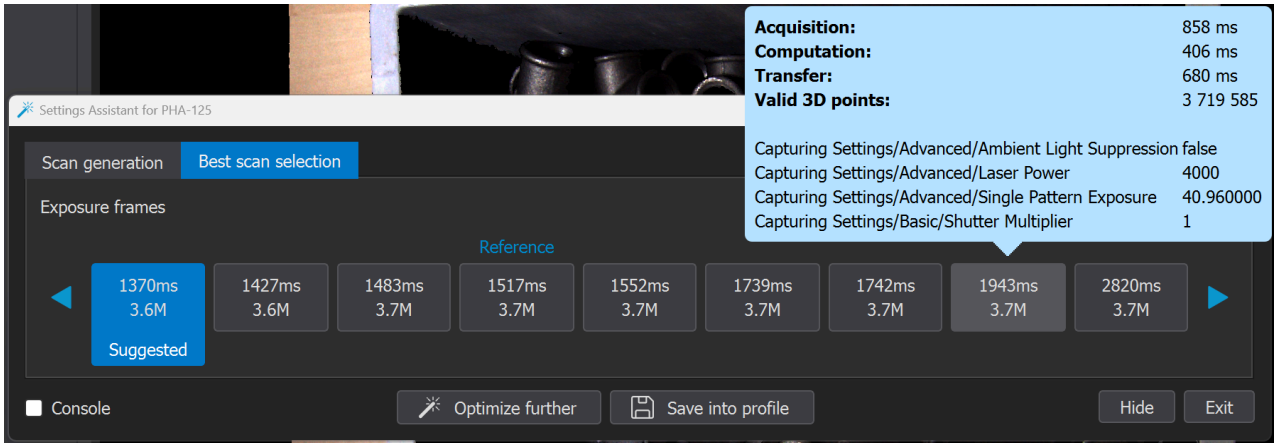


6. Select the best scan. In the image below, for example, the first scan was suggested but the user choses the 6th scan.

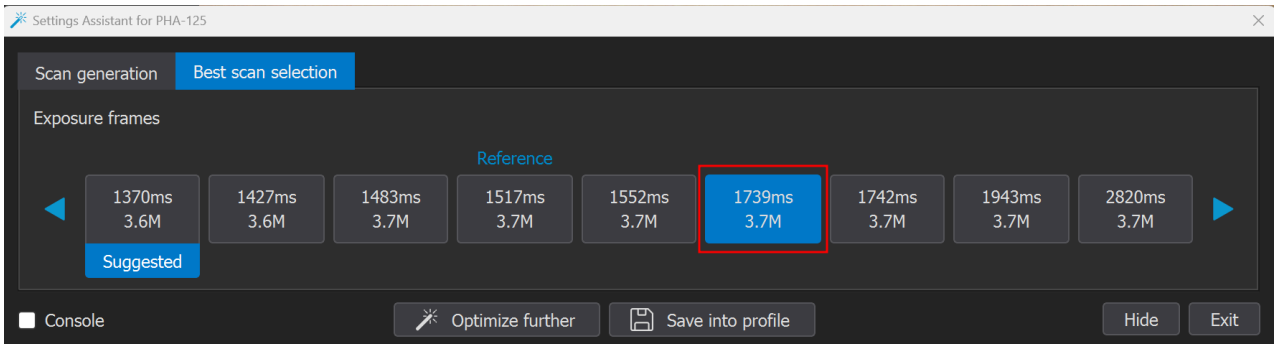


7. Provided you have the best scan selected, you can use the “Save into profile” button to save the current parameters (optional at this point). If you are satisfied with the result, you can opt to exit the Settings Assistant by selecting the “Exit” button. To continue optimizing the scanning parameters, use the “Optimize further” button which takes you back to the “Scan generation” tab.

8. Once you are back in the “Scan generation” tab, you can repeat the same process by selecting another dimension.

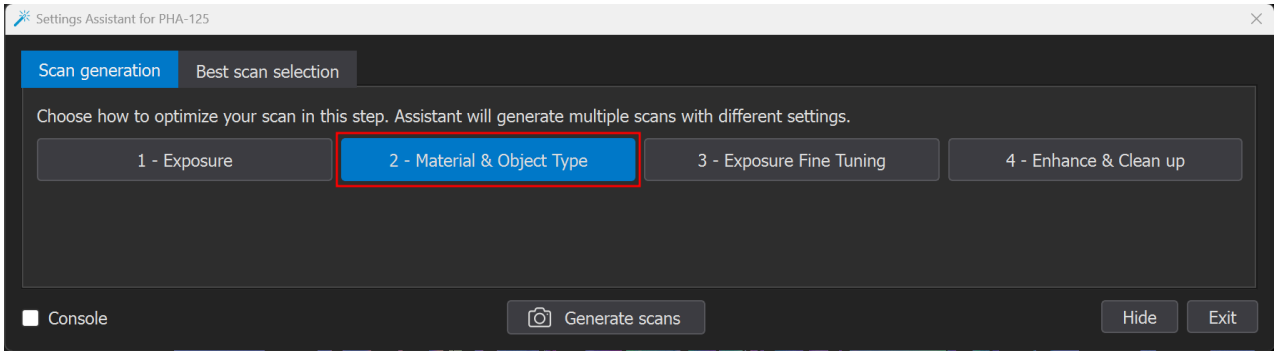

9. You can exit the Settings Assistant using the “Exit” button which closes all the related windows and file cameras. You will be prompted to either save all the generated scans or exit without saving the scans.
   Make sure you saved your profile before exiting the Settings Assistant or otherwise the parameters will be lost.

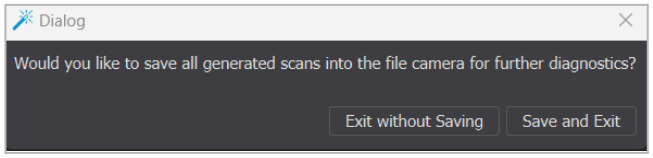

10. To view the created profiles, refer to the Scanning Profiles section.

Saving 3D Scans

PhoXi Control allows you to save scans both manually and automatically. The automatic saving mode is called recording.

The output can contain:

- **Point cloud**: an organized set of 3D points.
- **Normals**: for each captured 3D point, the normal vector expresses the orientation of the captured surface.
- **Depth map**: the depth data for each pixel.
- **Texture**: grayscale intensity or RGB values for each 3D point.
- **ColorCameraImage**: 2D RGB texture captured by the color camera unit in MotionCam-3D Color and PhoXi 3D Scanner Gen3
- **Confidence data**: the data expressing the estimated noise of the acquired point.
- **Split RGB Channels**: control over production of channel files for Texture and ColorCameraImage.
- Information about the device, such as the ID number or calibration data of the image sensor
- Information about the 3D scan, e.g. duration, scanning parameters, coordinate system

All these data can be stored only in the native Photoneo RAW formats (*.praw or *.pmraw). They can be opened later in PhoXi Control as a File Camera and converted to any other supported file format.

Other scan formats (PLY, PTX, TIF) are capable of storing only partial information, usually only point cloud, normals, and texture. The saving options dialog enables the user to choose from output structures saved in each file format.

List of Supported Formats


- Photoneo RAW data format (*.praw)
- MotionCam-3D RAW data format (*.pmraw)

- Stanford's PLY (*.ply)
    - Including an option to save PLY file with optional MESH
- Leica's PTX (*.ptx)
- Text file (*.txt)
- Raw images in tif (*.tif)

For each format, you can choose which data to store (point cloud, normals, texture...). For further information, see the Saving Options section below.

Saving Single Scan Manually

After triggering a scan, use the **Save** button to open the saving dialog. Choose one of the supported formats and saving directory.

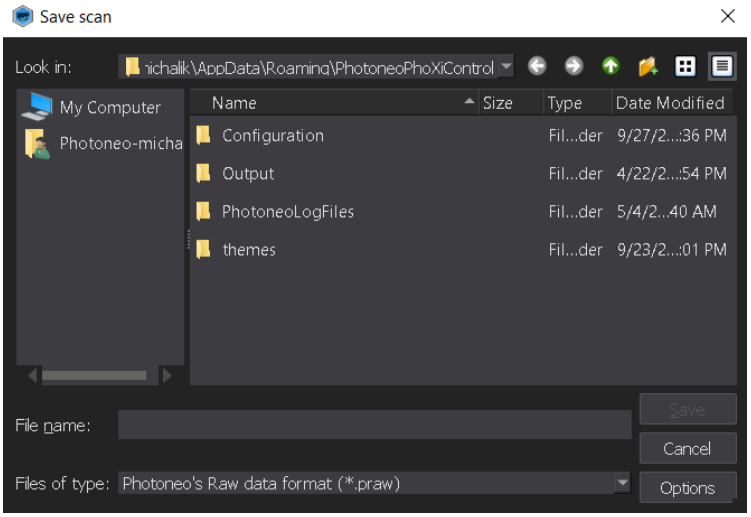


Saving Scans Automatically - Recording

Firstly, use the saving options dialog to define the destination and file formats in which the acquired scan should be stored. Using *.txt format to save data during recording is not recommended. Afterwards click the **Record** button to start or stop automatic recording.

When recording is used in free run mode, the disk writing speed may limit the number of stored frames and some frames might be skipped and not stored. This usually happens when multiple file formats are being saved at once or when compression is used to save *.praw files. If this occurs, the status bar in PhoXi Control displays the message "**Scans cannot be saved, they are generated faster than the computer can process them. Consider changing saving options.**".

Recording Options

Use the button **Recording Options** to configure how the 3D scans and corresponding data are saved.

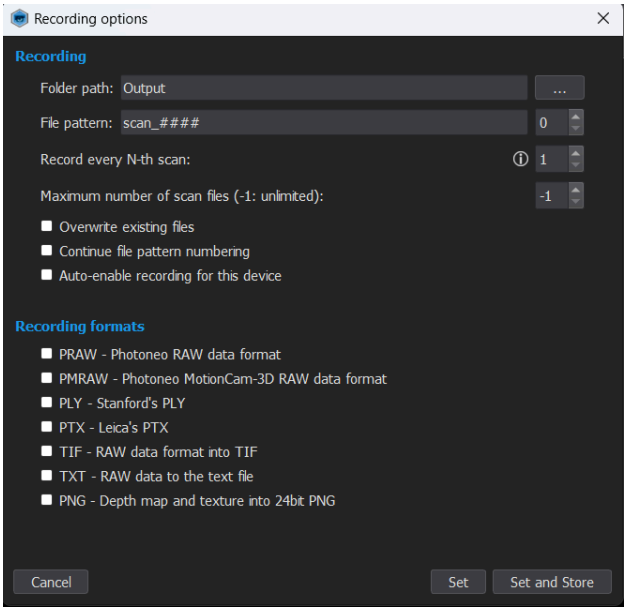

The Folder path and File pattern fields are used by automatic recording. The folder path defines the destination where the scans will be saved. The file pattern defines the name of the files, hash signs will be replaced by a counter starting at the defined value. The image on the right depicts the settings that will save the scan with the name *scan_0000*. Other possible tags in the File patterns include {file_index}, {device_id}, {frame_id}, {timestamp}, {date_time}, {frame_start_timestamp}, and {frame_start_date_time}. These tags enable dynamic insertion of session-specific variables into filenames. Users can also define the frequency of saved scans by changing the *N* parameter. Additionally, the number of scans can be limited by the *Maximum number of scans* parameter. Use the checkboxes on the left to select all the formats in which the scan should be saved during automatic recording. Use the **Options** buttons on the right to define which data should be saved when using the selected file format.

Tip: *Any scan in a *.praw / *.pmraw format can be converted into any other format by loading it into PhoXi Control and choosing a different file format in the saving dialog.*

Specifics of File Formats

- An Explanation of the Confidence map can be found in the 2D Image Tabs section
- Using a text file to save data may result in longer saving time, depending on the speed of your SSD or HDD. The same is true when the binary format is not used in the PLY format.
- TIF file is one-dimensional, therefore it creates multiple files for each stored component.

Understanding Scanner Outputs - Topology of the 3D Scan

The point cloud acquired by PhoXi 3D Scanners is topologically organized according to the image sensor. An image from the image sensor is called texture. There is one computed 3D point for each pixel in the texture. If any point from the scene is not illuminated by projection (usually because of shadows) the corresponding pixel has no 3D value (its coordinates are [0, 0, 0]) and is called a “zero 3D point”.

For example, the pixel at position [x= 2010, y =350] in the texture is the (2064*350 + 2010) = 724410-th point in the point cloud.


PhoXi Control also allows unorganized point clouds to be saved. In **unorganized point clouds**, the "zero 3D points" are omitted and not saved; therefore, the topology is lost. If you have an unorganized point cloud and would like to restore its organization, you will need to iterate over the point cloud and find a corresponding pixel in the depth map by comparing the Z value.

Understanding MotionCam-3D Output - Topology of the 3D Scan

On MotionCam-3D the relationship between the number of pixels on the image sensor and the number of points in the point cloud is not 1:1. The ratio depends on the Sampling and Output Topologies.


Diagnostic recording

This tool serves to save scans for diagnostic purposes independently from the client application. The setup allows choosing how often and where the scans are saved, and what information is contained within them. Open the Recording Options and select PRAW format. Then scroll down and you can see the possibility of recording Diagnostic Data.

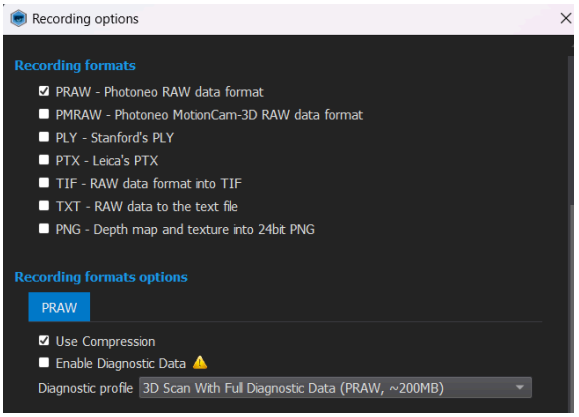

When the maximum log file size is surpassed, deletion of *.praw files will commence, beginning with the oldest *.praw file. This tool can save:


- 3D scans
- 3D scans with diagnostic data
- 3D scans with full diagnostic data (default, recommended)
- 2D outputs
- 2D outputs with diagnostic data

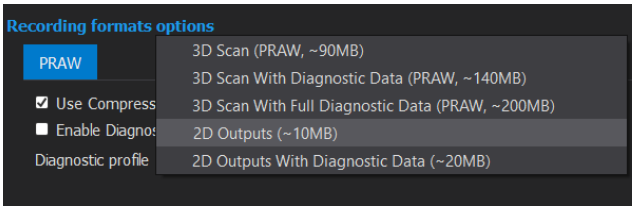

Note: Different diagnostic profiles have different performance impact, resulting in higher processing or transfer time.


Diagnostic Scan

The user can also trigger a single diagnostic scan. Click on the drop-down arrow next to Trigger and select “Trigger Diagnostic”.

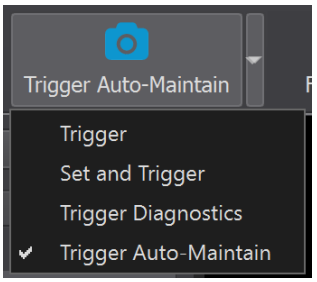

This scan saves the most amount of information. It can take longer to compute and the user is notified about the diagnostic frame by a yellow taskbar.


Note: Diagnostic scan should be saved in PRAW format.

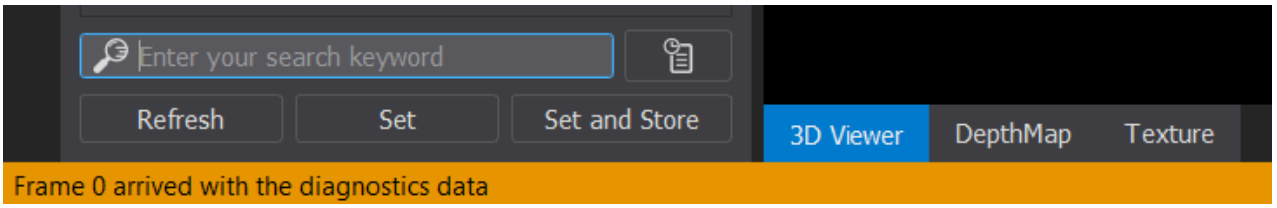

After saving the scan with the Save button, it can be sent to Photoneo Support.

Tools

Test Speed

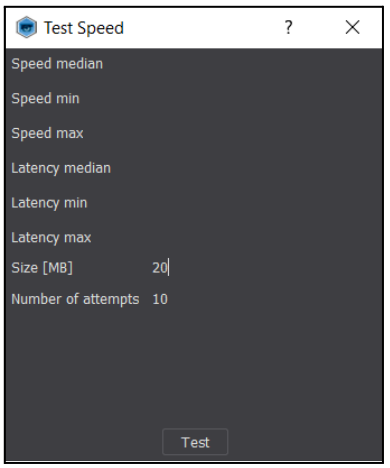

This tool can be used to measure the transfer speed between the device and the computer running PhoXi Control. Use the default settings for “Size [MB]” and “Number of attempts” in case you don’t suspect any connection issue.


If you suspect there is a slow connection speed, change the parameters “Size [MB]” and “Number of attempts” to lower values.

The result of the test is shown as Speed and Latency with their minimal, maximal, and median values. On 1 Gbps networks, the expected speed should be around **100 MB/s** with a latency below **6 ms**.

Low speeds significantly prolong the overall scanning time. Check if the network cables are of a Cat5e category or higher. Lower-category cables have a speed of around 10 MB/s.

Tip: Besides the ability to use the Test Speed, IPv4, and IPv6 address rows in the Network Discovery tab contain dynamic interface labels. The labels dynamically change color: red for non-routable addresses, orange for sub-1Gbps interface speed, and blue for normal operation (1Gbps and higher).

View

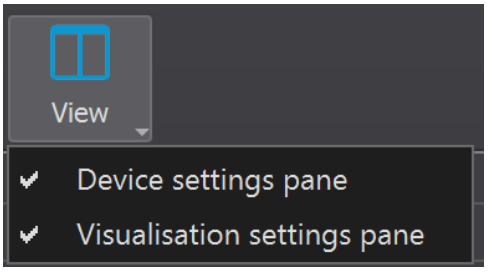


Toggle the visibility of GUI components:

- Device settings pane:
  - The pane on the left side contains device settings.
- Visualisation settings pane:
  - The pane on the right-hand side contains options to change the visualization of the point cloud.


Device Logout

Clicking the **Logout** button disconnects PhoXi Control from the currently selected device. Closing PhoXi Control without disconnecting from the device may produce a warning when the next connection is established.

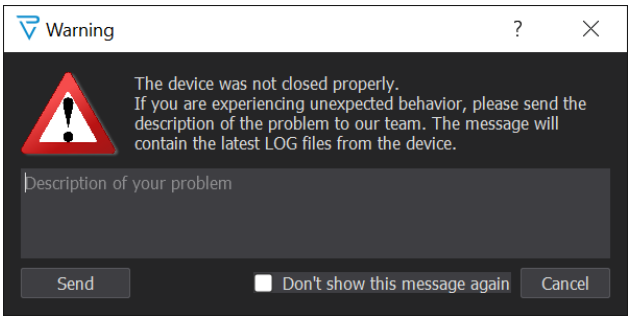

Select Frame

This setting is only available for viewing File Cameras. It opens a new window where you can select the index of the *.praw or a specific scan in a *.pmraw file that will be displayed after the next scan is triggered. The file is selected based on the order of the files in the directory (index starts with 0).

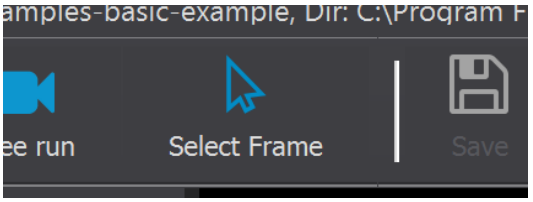

Device Settings Pane


- Contains the scanning profiles selector and scanning parameters (tab Settings).
- Allows control of the output data received from the device (tab Structure).

The set of scanning parameters and profiles depends on the firmware version of your device. This User Manual is based on FW version 1.16.5.

Scanning Profiles



Scanning profiles allow users to easily change multiple scanning parameters at once. There are several profiles pre-configured with different scanning parameters for different uses. Factory profiles are not editable, and cannot be deleted or renamed, however, it is possible to clone them and edit the cloned profile. A different set of factory profiles is available for MotionCam-3D and PhoXi 3D Scanner. It is also possible to define custom profiles.

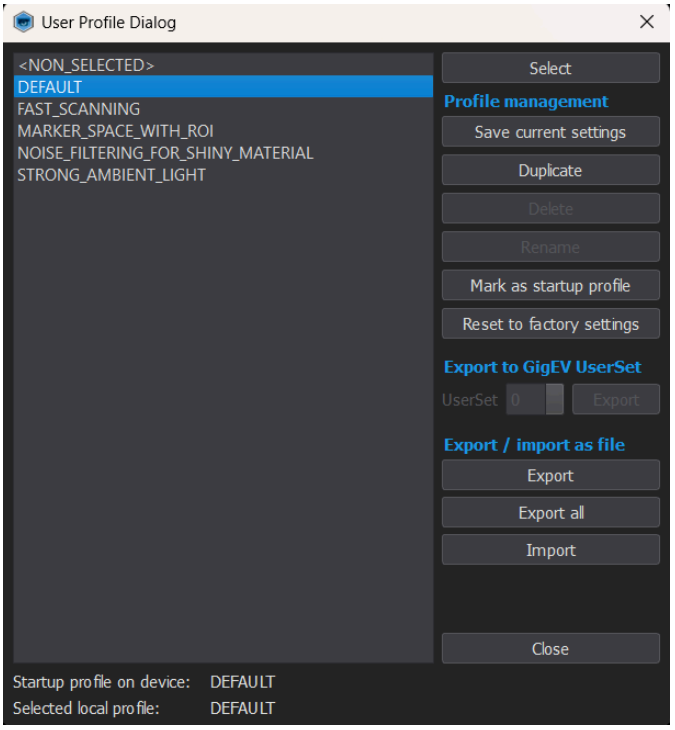

Use the cog  button to enter the advanced configuration.

- **Select** - switch to the chosen profile.
- **Save current settings** - save your current settings in a new profile.

- **Duplicate** - create a new duplicate profile from your selected profile.
- **Delete** - delete user-created profile.
- **Rename** - rename the user-created profile.
- **Mark as startup profile** - the device will be started with this user profile.
- **Reset to factory settings** - resets settings to factory default.
- **Export to GigEV UserSet** - Export a selected user profile as a GigEV UserSet
- **Export** - save a user profile into the *.phop file.
- **Export all** - saves all user profiles into a *.phop file.
- **Import** - imports a user profile from a *.phop file.

Using a Custom Profile

- Use the button  and create a new profile from the existing one, which is closest to your use case. You might want to mark it as a startup profile as well.
- Modify the desired parameters to your needs.
- Use the **Set and Store** button below to store the settings in your custom-made profile permanently.

Scanning Parameters


The set of scanning parameters available depends on the version of the firmware installed on the device. This manual is based on firmware version 1.16.5.

The scanning process consists of three phases: capturing (or acquisition), processing (computation), and transfer.

Scanning parameters are divided into several groups. These groups differ depending on the device as shown below.


PhoXi 3D Scanner

- General Settings - settings that control the operating mode of PhoXi 3D Scanner
- Capturing Settings - these options change exposure times and methods of projecting light patterns.
- *Color Settings - settings for 2D RGB camera unit.
- Processing Settings - these options affect the computation of the point cloud and allow the setting of filtering criteria such as the region of interest.
- Coordinate Settings - defines the coordinate space for the point cloud.

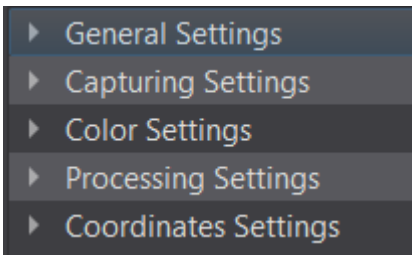

*only with the PhoXi 3D Scanner Gen3

MotionCam-3D

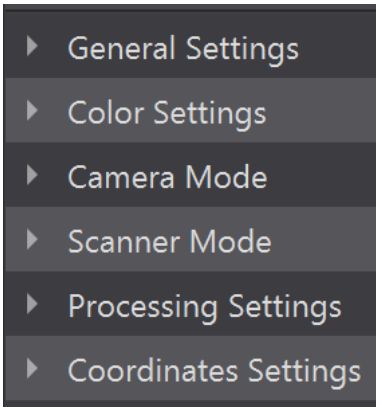

- General Settings - settings that control the operating mode of MotionCam-3D (camera or scanner mode)
- *Color Settings - settings for 2D RGB camera unit
- Camera Mode - settings for acquisition in camera mode
- Scanner Mode - settings for acquisition in scanner mode
- Processing Settings - point cloud computation and filtering (ROI)
- Coordinate Settings - define the coordinate space for the point cloud

*only with the MotionCam-3D Color

The total scanning time is the sum of the time required for acquisition (defined by capturing settings), computation (defined by processing settings) and transfer (defined by Output structure).


The use of scanning parameters is described in the Scanning Guide - Parameters at the end of this User Manual.

Controls

- **Search box** (Ctrl+F)
  - Search setting by name. Search box offers auto-suggestions based on all available settings for the connected device.
- **Set button** (Ctrl+S)
  - Sets scanning parameters for the current session only. Settings are discarded after the device is disconnected.
- **Set and store button** (Ctrl+Shift+S)
  - Stores scanning parameters permanently to the device's memory (applies to the current profile).
- **Refresh button** (Ctrl+R)
  - Retrieves current settings for the selected profile from the device's memory.

Structure

Output structure lets you choose what kind of data will be retrieved from the device. Any changes to the output structure will affect the transfer stage. The read-out time can be sped up by selecting only the data which you need for your application.

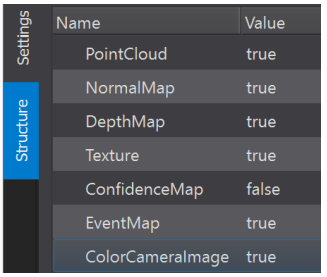



PointCloud	The point cloud is a set of measured 3D points. Each 3D point has the coordinates X, Y, and Z in the point cloud coordinate space (see Coordinate settings). The point cloud has a topology that depends on the device in use. On PhoXi 3D Scanners each point in the point cloud corresponds to the pixel on the image sensor.

	On MotionCam-3D the points are organized in superpixel topology - 2 or 4 3D points per one superpixel in irregular patterns or can be interpolated into a grid topology that resembles that of the scanner. Unmeasured points (pixels) caused by shadows are given the default coordinates [0, 0, 0]. Based on the saving options, these unmeasured points might or might not be saved. The point cloud can be examined in the 3D Viewer tab.
NormalMap	The normal vector for each 3D point can also be calculated. The normal vector is perpendicular to the area surrounding the point (see Normal estimation radius). Normals can be inspected in the 3D Viewer tab after selecting the display parameter in the right pane.
DepthMap	The “depth” of a point is the absolute 3D distance from the image sensor to the measured point (the ray of light that hits the surface of the object). The DepthMap is, therefore, always in the camera coordinate system and corresponds to the Z coordinate value in the point cloud. Note: Even when you change the point cloud coordinate space, the DepthMap always shows the distance (depth) in the camera coordinate system.
Texture	Texture is the 2D photo of the scene. The texture is either in grayscale (in the red spectrum - the source of the illumination is either LED diode or laser projection) or Color captured by the RGB camera unit on MotionCam-3D Color and PhoXi 3D Scanner Gen3 (source of the illumination is either ambient light or internal white LED). The texture is also used to color the 3D point cloud.
ConfidenceMap	For each measured 3D point, the “confidence” value expresses certainty about the accuracy of the point measurements. For example, a confidence value of 0.12 means that the estimated error for a point measurement is 0.12 mm. This value is based on a heuristic method that considers the light conditions for each pixel.
EventMap	EventMap is a 2D output available only on MotionCam-3D. For each measured point, it shows the time when it was captured. The time is in milliseconds and is measured from the beginning of exposure - each point can have a value from 0 up to the total duration of exposure - i.e. 10 ms.
ColorCameraImage	This output is only accessible on the MotionCam-3D Color and PhoXi 3D Scanner Gen3. When set to true, it outputs an image from the RGB camera unit in the resolution specified in the Color Settings in the settings tab.

Note: Adjusting the resolution of the ColorCameraImage can affect the performance of the MotionCam-3D Color and PhoXi 3D Sensor Gen3.

Search history

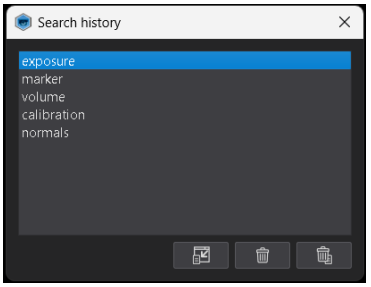

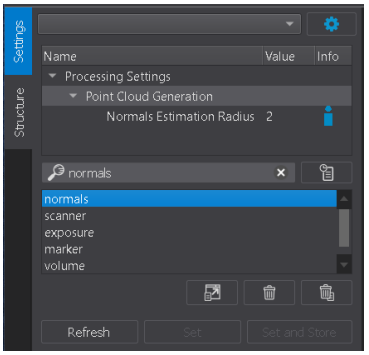


 icon situated next to the search bar at the bottom of the Device Settings Pane allows the user to open the Search history window. This window contains the recent search inputs and can be very helpful when reusing a specific parameter repeatedly. In the bottom right corner of the window, 3 buttons are available:

-  - Dock the Search history window
-  - Delete selected history (DEL key)
-  - Clear search history

Docking the Search history window will result in the search history being available under the search bar.

Visualization pane

This pane displays the output from the device in various views. After the Device window is opened, hit F5 or press the **Trigger scan** button in the main controls to trigger the scan. The output is provided as a 3D point cloud (3D Viewer tab) and a set of corresponding data as 2D images (all other tabs). The view can be switched using the tabs at the bottom. Each view has its own display settings on the right. These settings do not change the data themselves, just their visualization.

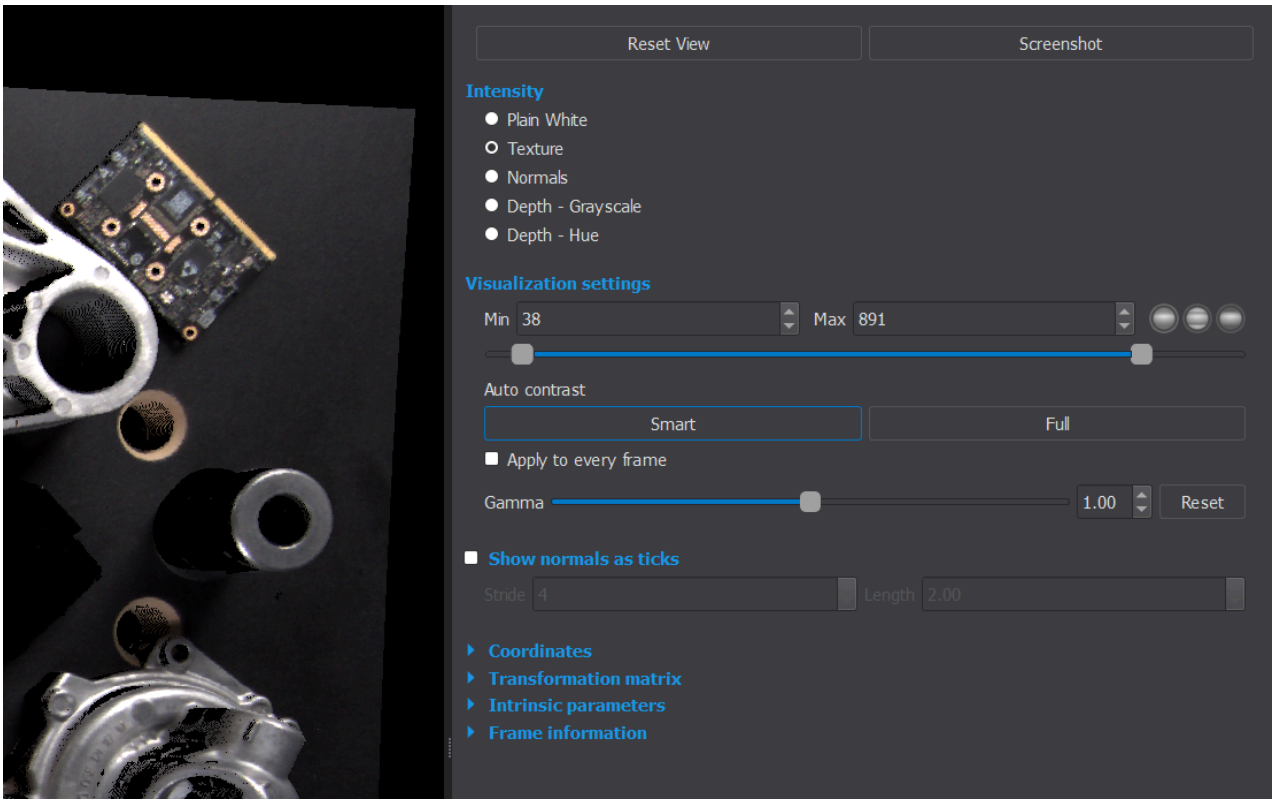


3D Viewer

Use this tab to inspect the point cloud and obtain a general overview of the scanned scene.

OpenGL support


In case that OpenGL does not have the required version necessary to visualize 3D point cloud, the following error message will appear. It provides additional information about the current setup for your computer and notifies you that the given version of OpenGL does not meet the requirements to showcase 3D point cloud.

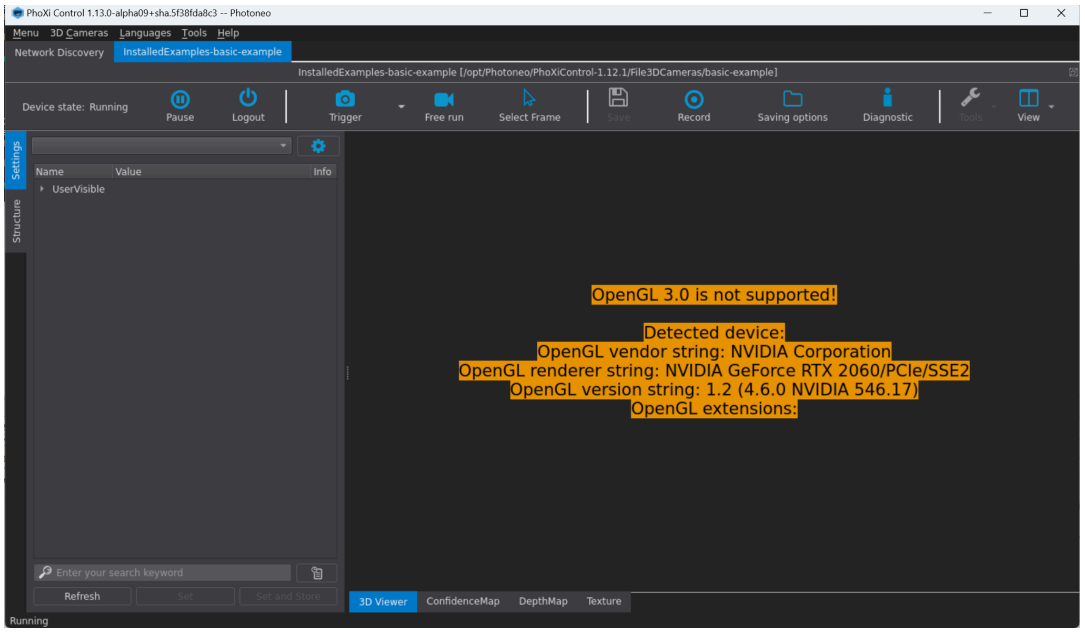

3D Viewer can be disabled. Refer to Disabling GUI or 3D Viewer.

Changing the Visualisation

Reset view	Resets the camera to the default position.
Screenshot	Allows the user to save a *.png screenshot of the 3D Viewer window.
Intensity	Select the data source for coloring the point cloud: ■ Plain White - all points are white, no shader is applied ■ Texture - points have color from the photo (Texture) of the scene ■ Normals - the color is based on point orientation (direction of the normal vector) ■ Depth - Grayscale - the color of the point is based on its distance from the device. The furthest points are white, the closest points are black. If the coordinate space is set to *Marker space* and objects are below the marker pattern, negative depth may occur.

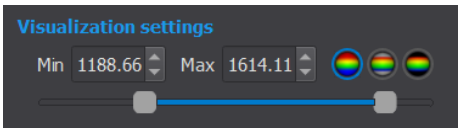	■ Depth - Hue - the color of the point is based on its distance from the device. The farthest points are red, green, and the nearest points are blue. If the coordinate space is set to *Marker space* and objects are below the marker pattern, negative depth may occur.
Visualization settings	Adjusting the brightness and contrast of the scene. ■ Contrast - Manually set **Min** and **Max** values or use **Smart** or **Full** presets to adjust the contrast of the scene. This setting can be used only for the current frame or all frames by checking the box **Apply to every frame.** Additionally, when using the *Depth - Hue* intensity visualization, a trio of icons can be used for flexible range display options, enabling clamping, graying out, or hiding values beyond the selected range.  ■ The brightness of the scene can be adjusted by applying gamma correction. This is useful for viewing dark objects. It can be adjusted using a slider or setting the value manually. Clicking on **Reset** resets the value of Gamma to 1.
Show normals as ticks	This checkbox allows the rendering of normal vectors for selected 3D points. The selection of 3D points can be adjusted using the Stride setting and the length of the vectors by the Length setting.
Coordinates	Displaying the coordinate system: ■ Axis - Renders the axis of the coordinate system.* ■ Scanning volume - Renders the scanning volume of the respective device ■ Primary Camera and Projection - Renders the position and field of view of the Primary camera. ■ Color Camera - Renders the position and field of view of the Color Camera ■ Current Camera - Renders the position and field of view of the Current Camera

*If after checking the Axis you do not see anything different, try zooming out in your 3D point cloud. Because the coordinate system origin is at the camera, you may not see the arrows representing axes if your current camera position aligns.


Transformation matrix


Transformation matrix	Show the transformation matrix from “Point Cloud Space” to the currently chosen “Camera space” (or vice versa). Point Cloud Space is a general term used for the currently chosen Coordinate Space (CameraSpace, MarkerSpace, RobotSpace, CustomSpace or PrimaryCameraSpace).

	■ Primary Camera to Point Cloud Space. ■ Current Camera to Point Cloud Space. See the Coordinate settings section to understand the essential terms (ColorCamera, PrimaryCamera, CameraSpace, Marker space).

Intrinsic Parameters

The Intrinsic parameters section within the Visualization pane displays the effective Camera Matrix and Distortion Coefficients based on the currently selected CameraSpace. This feature allows users to easily view and copy these critical calibration values directly from the GUI interface.

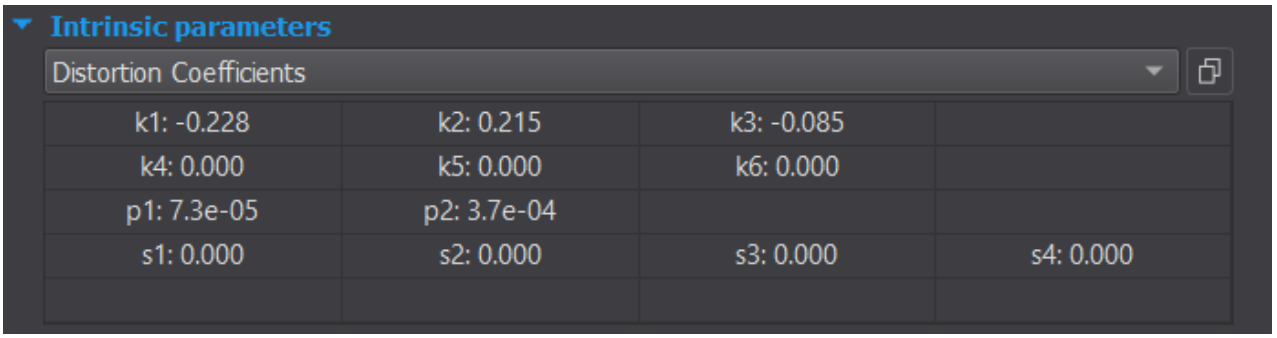

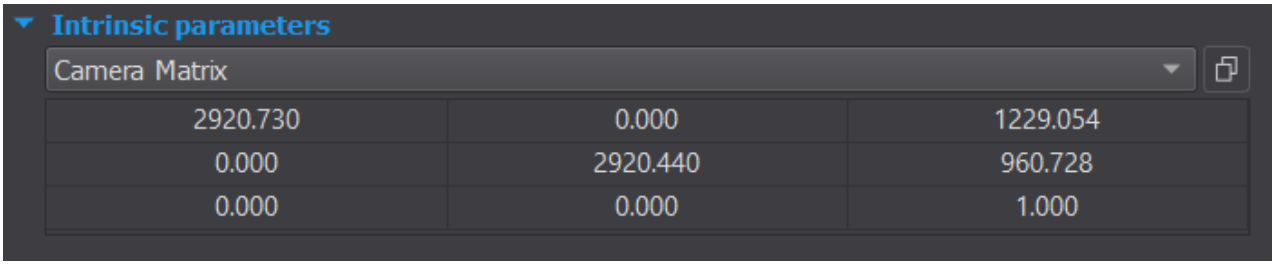

Frame Information

Frame information section	Shows information about the current frame, such as ■ Index - serial number of scanned frames in a current session. ■ Total scans - number of scans made by the device or number of .praw / *.pmraw files in the file camera. ■ Valid 3D points count - number of the valid 3D points. ■ Acquisition - duration of the acquisition phase (projection of patterns). ■ Computation - duration of the computation on the device. ■ Transfer - duration of the data transfer from the device to the computer. ■ Host latency - duration of frame post-processing, starting after data are completely received and ends when frame is

	provided for the API client (GUI related processing and API client side frame consumption not included) ■ Timestamp - timestamp of the scanned frame in the current session ■ Received timestamp - timestamp when the frame was received by PhoXi Control ■ Acquisition Start - Frame Acquisition Start Time, PTP clock synchronized ■ PTP state - current PTP state ■ Product name - Photoneo 3D Sensor type. ■ Product variant - a model of the device. ■ Serial number - serial number of the device. ■ Firmware - firmware version of the device. ■ Device temp - current device temperature. ■ Marker Dot Status - Marker Dot correction status ■ Diagnostic frame - information if the frame is diagnostic (true/false) ■ *File name - File name in case of a file camera

Note: The displayed frame information also depends on the FW version of the device. Above presented frame information is present in FW 1.16.

Given information can also be edited by the user. **Right-click** on any of the information and click on the **Content editor.** This then opens a new window called Frame info editor.

In this window the user can choose which information is seen as necessary and which is redundant. The checkmark next to the information represents, whether the information is shown or hidden.
It is also possible to change the order of the information, by holding the order number and moving it elsewhere.

After hitting “Apply” the information is updated in the Visualization pane.

3D Viewer Controls

Left mouse button drag	Rotates the point cloud around the selected point of focus. By default, the selected point of focus is the camera position.
Mouse wheel or Vertical right mouse button drag or Keys: [ ]	Zooms in/out.
Mouse wheel drag or Hold SHIFT + left mouse drag	Moves the point cloud.

Hold CTRL + left mouse drag	Tilts the point cloud.
F	Sets the point of focus to the point under the mouse cursor. This is the point around which the scene is rotated.
R	Resets the view to default. Used to center the view on the point cloud.
Key: +	Increases the size of the points.
Key: -	Decreases the size of the points.


File Camera Controls

Left arrow	Previous frame
Right arrow	Next frame
Shift + left arrow	Go 10 frames back
Shift + right arrow	Go 10 frames forward
Home	Go to the first frame of the file camera
End	Go to the last frame of the file camera

2D Image Tabs


Confidence Map

This tab displays the predicted error of depth measurement for each pixel (corresponding 3D point). Darker areas on this map show parts of the scene that have been scanned with lower error rates, while brighter areas show parts of the scene where errors may have occurred, suggesting that these sections of the scene may be problematic. The Confidence Map serves as a tool for estimating inaccuracy in millimeters. It can be used to find places where the inaccuracy is high and then trim them away using the Max Inaccuracy (mm) setting.
To see the confidence map, it is necessary to turn on the Confidence Map checkbox in the output structure and then trigger a new scan. Set the Maximum value threshold in the right pane to a reasonably small number, e.g. 0.5. Then hover the mouse cursor over the image to see the value of the specific pixel (its corresponding 3D point).

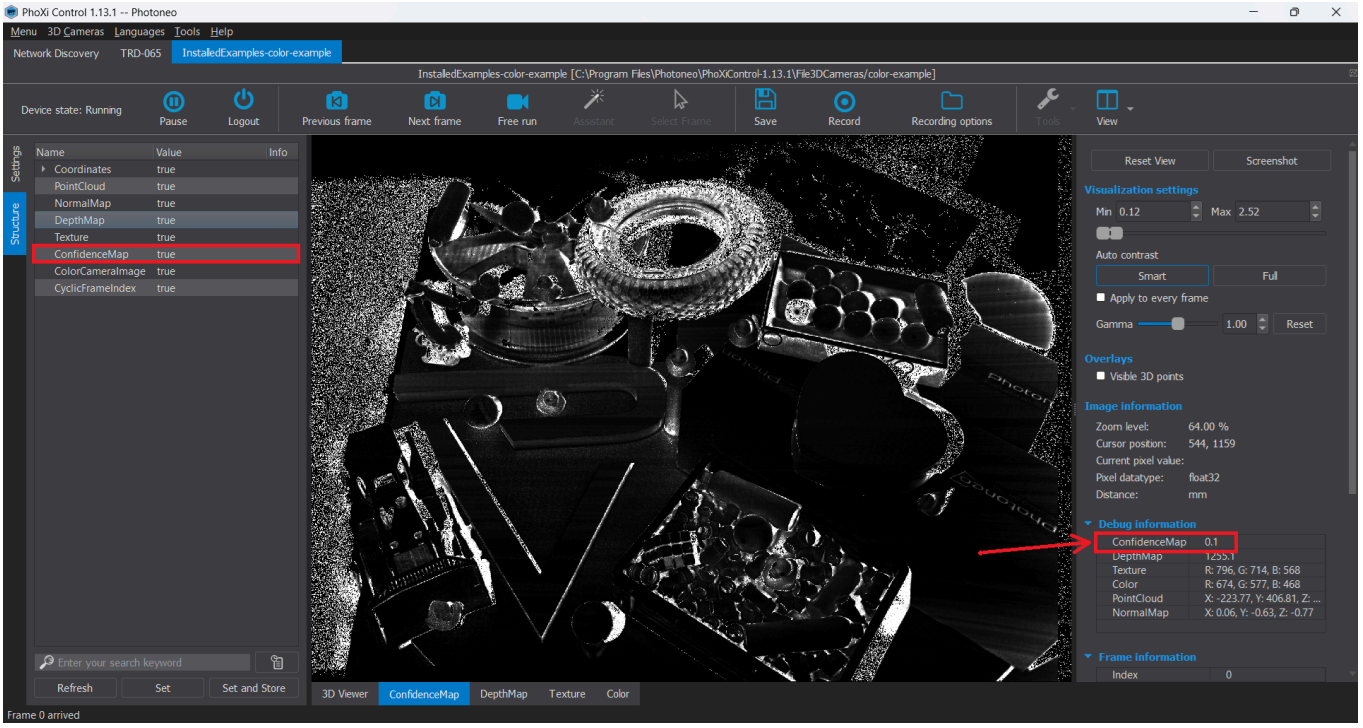


Depth Map

This view shows the scene as a gray-scaled image in which the intensity of every pixel represents the distance of the measured point from the camera. The depth value of the pixel under the cursor is shown on the right side pane as the current pixel value. The image can be made more readable by adjusting the settings on the right side of the window, as explained below. This view can also be used to measure the distance between 3D points by dragging a line between corresponding pixels with the right mouse button.

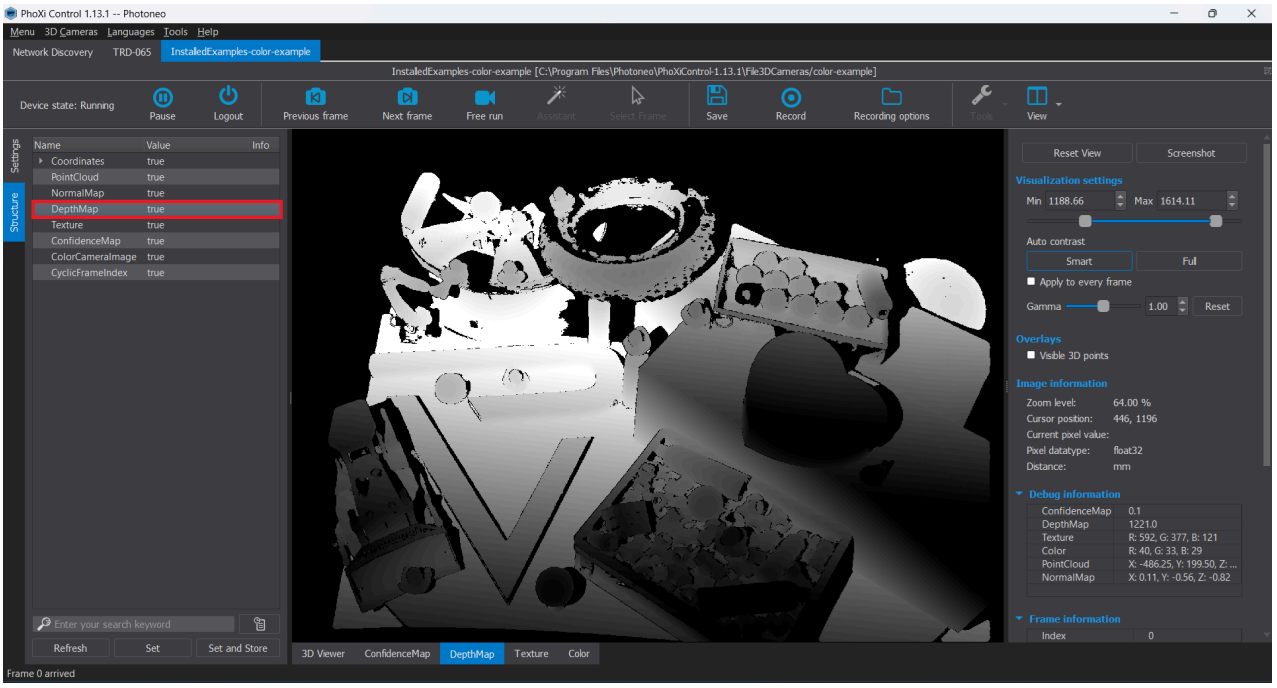

Texture


The texture is a 2D photo of the scene. Intensities from the texture are used to color the point cloud.

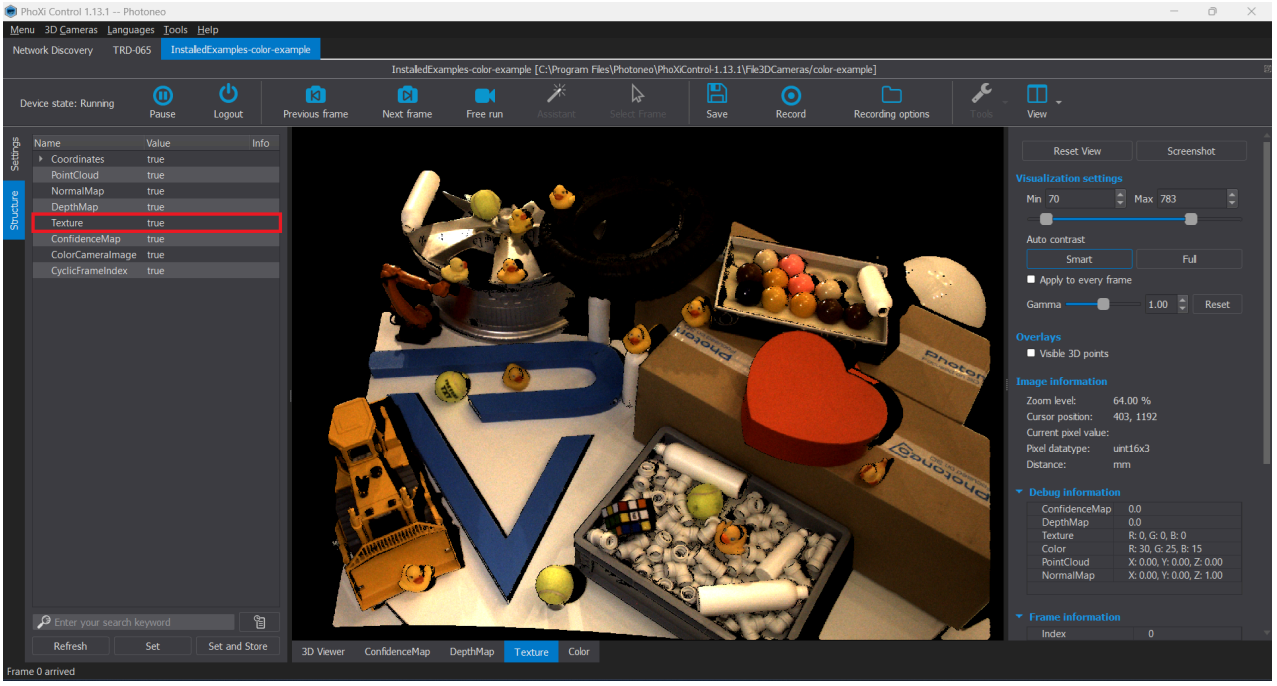

Event Map


Event Map displays time information about when each 3D point was acquired. The measurement starts and ends together with the acquisition of 3D data which is achieved by sweeping a laser line over the object and modulating pixels in the camera sensor. Each point in EventMap can only have values ranging from 0 to Exposure time (ie 0 - 10 ms).

The time information is useful for applications where movement plays a role. MotionCam-3D can scan objects moving at high speeds, however, depending on the speed and direction of the movement, the resulting point cloud can be distorted. Combining the information from the EventMap with information about the speed and direction of the object is necessary to reconstruct the point cloud.

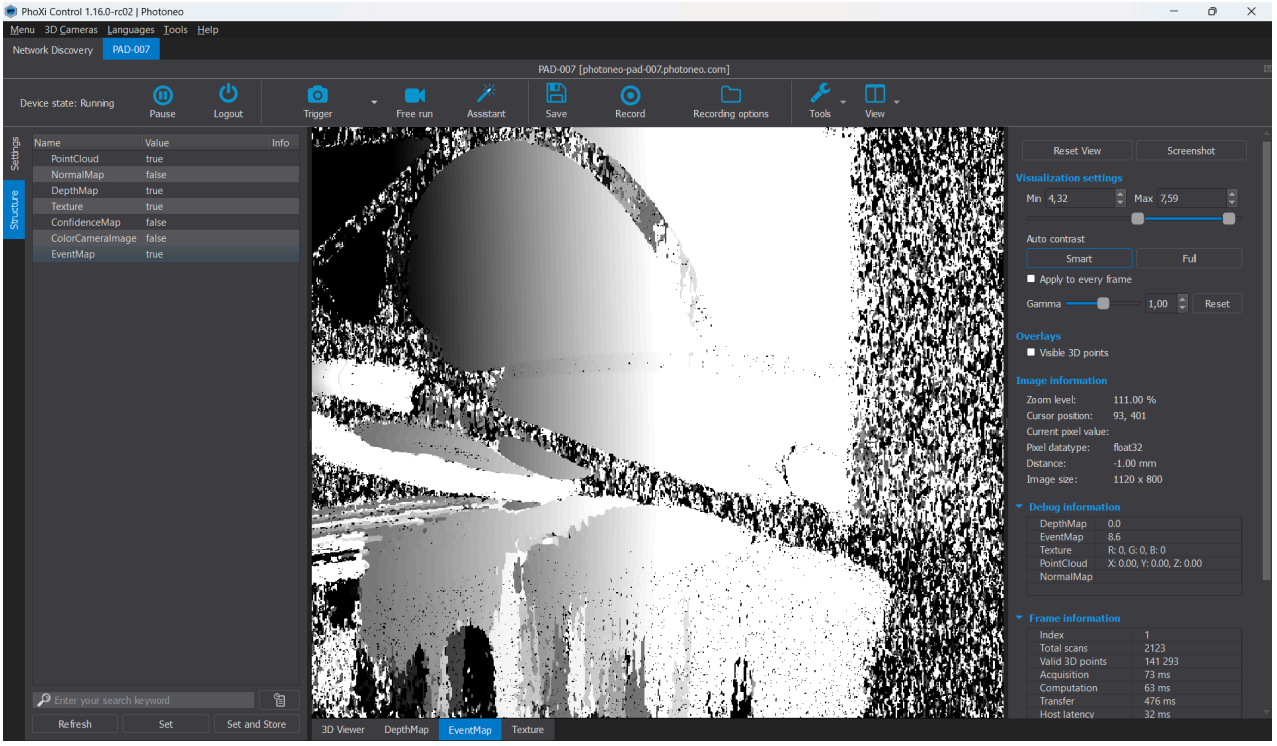


ColorCameraImage

After setting ColorCameraImage to true, a *Color* 2D image tab will appear at the bottom of the Visualisation pane. It is the native RGB image from the RGB camera unit in the MotionCam-3D Color and PhoXi 3D Scanner Gen3. Its resolution can be altered in Color Settings.

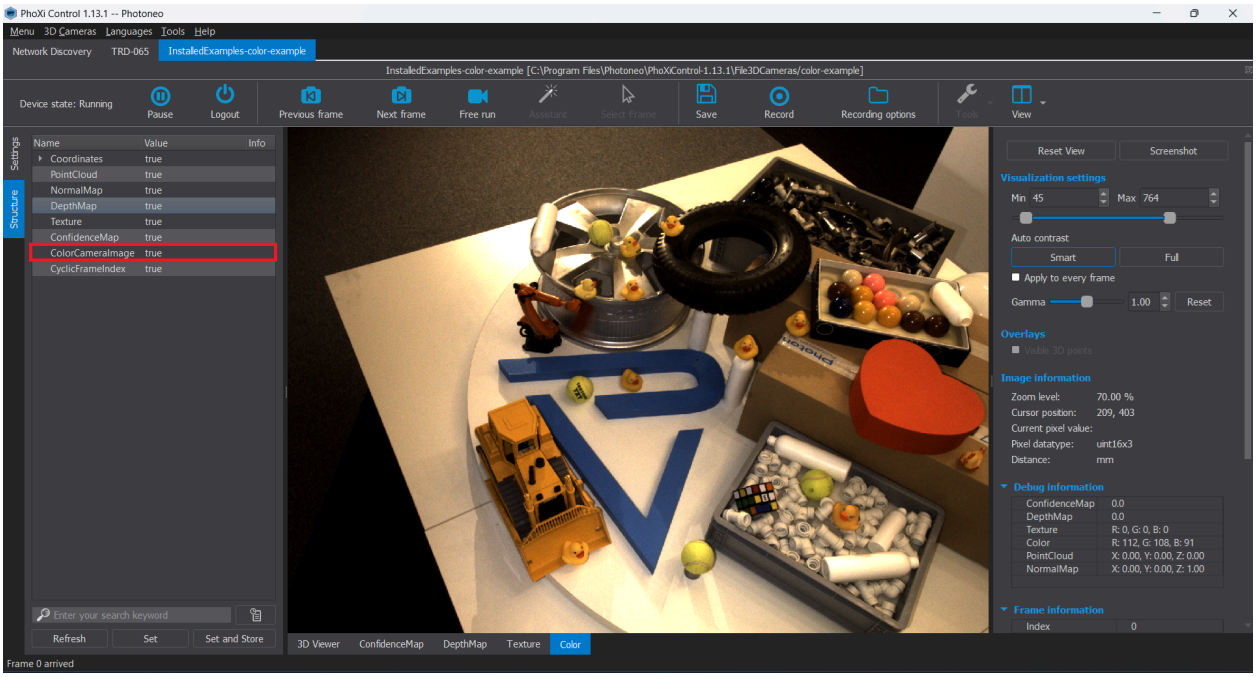

2D Image Tabs Visualisation Controls

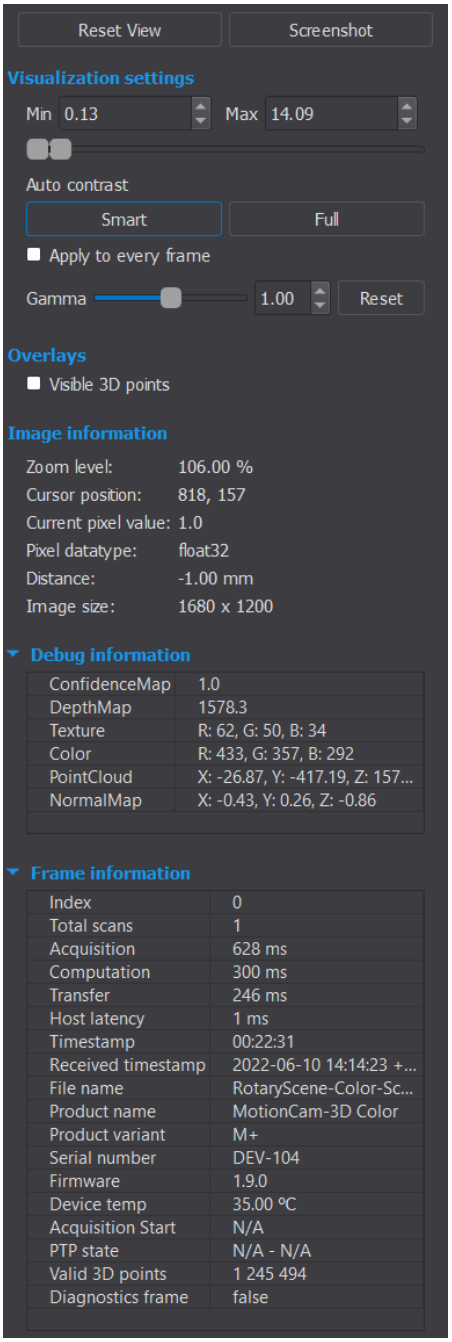

The top part of the 2D image tabs visualization controls and the Frame Information are the same as in the 3D viewer visualization controls.

Overlays

Visible 3D points	Creates an overlay of visible 3D points on the currently opened 2D image tab

Image Information

Zoom level	Current zoom level of the image.
Cursor position	Position of the pixel under the cursor.
Current pixel value	Value of the pixel under the cursor.
Pixel datatype	Represents the data type of the image.
Distance	The distance between two points. You can measure the distance between two points by dragging a line between them with the right mouse button. The computation takes into consideration the position of the points in 3D space.
Image size	Image size in pixels

Debug Information

When hovering over a specific pixel with a mouse cursor, the debug information pane displays values of all of the available output maps for the current pixel.


Controls

Button: Set default view	Resets the image position and zoom to default values.
Button: Restore default settings	Restores the default settings for Intensity settings.
Left mouse button drag	Tilts the scene.
Mouse wheel	Zooms in/out.


Right mouse button drag	Draws a line between two pixels and computes the distance between the two corresponding 3D points.

Measuring tool

The **Measuring tool** allows you to quickly measure the distance between two selected points. Using **Right mouse button drag**, you can draw a line between two pixels, and the tool will compute the distance between the corresponding 3D points. Once placed, the points can be repositioned by **clicking and dragging them with the left mouse button** to a desired location, **as long as it corresponds to a valid 3D point**.

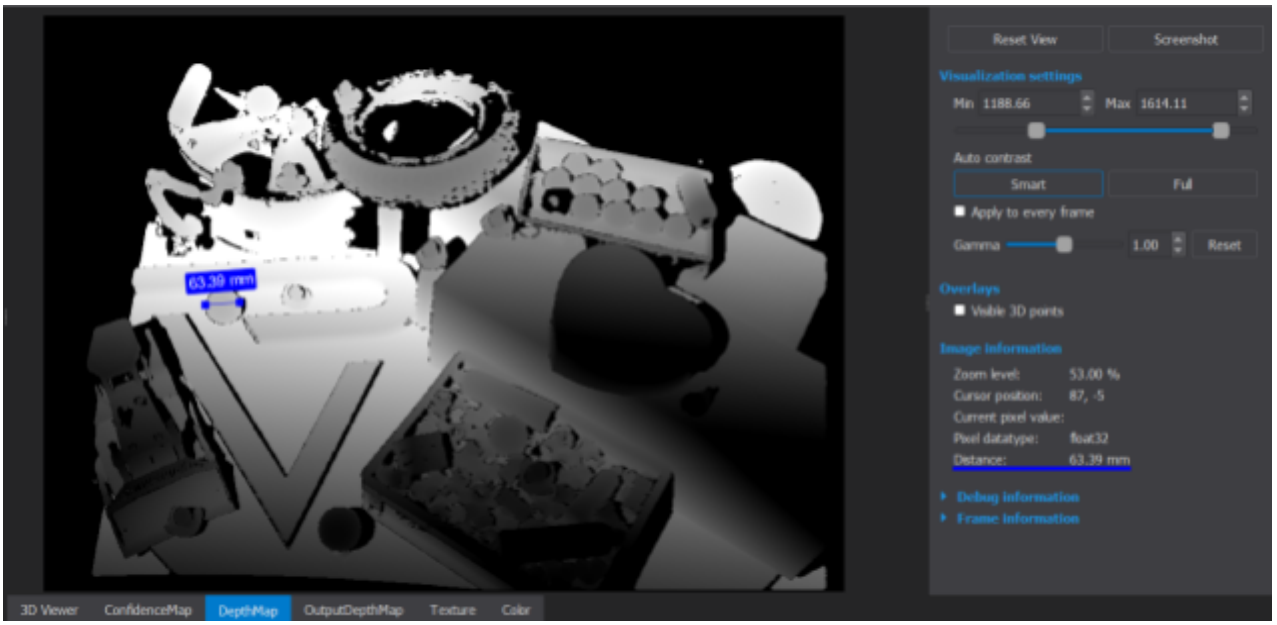


After selecting the two points for distance calculation, you can move them around in all **2D Image Tabs**, except the **3D Viewer tab**. The 3D Viewer tab allows you to visualize the placement of the points in XYZ, but adjustments must be made in one of the 2D Image Tabs.

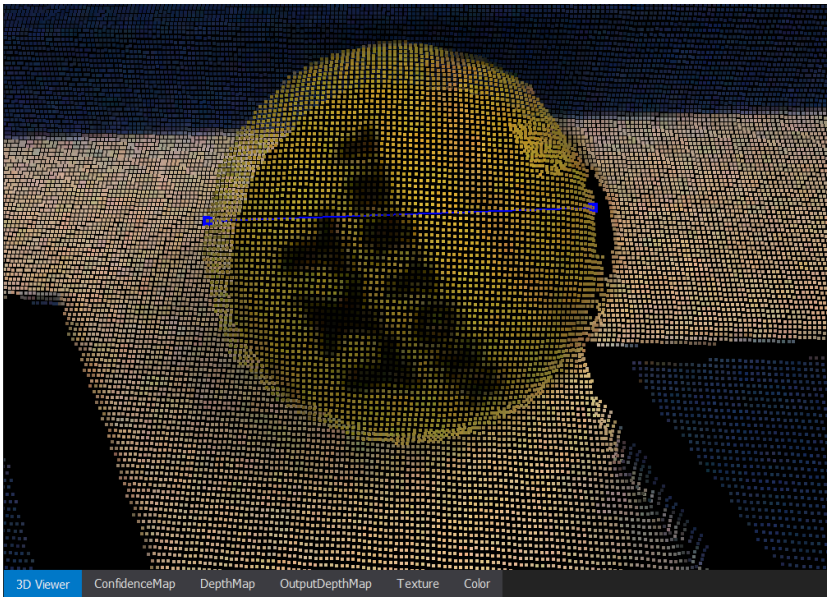


Undock Device Tabs

This feature allows the user to observe more device windows while working with multiple devices and/or file cameras by opening more undocked tabs side by side.

The Undock Device Tabs feature can be activated after clicking the Undock Device Tabs icon at the right top corner of the PhoXi Control GUI.

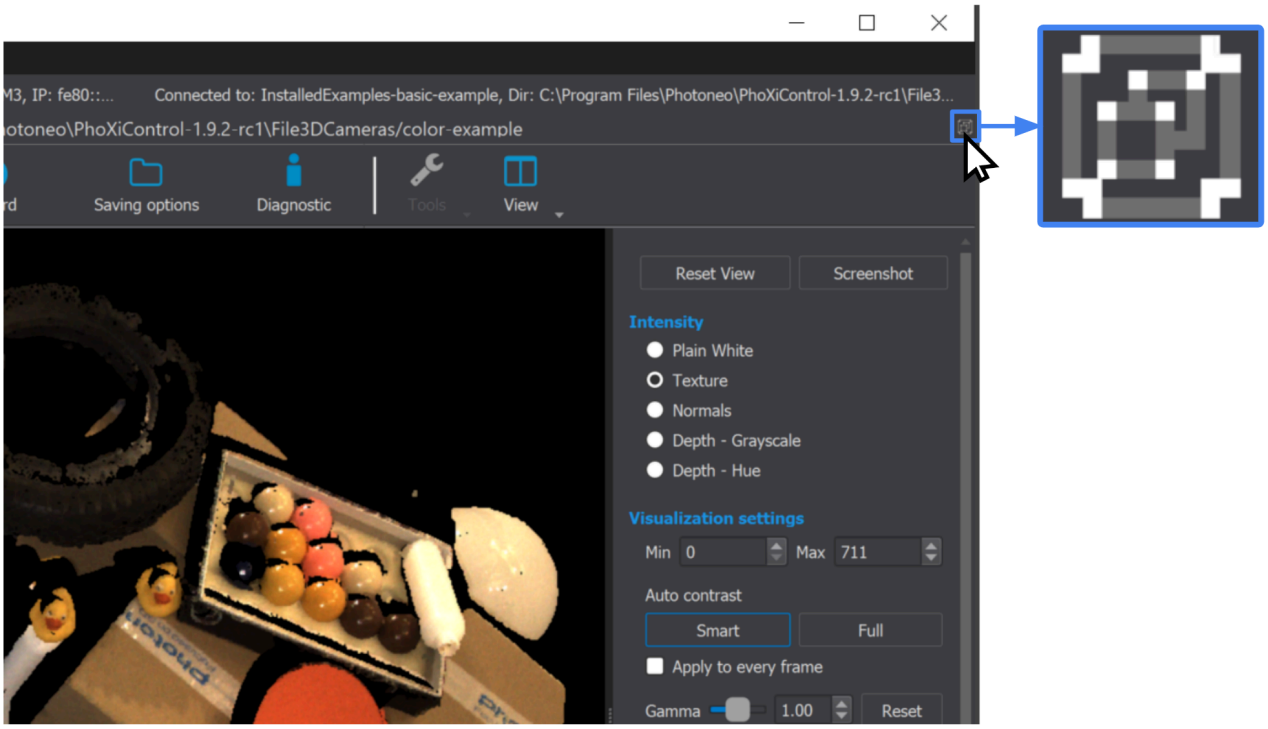


This feature allows the user to undock a device tab from the main PhoXi Control base tab and position it anywhere on the screen. In the case shown below, all 4 tabs can be moved separately and the user can adjust both the width and height of the window.

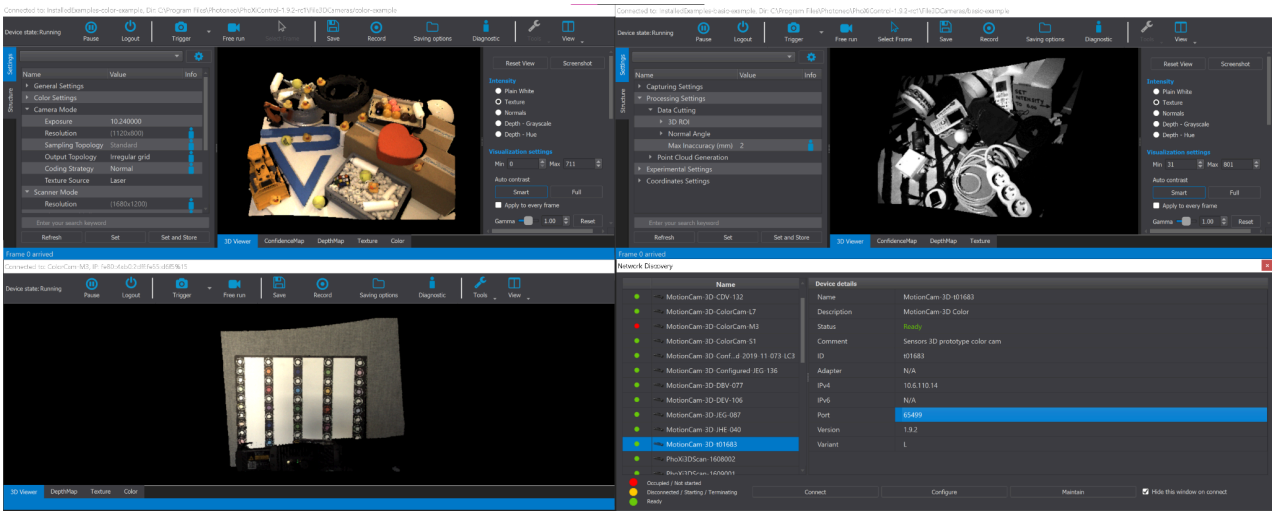

Example of 4 simultaneously observed undocked tabs.

Additionally, the user can also dock the individual tabs in the PhoXi Control base tab and use it in a split-screen view. In another case shown below, all 3 tabs are docked and the user can adjust the width of the individual windows.

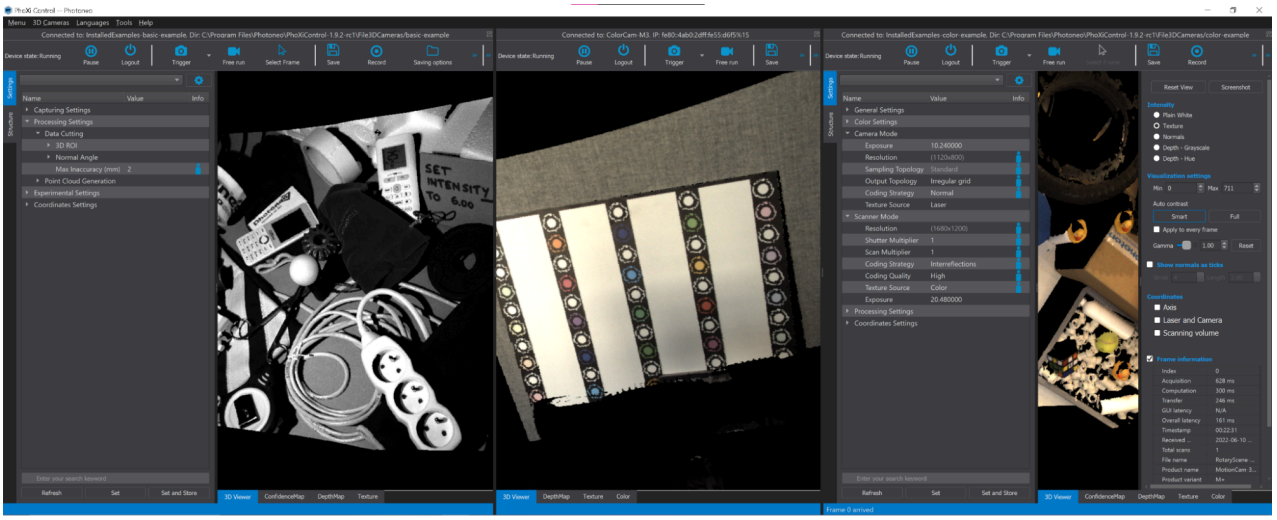


Example of 3-way split-view within PhoXi Control

Status bar

In the lower part of the Device Window, you can find the Status bar. Status bar is the communication tool of PhoXi Control, where all the info messages, warning messages and error messages will be shown.

Messages have a pre-determined structure:

- **Type of message** - info - no special color change, no need to change any settings or anything in the scene you are scanning.
  - warning - yellow status bar. This might be the warning that you have diagnostic data turned on, which may not be desirable, or that the device is paused while you are trying to trigger a scan. Therefore you may have to change settings.

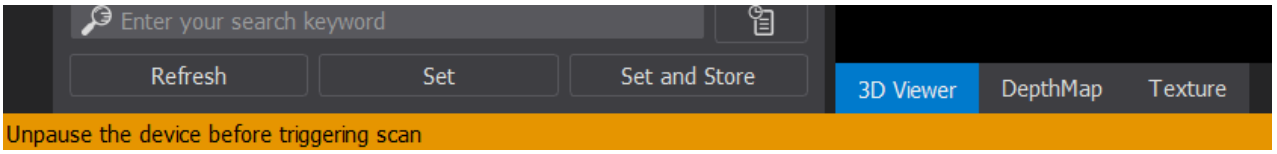

- error - red status bar. You need to change settings or something in the scene to continue scanning correctly.

- **(code of message)** - code of the message. It is written in brackets.
- **Message text** - Description of the problem.

Here are the most important or most common messages you can see on your Status bar:

Info	Scan triggered for frame [frame number]
Info	Frame [frame number] arrived
Info	Scan saved successfully
Info	Settings set successfully
Warning	Unpause the device before triggering a scan.
Warning	Unpause the device to record.
Warning	Frame [frame number] arrived with the diagnostic data
Warning	Saving - with the diagnostic data...
Warning	Scan saved successfully - with the diagnostic data
Warning	Scans cannot be saved, they are generated faster than the computer can process them. Consider changing recording options.
Error	Failed to set settings!
Error	Error while saving scan for frame: [frame number]!
Error	Image corrupted!
Error	Marker pattern was not recognized (3D-Based)!

Tools for Infield Maintenance

Photoneo 3D Sensors offer a variety of tools for infield maintenance.

- Maintenance Tool
  - Supported on MotionCam-3D, MotionCam-3D Color, PhoXi 3D Scanner, Alpha 3D Scanner devices
  - Marker pattern required
  - Command line application executable via PhoXi Control GUI and API
- Marker Dots Correction
  - Supported on MotionCam-3D, MotionCam-3D Color, PhoXi 3D Scanner, Alpha 3D Scanner devices (shipped after 05-26-2025)
  - 4 or more Marker dots required
  - GUI, API
- Autonomous Maintenance
  - Supported on MotionCam-3D Color (shipped after 05-26-2025) and PhoXi 3D Scanner Gen3
  - No markers or marker board required
  - GUI, API, GigE

Using one or combination of the tools is recommended:

- During system setup, before starting operations
- If the device experienced extensive vibration or physical shock (transport, robot collision)
- After major environmental changes, like a relocation or temperature/humidity fluctuation
- As a part of a precision-focused workflow, where you might want to run a quick check regularly (recommended once or twice a year, or during general system maintenance sessions)


Maintenance Tool

Maintenance tool is a Photoneo software for validation of Photoneo 3D Sensors based on the acquisition of a marker pattern. It is used to verify device calibration and adjust it if necessary.

Prerequisites

- Maintenance tool requires a marker pattern (A2, A3, A4, A5, S30) printed on a flat, high-quality surface (e.g. float, tempered and heat strengthened glass, PCB board, Komatex, Metal board - Aluminium/steel, etc.). The default scaling (100%) of the marker pattern is recommended. Using incorrectly scaled marker patterns may lead to inconclusive or incorrect calibration patches.
- The device should be running for at least 45 minutes before maintenance.

Using Maintenance Tool

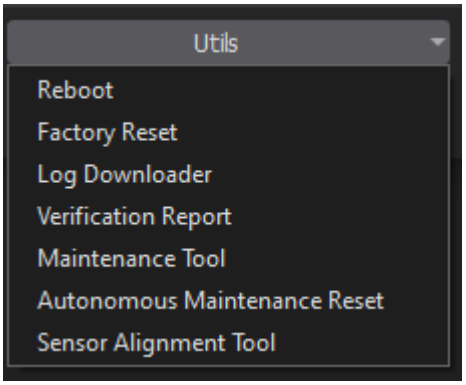

In the Network Discovery window, select the desired camera (do not connect) and click "Utils" (previously “Maintain”) in the lower right corner. Then, choose "Maintenance Tool" to automatically connect and open the Device Window and Maintenance tool console.


The “Autonomous Maintenance Reset” restores the device’s calibration to its factory state **without** impacting the user profiles or other settings.

The marker pattern should be statically placed in front of the device (for example not held in hand). Place the pattern in optimal focus distance (See Marker Pattern chapter to se which marker pattern size is recommended for your camera, as well as ideal distance for the given marker pattern). e

*Note: It is recommended to change the user profile to “DEFAULT” and use command “**adjustPower**”, to automatically set the optimal scanning parameters.*

To trigger a scan, either use the command “**trigger**”, or press “**t**”, and then ENTER key on your keyboard in the console after connecting to the camera. Do not trigger a scan in Device Window - information from that scan **will not** be sent to the Maintenance tool.

It is necessary to cover as much of Field of View (FOV) as possible. Otherwise it will not be possible to continue maintenance of the device.

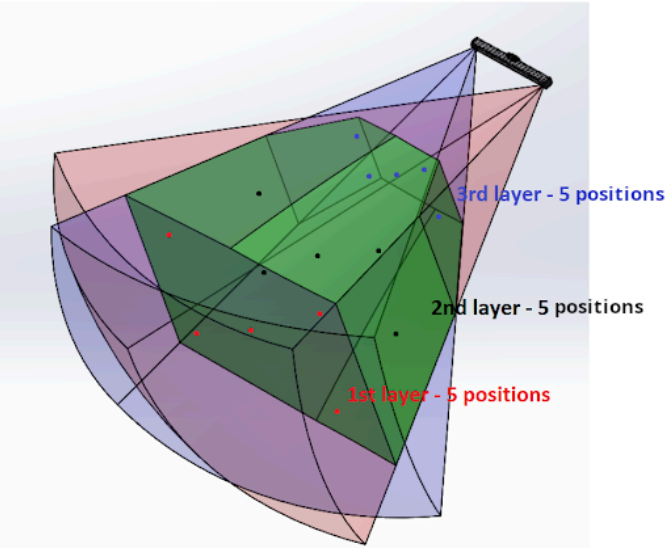

The image above shows the most optimal placement of the marker pattern for the scans. However, the exact placement or the number of layers depends on the size of the marker pattern chosen by the user, as it is necessary to cover as much of the Field of View (FOV) as possible. If the marker pattern is larger, fewer scans are necessary to cover the FOV.

Starting with PhoXi Control 1.17.0, the Maintenance Tool supports multiple identical validation targets present in the scene at the same time. You can place several copies of the same marker pattern into the scanner's field of view. The tool will automatically recognize and use all the recognized patterns. This helps to reduce the number of frames needed. Support for multiple identical patterns is enabled by default.

After the acquisition is done, enter the command "**analyze**". The analysis results in one of the following options:

A. Calibration patch is available. Please continue with uploading the patch (via command "patch")

B. Calibration patch is available. It is strongly recommended to continue with uploading the patch (via command "patch")

C. The MaintenanceTool is unable to fix the calibration, please contact the support.

D. Scans of pattern are not well distributed and do not cover scanning area homogeneously. Please, add scan(s) of the validation target to improve the scanning volume coverage.

E. Scans of the pattern do not sufficiently cover the projection range. Please, add scan(s) of the validation target to improve the projection range coverage.


If the marker pattern is too small for the size of the device, during the command "analyze" it will show a histogram of coverage.

After patching the calibration, exit the Maintenance tool using the command "**exit**". If you also wish to disconnect from the camera, use the command "**exit disconnect**".

If it is necessary, it is possible to revert any calibration of the camera back to its original factory settings using the command "**restore**".

Maintenance tool is also available to use through API.

Marker Dots

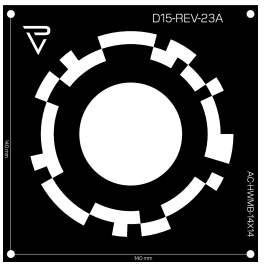


Marker Dot Correction is a Photoneo feature used to maintain a point cloud from a 3D Sensor at a "fixed position", with respect to marker dots permanently installed in the scene.

Prerequisites

- Photoneo 3D Sensor (shipped after 05-26-2025) running Firmware 1.16 or higher
- Marker dots, which are purchased from Photoneo. Marker dots come in two sizes (mm):
  - 65 x 65 for Scanners of sizes S, S+, M, M+ and L
  - 140 x 140 for Scanners of sizes L, L+, and XL
- The device should be running for at least 45 minutes before maintenance.


Marker Dot Correction Process

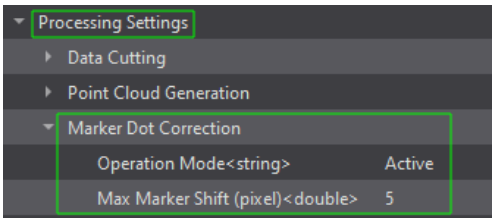

- 4 or more Marker dots need to be rigidly placed in the FoV of the Photoneo 3D Sensor according to the Correct Marker Dot Placement and Conditions for Recognition.
- Marker Dot Correction can be controlled in the **GUI** (Processing Settings → Marker Dot Correction) or using the **PhoXi API** as demonstrated in the **MarkerDotCorrectionExample.cpp**
- The **Reference Recording mode** saves the position of the marker dots. Reference Recording is stored even after disconnecting from the device or turning the device off. Only factory reset or failed attempt to record a new Reference Recording erases the reference.
- After the device contains the reference recording, automatic mode can be used which automatically recognizes the marker dots in every scan and performs an adjustment so the point cloud remains fixed at the learned position. This operation is performed by the FW of the device. (Computation time: <150ms)
  - If the Marker Dots are not visible the **last calculated correction** is applied.
- If the correction application was a success, the result is stored in the scan's *metadata*. If the correction exceeds acceptable configurable thresholds, the device will send out an alert. Use the Maintenance Tool to verify the performance of the device. **The Maintenance Tool patch invalidates the last Reference Recording.**
- For diagnostic purposes, a small log is generated and stored on the device. The logs are being overwritten and can be retrieved via the LogDownloader utility and sent to Photoneo for analysis.
- For time-sensitive applications, switching between active and passive mode is recommended (for example, switching to Active mode for one scan in every 1000 scans in Passive mode). The passive mode does not check the positions of the marker dots in the scene. It only applies the last known correction.
- The change between the initially recorded and recognized position of the marker dots is defined in millimeters and exceeding a definable threshold triggers a warning. See more in the Marker Dot Shift Threshold.

Operation Modes

Marker Dot Correction has 4 Operation modes:

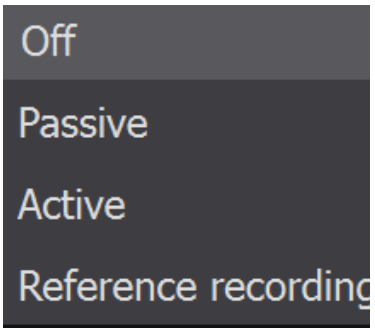


- Off - the Marker Dot Correction functionality is not used
- Passive - apply the last calculated metric and coordinate correction
- Active - capture marker dots, calculate and apply metric and coordinate correction
- Reference Recording - capture reference (this mode should be used only once, at the beginning of the correction)


Marker Dot Shift Threshold

Marker Dot Correction has Max Marker Shift <double> - maximal permitted pixel shift of the markers (with regards to Reference Recording). This prevents the correction application in case of dots being moved by accident. It is not recommended to raise this value above 25 pixels.

Correct Marker Dot Placement and Conditions for Recognition

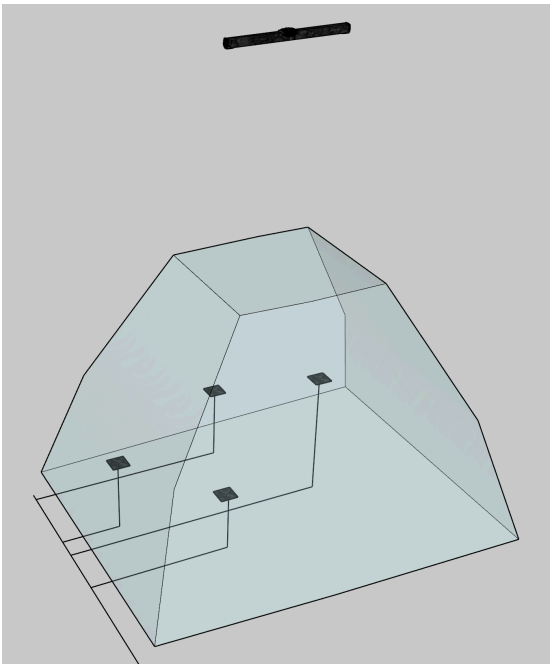

- The Marker Dots can be shown in the scene by placing them in the scene or mounting them. Each Dot has 4 mounting holes in each of the corners.
- The Minimum number of dots in the scene is **4**.
- The minimal distance between the leftmost and rightmost Dot should be at least half of the calibration volume (half of the angular range covered by the projection)
- The Marker Dots should not be clustered in one place. PhoXi Control will warn the user about the incorrect placement of the Marker Dots.
- Marker Dots help the device to calibrate its position during the process of recording scans. The marker dots **should not** be placed in a collinear position - in a single line in space (the distance from the device [depth] is not considered when checking the collinearity of the Marker Dots). **The collinearity of the dots is checked during Active mode, not during Reference Recording.**
- A new Reference Recording has to be acquired in case of a change (e.g. position of the device, dots have been repositioned)

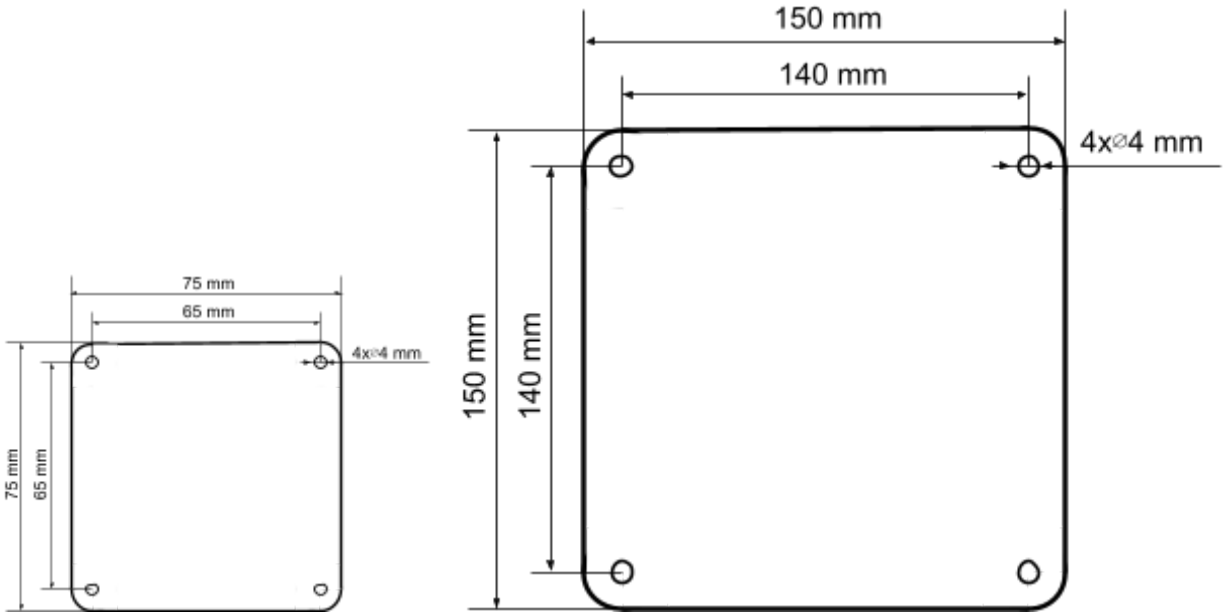


Marker Dots Correction can be used via PhoXi API using the MarkerDotCorrectionExample.cpp. (See the API Examples section).

Autonomous Maintenance

Autonomous Maintenance is a feature tailored for the MotionCam-3D Color (shipped after 26th of May 2025) and for PhoXi 3D Scanner Gen3. It maintains long-term measurement accuracy without manual intervention, external markers, or production stops. This feature leverages the hardware enhancements to monitor the calibration condition, identifying and correcting alignment issues
over time.

Requirements

- MotionCam-3D Color or PhoXi 3D Scanner Gen3 with firmware version 1.16 or higher (shipped after 26th of May 2025).
- Static scene (only during calibration checks).
- The device should be running for at least 45 minutes before maintenance.
- For firmware versions prior to 1.17, the device temperature must be within ±10 degrees Celsius of its internal calibration temperature, which is approximately 35°C. You can verify the device's temperature in the Frame Information. If this condition is not met, an error message will be displayed. As of firmware version 1.17, this temperature constraint has been removed.

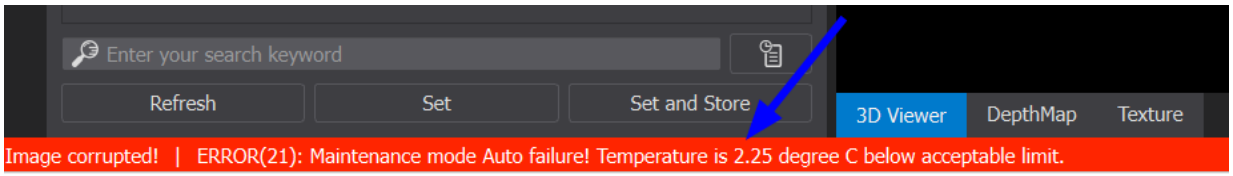


Maintenance mode can be used to check and improve consistency of the device calibration.


- Off: Maintenance is inactive.
- Auto: Autonomous maintenance mode acquires additional patterns to check calibration consistency, thus it takes longer time. If possible, it adjusts certain calibration parameters to improve the consistency of the device calibration. The procedure requires a static and well scannable scene. This mode is available only on devices with Color camera manufactured or serviced with firmware version 1.15.0 or higher and shipped after May 2025. If your device was produced earlier, it does not support this feature.

Using Auto-Maintenance via PhoXi Control GUI

Use parameters to enable the Auto-Maintenance mode.

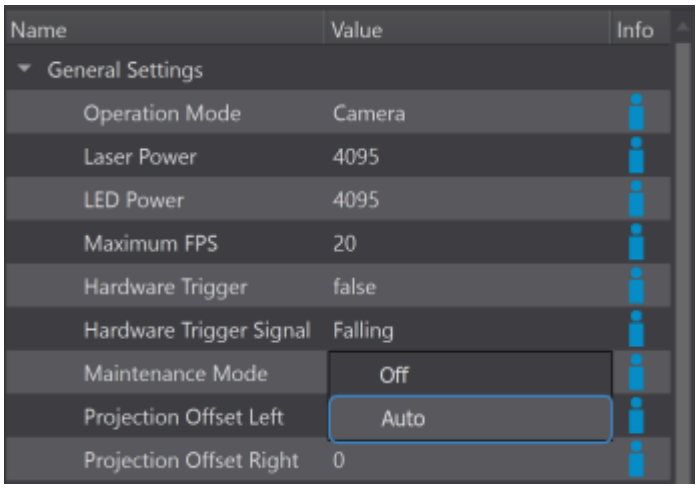

a) Use the predefined Trigger Auto-Maintain trigger option

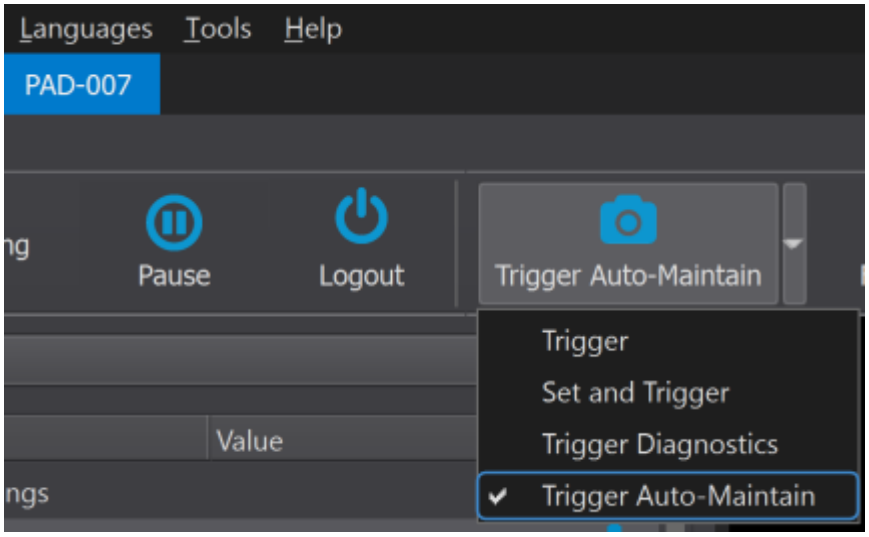

Status messages:

The status messages are displayed in the very bottom part of the PhoXi Control.

a) Autonomous Maintenance was successfully performed



b) Autonomous Maintenance failed (for example, the scene moved)



Usually, this is caused because the device or the scene has moved during the acquisition, the scene does not contain enough 3D data or the 3D parameters are set incorrectly (e.g. under/over exposure. If changing parameters or changing setting does not help, it is recommended to perform a factory reset. If the issue persists, contact our Help Center.

Autonomous Maintenance can be used also via PhoXi API as demonstrated in the AutonomousMaintenanceExample.cpp. (See the API Examples section).

API

Introduction

PhoXi API provides the building blocks necessary for developing your custom C++ or C# application for working with Photoneo devices. All API functionalities are provided directly by the PhoXi Control application, therefore, PhoXi Control has to be always running for your custom application to work with the device.

Starting with PhoXi Control version 1.17.0, we also offer the PhoXi Python API. Documentation for the Python API is maintained separately in the Photoneo Knowledge Base.

The following guide focuses on C++ and C# integrations. It shows how to use the API in several examples. You may start your development based on one of the examples and modify it to suit your specific needs. Microsoft Visual Studio 2015 and CMake are used to demonstrate how to run the API examples.

The technical documentation is located in the file `API/API_Manual.html` inside the application installation directory.

On Windows OS, the path to the API directory is usually:

```
Program Files/Photoneo/PhoXiControl-1.17.x/API
```

On Linux OS, the path to the API directory is usually:

```
/opt/Photoneo/PhoXiControl-1.17.x/API
```

Prerequisites

CMake version 3.10 or above. You can download CMake from the following link: www.cmake.org/download/

API Examples

API examples contain source codes together with build instructions (CMake) to bootstrap the development of your custom application based on the PhoXi API.

The most extensive source code is the **Full API example,** which contains all functionalities provided by the API for the PhoXi 3D Scanner. Settings that are specific for MotionCam-3D are showcased in the **MotionCamChangeSettings**. For better readability, specific functionalities are provided in the form of additional examples. All examples are located in corresponding folders in the application installation directory in `API/examples/CPP` or `API/examples/C_Sharp`.
The overview of all examples is laid out in the following table.

Example name	C++	C#	You will learn how to
ApplyCustomProjection	✓	-	■ Apply transformation from camera space to custom space of the device. ■ Reproject the depth map into this custom space. ■ Save the reprojected depth map.

AutonomousMaintenance	✓	✓	■ Check and improve consistency of the device calibration..
BrighteningTexture	✓	-	■ Find min and max values of the texture ■ Normalize texture based on min and max values
CAPI	✓	-	■ Use Photoneo PhoXi API with only C interface ■ Initialize the API ■ Call JSON commands - connect, set trigger mode, set/status acquisition, trigger frame ■ Read the frame data ■ Cleanup the API
ChangeColorSettings	✓	✓	■ Retrieve and set color camera settings. ■ Best practice to disconnect from the device.
ChangeSettings	✓	✓	■ Retrieve and set capturing, processing and coordinates settings. ■ Best practice to disconnect from the device. Note: *For MotionCam-3D - use MotionCamChangeSettings*
ChangeProfile	-	✓	■ Retrieve the currently used profile. ■ Set profile that is to be used. ■ Best practices to disconnect from the device.
ConnectAndGrab	✓	✓	■ Check if PhoXi Control is running. ■ Obtain a list of devices connected to the network. ■ Connect to a device attached to PhoXi Control if there is one or to the last device on the list if there is not. ■ Different ways to capture scans.
DaisyChain	✓	-	■ Check if appropriate devices are available. ■ Set up devices for the daisy chain. Note: *For more information about Hardware Trigger and daisy chain see the Hardware trigger section.*
EarlyTransfer	✓	-	■ Setting up the device to receive the Image as soon as possible ■ Receive all data in two frames per scan. Note: *For more information about EarlyTransfer see the Capturing parameters (MotionCam-3D, MotionCam-3D Color) or Capturing parameters (PhoXi 3D Scanner, Alpha 3D Scanner) section.*
ExternalCamera	✓	-	■ Calibrate the device to work with an external 2D camera. ■ Obtain a depth map aligned from the point of view of the external camera.

			■ Align a color texture from an external camera with the point cloud.
GetISCalibParams	✓	-	■ Obtain image sensor calibration parameters.
GetProfiles	✓	-	■ Use profiles. ■ Get the profile that is currently used. ■ Set the profile that is to be used. ■ Import and export profiles.
GetTemperatures	✓	-	■ Get temperatures of the projection unit control board and of the laser diode.
JointMarkerSpace	✓	-	■ *Prerequisites: 2 Photoneo devices, marker pattern* ■ Align point cloud of two sensors in the same coordinate space
MarkerDotCorrection	✓	-	■ Make a marker dot reference scan. ■ Apply the marker dot correction onto a test scan. ■ Monitor displacements of the recognized marker dots.
MaintenanceCommands	✓	✓	■ Find devices available on the network. ■ Use maintenance functionality of the PhoXiFactory such as reboot, shutdown, and factory reset of the device.
MinimalOpenCV	✓	-	■ Use the OpenCV library in your project. ■ Convert the scan into OpenCV format.
MinimalPcl	✓	-	■ Use PointCloud Library in your project. ■ Convert the scan into PCL format.
MotionCamChangeSettings	✓	✓	■ Retrieve and set settings for MotionCam-3D. ■ Best practice to disconnect from the device.
MovementCompensation	✓	-	■ How to compensate for the motion distortion of the point cloud if the frame was acquired by a MotionCam-3D in the Camera mode, and the velocity vector of the object is known.
PointCloudCalculation	✓	✓	■ Calculate the point cloud using a Reprojection map.
PTPTime	✓	✓	■ Get the start acquisition time from the received frame ■ Get the start acquisition time from the received frame ■ Check if time is valid ■ Print time in desired format ■ Calculate duration between two time points with usage of standard std::chrono function

ReadPointCloud	✓	-	■ Connect to a device from a list of devices connected to the network by requesting its ID. ■ Work with the acquired data and save it to a specific data structure. ■ Save scans into different file formats.
Recording	✓	✓	■ Start and stop recording ■ Check if recording is running ■ Setup recording container for recording into desired (supported) format ■ Setup and enable diagnostic recording
ReprojectionToExternalCamera	✓	-	■ Calculate external camera parameters to reproject depth map ■ Set up an on-device reprojection feature on the main device.
RotatedCalibration	✓	-	■ Obtain transformation from marker space to camera space. ■ Apply a custom transformation matrix before triggering a scan.
TwoScanners	✓	-	■ Connect to multiple devices and trigger scans.
TwoScannersMultithread	✓	✓	■ Connect to multiple devices and trigger scans using multiple threads.
WinForms	-	✓	■ Set up your C# project independent from CMake, ■ use WinForms in your project.
Full API Example	✓	✓	■ Find devices available on the network. ■ Various methods to connect to the device. ■ Obtain details about the current state of the device and its capabilities. ■ Capture the scene using free run and manual mode, and obtain all available output formats. ■ Change the scanning settings and specify desired output formats. ■ Handle and store the received data. ■ Correctly disconnect from the device.


Running the Examples

Windows OS

To run the examples on the Windows operating system you will need CMake and Microsoft Visual Studio:

- Copy the content of any of the directories, e.g. `API/examples/CPP/ConnectAndGrab_CPP` to your custom directory (This is only necessary when you want to edit the source code. Originally, the source code is located inside the Program Files directory, so you will need admin rights to change the file).
- Launch CMake:

- Choose the source and destination directory.
- Click the **Configure** button, specify **Visual Studio 14 2015 Win64** or newer as the generator for the project, and confirm with the Finish button. Supported toolsets are v120 and v140 (also compatible with v141 and v142).

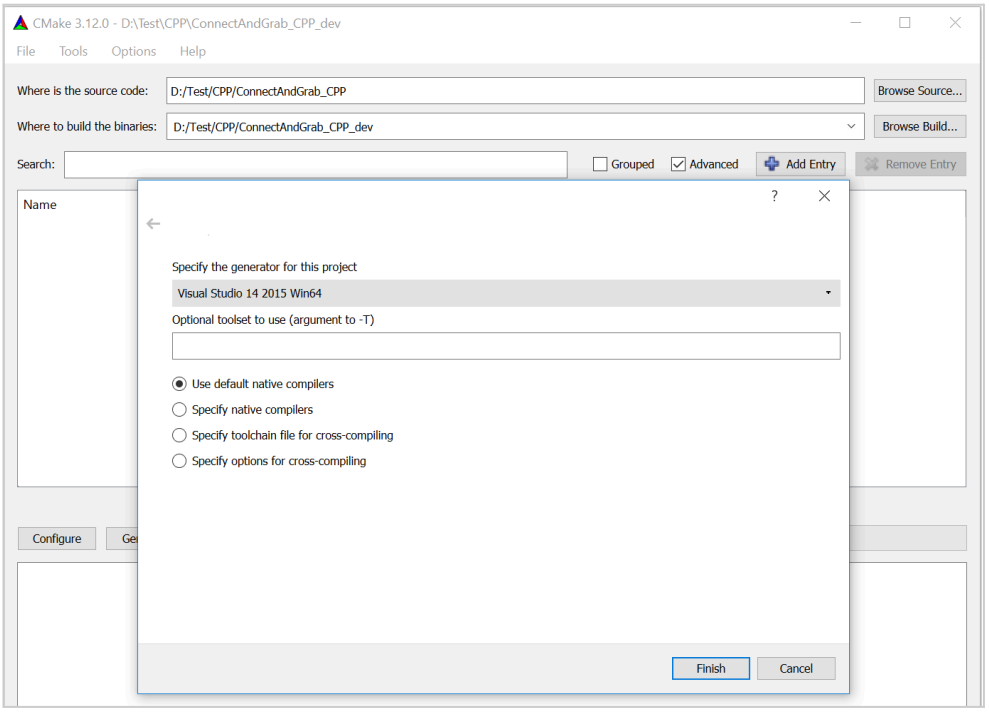

- Wait until the configuration is completed, then click the Generate button.
- In the destination directory, open the file `ConnectAndGrab.sln`.
- Set the project `ConnectAndGrab` as a StartUp Project (in the right context menu).
- Rebuild the solution in Visual Studio (Menu → Build → Rebuild Solution).
- Make sure that the PhoXi Control application is running.
- In Visual Studio, hit **F5** to run the example (Menu → Debug → Start Debugging)
- While the example is running, switch back to the PhoXi Control application - every frame captured by the camera is displayed in the Viewer pane.

Linux OS

- Copy the folder with the example to your home directory.

```
cd ~
cp -r /opt/Photoneo/PhoXiControl-1.16.x/API/examples/CPP/FullAPI/ ./FullAPI
```

- Create a new directory for the build.

```
mkdir dev
cd dev
```

- Prepare your project with CMake. The build type can also be Debug.

```
cmake ../FullAPI . -DCMAKE_BUILD_TYPE=Release
```

- Compile the program.

```
make
```

- Run the program.


```
./FullAPIExample_Release
```

API and Multiple Versions of PhoXi Control

When multiple versions of PhoXi Control are installed on one computer, the exact path to the PhoXi Control installation directory has to be specified in the find_package(PhoXi) command in the project's `CMakeList.txt` file, e.g.:

```
find_package(PhoXi REQUIRED CONFIG PATHS "C:/Program Files/PhotoneoPhoXiControl-second")
```

Starting with PhoXi Control 1.17, a warning notification appears if an application utilizing a newer version of the PhoXi API attempts to connect to a running instance of PhoXi Control. This alert is designed to prevent unexpected behavior, communication errors, or missing settings that may occur due to version mismatches between the API client and the host application.

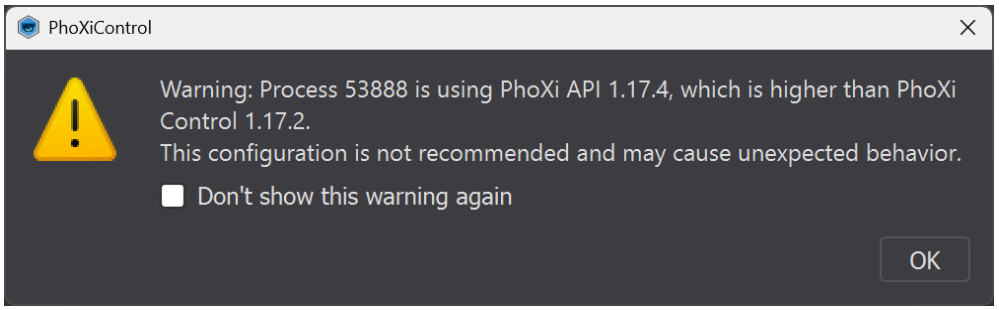

Logs

PhoXi API creates a `PhotoneoLogFiles` folder in the current project directory. To change the directory where this folder should be created please use the environment variable `PHO_LOG_FILES_DIR`.

Examples:

Absolute path:

```
PHO_LOG_FILES_DIR=C:\my_logs
```

All logs from the client application will be saved in `C:\my_logs\PhotoneoLogFiles`

Relative path:

```
PHO_LOG_FILES_DIR=my_app_logs
```

Client application that runs from folder `C:\my_app` will create logs in `C:\my_app\my_app_logs\PhotoneoLogFiles`

Scanning Guide

How to Scan

1) Arrange the scene for optimal scanning quality. See Factors Affecting the Quality of Scan.
2) Put the device into optimal scanning distance. Consult the datasheets which can be found on the Photoneo website for further details.
3) Adjust scanning parameters for optimal results. See Scanning parameters.

Factors Affecting the Quality of Scan

The quality of the scan depends on a number of different factors. The devices provide a variety of settings that help to perform an optimal scan. Before you decide to change the scanning settings, try to rearrange the scene to ensure the best conditions for scanning. Changing the position of the device with regard to the scene can also make the results of the scan better.

Distance: Closer objects have a better spatial resolution and generally have less noise.

Material albedo (reflectivity): Material with a higher albedo provides a better signal-to-noise ratio. Albedo is defined as a measure of the material's reflectivity or the degree to which the material will reflect the incoming radiation. The higher the albedo, the more radiation the material reflects from its surface. Generally, brightly colored materials have a higher albedo than darker colored ones, but color alone is not the most reliable indicator of albedo, because radiation has many components outside the visible spectrum.

Strong ambient light: Indoor ambient light generally does not influence the scan very much. However, very strong light such as direct sunlight might be a problem, especially when scanning outdoors. Try to remove all direct sunlight, e.g. by closing window blinds or by moving the installation to a different place. Additionally, Ambient Light Suppression can be used with specific Photoneo 3D Sensors.

Reflections: Non-glossy, matte materials are typically scanned with high-quality results. Even semi-glossy objects are scanned with almost optimal quality. However, glossy, shiny, smooth-sanded, or polished objects often produce specular (mirror-like) reflections - the projected light is reflected out of the sight of the camera. These reflections can significantly lower the scan quality in the corresponding parts of the scan. Additionally, this reflected light can also be reflected onto other parts of the scene. In such cases when the parts are illuminated by reflections from other parts, these secondary "interreflections" can interfere with regular reflections and produce "ghost artifacts". Metal parts with a high-gloss (or mirror-like) finish are particularly difficult to scan.

Note:

A rule of thumb - Take a flat piece of the material you wish to scan and try to look into it as you would into a mirror. If you are able to recognize the shape of your head in the reflection, the material is glossy. In scenes containing such objects, some of them may not be scanned optimally.

When scanning glossy objects, find a position where the light from the projection unit does not illuminate other objects in the scene as this causes interreflections.

Transparent objects: Transparent materials such as glass, ice, or water can be scanned using MotionCam-3D with Firmware version 1.14 or higher using the pre-defined profiles for transparent objects..Otherwise, remove such materials from the scene to avoid artifacts. It is possible to scan objects wrapped in a thin layer of plastic, however, there is a risk they will increase the glossiness of the object and generate more noise in the scan.
Scanning through a flat glass is possible as long as the glass does not cause reflection - the angle between the projection unit and the glass plate should be close to a right angle.

Translucent objects: It is possible to scan semi-translucent objects to a certain extent, however, the scattering of light inside the material may reduce the accuracy of the scan of the object's surface. Materials with a high degree of translucency (near transparent) cannot be scanned.

Assessing the Quality of the Scan

First, do a quick visual check of the scan in the PhoXi Control application. Switch to the 3D Viewer tab. Do you see all parts of the object? Use the mouse to rotate the scene or the mouse wheel to zoom in or out.

For a more advanced assessment, switch to the Confidence Map. This tab displays the estimated deviation of the measured distance. Darker map areas have been scanned with lower error rates, while brighter areas show parts of the scene in which the error rate might be higher, indicating that these sections may be problematic.

Scanning Parameters

Before using any of the devices, it is useful to become familiar with the basics of structured light projection. Please ask your sales representative for more detailed materials and webinars on this topic.

The scanning process consists of three phases:

- Capturing (or acquisition)
- Processing (computation)
- Transfer

Scanning parameters cover the first two phases: capturing and processing. The transfer is affected by the amount of selected data as defined in the Output structure. In addition, scanning parameters also contain settings for changing the coordinate system of the point cloud.

Capturing parameters (MotionCam-3D, MotionCam-3D Color)

General Settings

Operation mode	Camera Scanner 2D	MotionCam-3D can operate in 3 modes controlled by this setting. ■ **Camera mode** - intended for dynamic scenes and moving objects. ■ **Scanner mode** - intended to capture static scenes at high quality. ■ **2D** - intended to capture textures only.
Laser Power	0 - 4095	Controls the intensity of the projected light. By default, it is set to the highest possible value. Decrease the value in case of overexposure. Note: The 'Laser Power' setting, adjustable from 0 to 4095, controls the relative output of the laser. Note that the actual power output can vary between individual devices, even when set to the same 'Laser Power' value.
LED Power	0 - 4095	Enables to decrease the LED light intensity used to capture texture. Useful for cases when the texture is used for extracting additional information and is experiencing overexposure.
Maximum FPS	0 - unlimited	Useful for limiting FPS in freerun mode. If you want to allow scan every 10 seconds, set Maximum FPS to 0.1.
Hardware Trigger	true/false	Usually used when two or more devices need to be synchronized. When MotionCam-3D is in hardware trigger mode and a scan is triggered, the acquisition will start after a specified edge of the signal is detected on the trigger input pin. MotionCam-3D can also signalize to other devices that it is acquiring by keeping the trigger output signal in the high state.
Hardware Trigger Signal	Falling Rising Both	Specifies what type of signal is used to trigger MotionCam-3D.
Maintenance Mode	Off Auto	■ **Off** - maintenance mode is turned off ■ **Auto** - used to check and improve consistency of the device calibration by capturing a static scene. Available only on MotionCam-3D Color (shipped after the 26th of **May 2025). To find out more, see the Autonomous Maintenance section.**

Projection Offset (Left/Right)	0 - 512	This parameter narrows the area covered by the projection, shortens the shutter window, and thus limits the ROI of the device. It determines the number of projection columns that are cut off from the left/right side of the projection. The total width of the projection is 512 columns. It is useful for cases where the surroundings of the scanned object interfere with the scan or are unnecessary for further use of the point cloud. Additionally, the sensor's shutter window length is adjusted to match the narrowed projection, allowing less ambient light to enter the sensor. This parameter can help in scenes with extreme ambient light levels.
ISO	100-360	This value can be adjusted to modify the primary sensor's sensitivity to light. Higher ISO means the image will be brighter, however, high ISO values introduce noise which can affect the quality of the texture and also of the point cloud. Adjusting this parameter can improve performance on scenes with high levels of ambient light.
Early Transfer (MotionCam-3D Color only)	Off ColorCameraImage	Early Transfer is a latency-optimization feature designed for high-performance processing pipelines. When enabled, the device transmits the selected texture/image data as a separate frame as soon as it becomes available, before the rest of the 3D data is ready. ■ **Off** - Disables Early Transfer feature. All acquired data is sent together in a single frame per scan. ■ **ColorCameraImage** - Two frames per scan are sent from the device: ▫ First frame: ColorCameraImage (an image from the RGB camera unit in the resolution specified in the Color Settings). ▫ Second frame: Complete 3D data (PointCloud, NormalMap, DepthMap, Texture, ConfidenceMap, ColorCameraImage according to the current selection in Output Structure). When this option is selected, ColorCameraImage must be enabled in Output Structure. We recommend setting Camera Space = ColorCamera to achieve 1:1 alignment between 3D data and the ColorCameraImage/Texture without additional processing.
Log Level	Trace Debug Info (default value) Warning	Different levels of logging. High logging level may subtly affect runtime.

	Error Critical No Logs	

Color Settings (MotionCam-3D Color, PhoXi 3D Scanner Gen3)

White Balance (Color Settings)		Allows users to adjust individual red, green, and blue channels' presence in the RGB texture and ColorCameraImage. It also contains different custom presets to choose from and can be turned off completely.
ROI (region-of-interest) (Color Settings)		ROI settings allow the user to specify a region, an area, of the scan to focus on. This allows the user to disregard anything outside the given specified region, which in turn decreases the size of the scan and makes it possible to transfer, while also keeping higher resolution of the scan. The settings consist of four numbers: • X min • X max • Y min • Y max These numbers represent the X and Y coordinates of the start and the end of the ROI. *Note: To take this setting into consideration, you need to turn the **ROI Mode** to "Custom". Otherwise the coordinates in this setting will not be taken into account.* *Note: ROI is also available through API*
Exposure (Color Settings)	0.32 - 100 ms	This setting allows the user to adjust the exposure of the RGB camera unit in the MotionCam-3D Color and PhoXi 3D Scanner Gen3 independently from the 3D data acquisition.
ISO (Color Settings)	50 - 12800	This value can be adjusted to increase the RGB sensor's sensitivity to light. Higher ISO means the image will be brighter, however, high ISO values introduce noise which can affect the quality of the RGB data.
Gamma (Color Settings)	0 - 1000	The brightness of the RGB data can be adjusted by applying gamma correction. It will be applied after hitting **Set** or **Set and Store** By altering these settings, data are changed also in the API, while the gamma correction in the Visualisation setting pane only affects the way the data is displayed in the GUI.
Resolution (Color Settings)	1288 x 730 1932 x 1096 2576 x 1460 3864 x 2192	This setting will not affect the resolution of the 3D data. It only changes the resolution of the ColorCameraImage (*Color* in the 2D image tab). If the Camera Space is set to ColorCamera, the depth map resolution is determined by the ColorCameraImage resolution and it is used as Texture.

Remove False Colors	true/false	Solution to address falsely colored points caused by occlusions in the perspective of the color camera unit
ROI Mode	Standard Extended Custom	■ **Standard (4:3) [default mode]** - Resolution of the primary camera (centered in the middle, same height as the Extended mode) ■ **Extended (16:9)** - Resolution of the color camera, full view of the color camera ■ **Custom (ROI)** - the region is chosen based on the coordinates set in ROI, in context of the Extended mode (full color image resolution). *Note: ROI Mode is available also through API*

Camera Mode (MotionCam-3D, MotionCam-3D Color)

Exposure	10 - 100 ms	Data acquisition time: In the camera mode, the duration of the laser line sweeps across the scanned area.
Resolution (Read-only)	1120 x 800 1288 x 730 1932 x 1096 2576 x 1460 3864 x 2192	Resolution of the depth map. It is a read-only parameter: ■ In Camera Mode, determined by the selected Output Topology ▫ **Raw**: 560 x 800 ▫ **Irregular**: 1120 x 800 ▫ **Regular**: 1120 x 800 ▫ **Full Grid**: 1680 x 1200 ■ Or if the Camera Space is set to ColorCamera, the depth map resolution is determined by the ColorCameraImage (Settings → Color Settings → Resolution) resolution.
Sampling Topology (Read-only)	Standard	Defines the topology of sensor pixel modulations used for 3D data computation. Currently, only “Standard” sampling topology is supported.
Output Topology	Raw Irregular grid Regular grid Full grid	Defines the structure of the point cloud. ■ **Raw** - points are organized into a checkerboard grid. ■ **Irregular Grid** - complements the missing checkerboard grid through interpolation in PhoXi Control. ■ **Regular Grid** - shares the same sampling locations as Irregular grid, however, all 3D points of this topology are properly estimated (i.e. no interpolation is involved). This option requires longer transfer time. ■ **Full grid** - Computes 3D points on the native sensor resolution (2 Mpix), as in the Scanner mode. Transfer and computation time are impacted. Acquisition is identical to using other *Output*

		Topologies in the *Camera mode* - therefore suitable for scenes in motion. (to find out about a possibility to upgrade devices without this option - manufactured before Nov 2023 - contact our Help Center)
Coding Strategy	Normal Interreflections High-frequency Sparse	Coding strategy changes the shape of the patterns modulated by the camera sensor (MotionCam 3D) with the aim of lowering interreflections in the scene. The coding strategy optimized for Interreflections uses advanced digital coding that enables the repression of some diffuse interreflections. Interreflections Coding strategy makes the projected light stripes very similar in width, while Normal makes the stripes go from very thick to very thin across the projected patterns. High-frequency is used to suppress interreflections on shiny objects. Additionally, it is useful for scanning of semi-transparent surfaces. Sparse Coding strategy uses Photoneo's unique COMPIS (Computational Image Sensor) and the Parallel Structured Light technology to enhance signal readouts on transparent, translucent, and glossy surfaces. Suitable for static scenes only and is available only on MotionCam-3D (Color) product line, using the Camera mode. MotionCam-3D - uses a Normal strategy by default. Interreflections Coding Strategy has a lower effect than the Phoxi 3D Scanner.
Texture Source	Laser Laser (Enhanced) LED Color	Determines the way the Texture is acquired. ■ **Laser** - is a texture computed from the structured patterns - no additional image is required. Images have speckles (laser noise). ■ **Laser (Enhanced)** - the scene is illuminated by the Laser diode flash. No additional image is required. Images might have speckles (laser noise). The projection stripes are suppressed. This option is not available on devices with Powell lens based projector. ■ **LED** - will capture an additional image illuminated with the LED flash that offers a speckle-free 2D image. ■ **Color** - will capture an additional image illuminated with the white LED flash that offers a speckle-free 2D RGB image
Scanner Mode (MotionCam-3D, MotionCam-3D Color)		
Resolution (Read-only)	1680 x 800	Resolution of the depth map. It is a read-only parameter: ■ In Scanner Mode: 1680 x 1200

		■ Or if the Camera Space is set to ColorCamera, the depth map resolution is determined by the ColorCameraImage (Settings → Color Settings → Resolution) resolution.
Shutter Multiplier	1 - 50	Increases scanning time and amount of used light by repeating the projection of each pattern. Shutter Multiplier helps with ■ Scanning dark objects. ■ Sharp scanning angle. ■ Any other condition when the pattern is reflected back only partially. ■ Setting high values of the Shutter Multiplier can lead to overexposure and cause missing points in the point cloud.
Scan Multiplier	1 - 10	Increases scanning time by repetition and averaging the scanning sequence. Scan Multiplier helps to increase the signal-to-noise ratio and brings higher contrast in situations where a high dynamic range is required and a shutter multiplier leads to overexposure.
Coding Strategy	Normal Interreflections High-frequency	Coding strategy changes the shape of the projected light patterns with the aim of lowering interreflections in the scene. The coding strategy optimized for Interreflections uses advanced digital coding that enables the repression of some diffuse interreflections. Interreflections Coding strategy makes the projected light stripes very similar in width, while Normal makes the stripes go from very thick to very thin across the projected patterns. High-frequency Coding strategy is suitable for scenes containing reflective surfaces. MotionCam-3D - uses a Normal strategy by default. Interreflections Coding Strategy has a smaller effect than the Phoxi 3D Scanner.
Coding Quality	Fast High Ultra	Determines the number of used patterns and the subpixel accuracy: ■ **Fast** - no sub-pixel accuracy. ■ **High** - sub-pixel accuracy (default). ■ **Ultra** - enhanced sub-pixel accuracy. This parameter also influences both scanning and processing time. Selection between Ultra and High should be made based on specific scenes. Ultra is usually useful for long-distance scanning with the L or L+ models.

Texture Source	LED Computed Computed (Enhanced) Laser Laser (Enhanced) Focus Color	Determines the way the Texture is acquired. ■ **LED** - will capture an additional image illuminated with the LED flash that offers a speckle-free 2D image. ■ **Computed** - is a texture computed from the structured patterns - no additional image is required. Images have speckles (laser noise). ■ **Computed (Enhanced)** - operates like standard Computed option, but applies additional processing to suppress projection stripes. It does not work in 2D Mode and devices with Powell lens based projection unit. ■ **Laser** - will trigger an additional image using a laser flash. Use this setting to investigate light conditions in the scene. Images have speckles. ■ **Laser (Enhanced)** - operates like standard Laser option, but applies additional processing to suppress projection stripes. It does not work in 2D Mode and devices with Powell lens based projection unit. ■ **Focus** - will set the scanned structured light pattern as a texture. This setting is useful for analyzing problems with signal contrast and for finding optimal scanning time. Explore the dark and white areas and compare their values. The higher the contrast value, the higher the scanning quality. But avoid overexposure (value above 4095). ■ **Color** - will capture an additional image illuminated with the white LED flash that offers a speckle-free 2D RGB image
Exposure	10 - 40 ms	In scanner mode, the length of exposure of one pattern. (16 patterns + texture by default).

Capturing parameters (PhoXi 3D Scanner, Alpha 3D Scanner)

General Settings (PhoXi 3D Scanner, Alpha 3D Scanner)

Log Level	Trace Debug Info (default value) Warning Error Critical No Logs	Different levels of logging. High logging level may subtly affect runtime.

Capturing Settings (PhoXi 3D Scanner, Alpha 3D Scanner)

Basic / Shutter Multiplier	1 - 50	Increases scanning time and amount of used light by repeating the projection of each pattern. Shutter Multiplier helps with ■ Scanning dark objects. ■ Sharp scanning angle. ■ Any other condition when the pattern is reflected back only partially. Setting high values of the Shutter Multiplier can lead to overexposure and cause missing points in the point cloud.
Basic / Scan Multiplier	1 - 50	Increases scanning time by repetition and averaging the scanning sequence. Scan Multiplier helps to increase the signal-to-noise ratio and brings higher contrast in situations where a high dynamic range is required and a shutter multiplier leads to overexposure.
Basic / Resolution	**PhoXi 3D Scanner Gen2** 2064 x 1544 1032 x 772 **PhoXi 3D Scanner Gen3** 2064 x 1544 1854 x 1548 1236 x 1032 1032 x 772 924 x 774 **Alpha 3D Scanner** 1440 x 1080	This parameter adjusts the resolution of the depth map. PhoXi 3D Scanner supports high (2064 x 1544) and half (1032 x 772) resolution. Half resolution is achieved by binning pixels. Benefits of lower resolution: ■ Significantly shorter acquisition time is needed (with the same scan accuracy as at full resolution. ■ Faster transfer time due to fewer data.
Basic / Camera Only Mode	true/false	In this mode, the internal camera is used to capture 2D images of the scene. This setting is useful when it is necessary to navigate the Scanner around the scene or to take a quick snapshot to look for changes in the scene. The captured images can be read as Texture. The setting does not perform any computations necessary for 3D scanning and therefore has low latency.
Advanced / Ambient Light Suppression	true/false	Special acquisition method which limits the effect of ambient light. When Ambient Light Suppression is set to True, increase Shutter Multiplier and Single Pattern Exposure. It is recommended to set LED Shutter Multiplier to non-zero value PhoXi 3D Scanner Gen 1 - ALS Gen 1

		Alpha 3D Scanner - ALS Gen 2 PhoXi 3D Scanner Gen 2 (FW 1.2.37 and lower) - ALS Gen 2 PhoXi 3D Scanner Gen 2 (FW 1.10.0 and higher) - ALS Gen 3
Advanced / Coding Strategy	Normal Interreflections High-frequency	Coding strategy changes the shape of the projected light patterns (Phoxi 3D Scanner). The coding strategy optimized for Interreflections uses advanced digital coding that enables the repression of some diffuse interreflections. Interreflections Coding strategy makes the projected light stripes very similar in width, while Normal makes the stripes go from very thick to very thin across the projected patterns. High-frequency Coding strategy is suitable for scenes containing reflective surfaces. Phoxi 3D Scanner - for most scenes, choosing the interreflections strategy will provide better output, but in some specific situations, the Normal strategy might be useful.
Advanced / Coding Quality	Fast High Ultra	Determines the number of used patterns and the subpixel accuracy: ■ **Fast** - no sub-pixel accuracy. ■ **High** - sub-pixel accuracy (default). ■ **Ultra** - enhanced sub-pixel accuracy. This parameter also influences both scanning and processing time. Selection between Ultra and High should be made based on specific scenes. Ultra is usually useful for long-distance scanning with the XL model.
Advanced / Texture Source	**PhoXi 3D Scanner Gen2** LED Computed Laser Focus **PhoXi 3D Scanner Gen3** LED Computed Computed (Enhanced) Laser Laser (Enhanced) Focus Color **Alpha 3D Scanner** LED Computed Computed (Enhanced) Laser Laser (Enhanced)	Determines the way the Texture is acquired. ■ **LED** - will capture an additional image illuminated with the LED flash that offers a speckle-free 2D image. ■ **Computed** - is a texture computed from the structured patterns - no additional image is required. Images have speckles (laser noise). ■ **Computed (Enhanced)** - operates like standard Computed option, but applies additional processing to suppress projection stripes. It does not work in Camera Only Mode and devices with Powell lens based projection unit. ■ **Laser** - will trigger an additional image using a laser flash. Use this setting to investigate light conditions in the scene. Images have speckles. ■ **Laser (Enhanced)** - operates like standard Laser option, but applies additional processing to suppress projection stripes. It

	Focus	does not work in Camera Only mode and devices with Powell lens based projection unit. ■ **Focus** - will set the scanned structured light pattern as a texture. This setting is useful for analyzing problems with signal contrast and for finding optimal scanning time. Explore the dark and white areas and compare their values. The higher the contrast value, the higher the scanning quality. But avoid overexposure (value above 1023). ■ **Color** - will capture an additional image illuminated with the white LED flash that offers a speckle-free 2D RGB image.
Advanced / Single Pattern Exposure	10 - 100 ms	Increases acquisition time by prolonging the projection of each pattern. The longer the time the more light is projected on the scene. Has the same effect as Shutter Multiplier, but offers more variability in choosing the right value. In combination with Ambient Light Suppression, use values above 40 ms.
Advanced / Maximum FPS	0 - inf	Useful for limiting FPS in freerun mode. If you want to allow a scan every 10 seconds, set Maximum FPS to 0.1.
Advanced / Laser Power	0 - 4095	Controls the intensity of the projected light. By default, it is set to the highest possible value. Decrease the value in case of overexposure. Note: The 'Laser Power' setting, adjustable from 0 to 4095, controls the relative output of the laser. Note that the actual power output can vary between individual devices, even when set to the same 'Laser Power' value.
Advanced / Projection Offset (Left/Right)	0 - 512	This parameter narrows the area covered by the projection, shortens the shutter window, and thus limits the ROI of the device. It determines the number of projection columns that are cut off from the left/right side of the projection. The total width of the projection is 512 columns. It is useful for cases where the surroundings of the scanned object interfere with the scan or are unnecessary for further use of the point cloud. Additionally, the sensor's shutter window length is adjusted to match the narrowed projection, allowing less ambient light to enter the sensor. This parameter can help in scenes with extreme ambient light levels.

Advanced / LED Power	0 - 4095	Enables to decrease the LED light intensity used to capture texture. Useful for cases when the texture is used for extracting additional information and is experiencing overexposure.
Advanced / LED Shutter Multiplier	0 - 20	Increases scanning time and amount of used light to capture texture.
Advanced / Hardware Trigger	true/false	Usually used when two or more devices need to be synchronized. When the device is in hardware trigger mode and a scan is triggered, the acquisition will start after a specified edge of the signal is detected on the trigger input pin. The device can also signalize to other devices that it is acquiring by keeping the trigger output signal in the high state.
Advanced / Hardware Trigger Signal	Falling Rising Both	Specifies what type of edge of the signal on the trigger input pin is used to hardware trigger the device.
Advanced / Maintenance Mode (PhoXi 3D Scanner Gen3 only)	Off Auto	Maintenance mode can be used to check and improve consistency of the device calibration. ■ **Off** - maintenance is inactive. ■ **Auto** - autonomous maintenance mode acquires additional patterns to check calibration consistency, thus it takes longer time. If possible, it adjusts certain calibration parameters to improve the consistency of the device calibration. The procedure requires a static and well scannable scene. This mode is available only on devices with Color camera manufactured or serviced with firmware version 1.15.0 or higher and shipped after May 2025. If your device was produced earlier, it does not support this feature.
Advanced / ISO (PhoXi 3D Scanner Gen3 and Alpha 3D Scanner only)	100 140 200 280 400 560 800 1120 1600	This value adjusts the primary sensor's sensitivity to light. Higher ISO brightens the image and reveals more detail in dark regions, but also increases noise and the risk of oversaturation in bright areas, which can degrade the quality of the texture and the point cloud. Base value: 100. ■ **Interaction with HDR** (available for PhoXi 3D Scanner Gen3) - use HDR to counteract oversaturation when ISO is set high.
Advanced / HDR (PhoXi 3D Scanner Gen3 only)	Off Medium Strong	Controls how well bright regions are preserved (by reducing oversaturation) while keeping dark-region detail constant. The higher the HDR setting, the better the bright region preservation. HDR helps preserve highlights at medium and high ISO values. At the lowest ISO, HDR has no effect.

Advanced / Early Transfer (PhoXi 3D Scanner Gen3 only)	Off ColorCameraImage	Early Transfer is a latency-optimization feature designed for high-performance processing pipelines. When enabled, the device transmits the selected texture/image data as a separate frame as soon as it becomes available, before the rest of the 3D data is ready. ■ **Off** - Disables Early Transfer feature. All acquired data is sent together in a single frame per scan. ■ **ColorCameraImage** - Two frames per scan are sent from the device: ▫ First frame: ColorCameraImage (an image from the RGB camera unit in the resolution specified in the Color Settings). ▫ Second frame: Complete 3D data (PointCloud, NormalMap, DepthMap, Texture, ConfidenceMap, ColorCameraImage according to the current selection in Output Structure). When this option is selected, ColorCameraImage must be enabled in Output Structure. We recommend setting Camera Space = ColorCamera to achieve 1:1 alignment between 3D data and the ColorCameraImage/Texture without additional processing.

Processing Settings (Photoneo 3D Sensor)

Data Cutting / 3D ROI	Camera Space Min.-Max. X, Y, Z Point Cloud Space Min.-Max. X, Y, Z	Defines data cutting volumes in Camera or Point Cloud space. This setting can be configured manually via numerical input or via the Interactive Mode in the 3D Viewer. For detailed instructions and Interactive Mode usage, see chapter 3D ROI Configuration.
Data Cutting / Normal Angle	Max Camera Angle 0 - 90°	Maximal angle accepted between the camera-to-3Dpoint straight line and the measured normal vector at this point. (can be understood as “how much the scanned surface is rotated away from the camera”).
	Max Projection Angle 0 - 90°	Maximal angle accepted between the projector-to-3D-point straight line and the measured normal vector at this point. (=“how much the scanned surface is rotated away from the laser projector”) 3D points with normals rotated away above these thresholds will be filtered out. Useful for scanning objects where edges are causing problems.
	Min Halfway Angle 0 - 90°	Minimal angle accepted between the “halfway line” to a 3D point and the normal vector in this point. The halfway line is the center line between the camera-to-3D point line and the projector-to-3D point line.

	Max Halfway Angle 0 - 90°	Maximal angle accepted between the “halfway line” to a 3D point and the normal vector from this point.
Data Cutting / Max Inaccuracy	0 - 100 (mm)	Threshold for filtering the 3D points based on the point measurement reliability. Enables prefiltering of the output data according to the specific needs of your application. Some applications require a more complete device output at the expense of lower precision. Other applications are intended to work with precise data only and need to filter out regions where the precision does not meet a specific criterion. Max Inaccuracy can be set based on data from the Confidence Map. The corresponding parameter in the API is named Confidence.
Data Cutting / Calibration Volume Only	true / false	By default, only the points scanned in the recommended scanning volume are displayed. It is possible to see all the data acquired in the scene by setting the Calibration Volume Only to false. Data outside of the recommended scanning range are not guaranteed to be measured with the same accuracy. Recommended scanning volume is defined by the minimal and maximal scanning distance, which differs between the device models and can be found in the device datasheet.
Point Cloud Generation / Surface Smoothness	Sharp Normal Smooth	Determines the setting of the smoothness of the point cloud generation algorithm. ■ **Sharp** - optimized for small feature retrieval. Higher noise on surfaces. ■ **Normal** - standard sensor setting suitable for most scans. ■ **Smooth** - an edge-preserving algorithm that smooths the surface, lowering noise at the expense of small features.
Point Cloud Generation / Normals Estimation Radius	0 - 4	Determines the size of the area (in sensor pixels) around the point that serves for the computation of the normal vector of each 3D point. A higher radius leads to smooth normal vectors and a small radius to noisy normals. With the radius set to 0 normals are not calculated.
Marker Dot Correction / Operation Mode	Off Passive Active Reference Recording	All the operation modes are explained in section Operation Modes
Marker Dot Correction / Max Marker Shift (pixel)	0-25	Maximal permitted pixel shift of the markers It is not recommended to raise this value above 25 pixels

Interreflections Filter (PhoXi 3D Scanner, Alpha 3D Scanner only)	true/false	Special filter used to remove incorrectly calculated points due to the presence of interreflections. Switching the filter on changes the Coding Strategy to Interreflections. Interreflections occur when the laser light pattern is reflected from a diffuse surface and illuminates nearby objects. If the reflection interferes with the primary light pattern reflected from the scene, the depth calculation is affected causing the existence of discrete patches of points isolated from the rest of the point cloud, and they do not represent reality.
Interreflection Filter Strength (PhoXi 3D Scanner, Alpha 3D Scanner only)	0.01 -0.99	Allows the user to adjust the strength of the Interreflection Filter.
Pattern Code Correction	Off Medium Strong	Defines strength of the smoothing filter applied onto the decoded projection patterns.
Pattern Decomposition Reach	Local Small Medium Large	This parameter is mostly used to scan objects that are harder to scan due to challenging scanning angles, dark color, or higher shine. It helps to correct or eliminate points that have higher computation errors. To correctly decode the series of light patterns for each pixel, the values of surrounding pixels are taken into account. If the difference between them is larger than expected, the value of the candidate pixel is adjusted. This way some errors that are identified during computation are corrected. If the difference between neighboring pixels is too large, the candidate pixel is filtered out.
Signal Contrast Threshold (PhoXi 3D Scanner, Alpha 3D Scanner only)	0 - 4095	Serves as a filter that helps to eliminate parts of the scan with low contrast and low quality. Lowering the value of the Signal contrast threshold can help in situations where strong ambient light or worse scanning properties produce insufficient contrast between the light and dark stripes of the pattern. Higher values can serve to eliminate some noise from the scan. Each pattern is composed of light and dark stripes. The difference in intensity between them is called contrast. Two neighboring pixels belong to differently illuminated stripes (one is light and one is dark) if the contrast between them is higher than the threshold set by this parameter.

		To assess the contrast between light and dark stripes, set the “Focus” texture option within the Texture source setting and examine the resulting contrast in the Texture image.
Glare Compensation	true/false	Filter to suppress 3D reconstruction deficiencies caused by glare from a strong reflection of the scanned subject.
Hole Filling	Off Medium	Hole filling feature, if enabled, supplements 3D points to gaps surrounded by points in reasonably small depth range. Gaps surrounded with largely varying depths will not be filled. *Default: Off*

Coordinate Settings (Photoneo 3D Sensor)

Robot / Custom Transformation	Rotation Matrix	Defines the rotation matrix to transform from the camera space to the robot or custom space. Clicking the Edit button opens a new window with a 3x3 editable matrix.
	Translation Vector	Defines the translation vector from the camera space to the robot or custom space. Clicking the Edit button opens a new window where the X, Y, and Z coordinates of the vector can be set.
Marker Scale	X 0 - inf Y 0 - inf	Enables the setting of the X and Y scale of the marker pattern. Use X or Y larger than 1 for upscaled marker patterns and smaller than 1 for downscaled marker patterns. The correct scale is when the origin of the coordinate system is placed in the center of the white circle in one of the corners of the marker pattern.
Marker Ortho	*Default Sampling Distance* Sampling distance 0 - inf Origin Distance 0 - inf *Default Origin Distance*	■ **Default Sampling Distance**: Distance between points from neighboring pixels in the sweet spot of the original projection. ■ **Sampling Distance**: Distance between points from neighboring pixels at the same depth, measured in millimeters. If equals 0, the distance between points from neighboring pixels in the sweet spot of the original projection will be used instead. *Default value: 0.0* ■ **Origin Distance**: Distance between virtual camera and marker board. *Default value: 0.0* ■ **Default Origin Distance**: Distance between sensor position and marker origin.

Camera Space	PrimaryCamera ColorCamera CustomCamera MarkerOrthoCamera	Defines the origin of the depth map. If the “Coordinate Space” is set to “CameraSpace” it also changes the point cloud space. ■ **PrimaryCamera**: The origin of the depthmap is in the primary camera of the device - the 3D sensor. ■ **ColorCamera**: The origin of the depth map is in the color camera of the device. Note: The resolution of the depth map is determined by the resolution of the ColorCameraImage (Color Settings -> Resolution). To correctly get the depth map in the selected Color Resolution, ROI mode cannot be Standard. ColorCamera option is available only for PhoXi 3D Scanner and MotionCam-3D Color. ■ **CustomCamera**: The origin of the depth map is in the custom camera (which can be for example external infrared camera). This cannot be set up through GUI. Please check the ReprojectionToExternalCameraexample in the API Example section of this manual. ■ **MarkerOrthoCamera**: *Prerequisite: marker pattern in the scene* The depth map is organized as it was captured by orthogonal (telecentric) camera pointed perpendicular on a marker board.
Coordinate Space	CameraSpace MarkerSpace RobotSpace CustomSpace PrimaryCameraSpace	■ **CameraSpace:** Coordinate space with the origin in the CurrentCamera’s position The X-Y plane is defined by the camera sensor or a virtual camera defined by Camera Space in a case of depth map reprojection and Z is the perpendicular distance from the sensor to the scene/object. ■ **MarkerSpace**: To align multiple scans in PhoXi Control, it is useful to use marker patterns. Marker patterns are available in Tools/Marker patterns. If you place a marker pattern below an object and set the marker space as your coordinate space, you can now move the sensor to different locations with the point cloud automatically returning to the same coordinate system defined by the marker plate. See Appendix 1 - Marker Space for more information. ■ **RobotSpace**: Coordinate space with the origin of the robot. Automatically set by Robot-Camera Calibration Tool. See the Photoneo website for more information. ■ **CustomSpace**: Your custom-defined coordinate space.

		■ **PrimaryCameraSpace:** Coordinate space with the origin in the primary camera of the device.
Recognize Markers	true/false	When true, the algorithm will look for markers in the scene. Then you need to place a marker pattern in the scanning scene, otherwise, the resulting frame will be corrupted.
Save Transformations	true/false	When true, the new transformation from CameraSpace to any other Coordinate Space will be automatically saved to the device. The same can be done manually with the Set and Store function.

Primary Camera to Point Cloud Space transformations

Coordinate Space	Camera Space	Transformation matrix
CameraSpace	PrimaryCamera	Match (identity matrix)
CameraSpace	ColorCamera	Transformation between primary camera and color camera
MarkerSpace	PrimaryCamera	Transformation between the primary camera and the marker space
MarkerSpace	ColorCamera	Transformation between the primary camera and the marker space
PrimaryCameraSpace	PrimaryCamera	Match (identity matrix)
PrimaryCameraSpace	ColorCamera	Match (identity matrix)
Robot/CustomSpace	PrimaryCamera	Transformation between the primary camera and the robot/custom space
Robot/CustomSpace	ColorCamera	Transformation between the primary camera and the robot/custom space

Current Camera to Point Cloud Space transformations

Coordinate Space	Camera Space	Transformation matrix
CameraSpace	PrimaryCamera	Match (identity matrix)
CameraSpace	ColorCamera	Match (identity matrix)
MarkerSpace	PrimaryCamera	Transformation between the primary camera and the marker space
MarkerSpace	ColorCamera	Transformation between the color camera and the marker space
PrimaryCameraSpace	PrimaryCamera	Match (identity matrix)

PrimaryCameraSpace	ColorCamera	Transformation between primary camera and the color camera
Robot/CustomSpace	PrimaryCamera	Transformation between the primary camera and the robot/custom space
Robot/CustomSpace	ColorCamera	Transformation between the color camera and the robot/custom space

The above mentioned matrices for the Primary Camera to Point Cloud Space transformations and the Current Camera to Point Cloud Space transformations are also available via API.

3D ROI Configuration

3D ROI function defines data cutting volumes in either the Camera or the Point Cloud coordinate space.

General Behavior & Constraints

- Processing Order: Cutting is processed after the point cloud is computed; therefore, enabling this setting cannot speed up the transfer time.
- Coordinate Spaces: ROI cutting applied in the camera space is always based on the original coordinate system. ROI cutting in the point cloud space is applied only when the coordinate system of the point cloud differs from the camera space.

Tip: Use this setting in combination with Marker Space to remove the background, which will make scan alignment easier.

Configuration Modes

You can define the cutting volumes using either the graphical interactive mode or by manually entering the numerical parameters.


1. Interactive Mode (Graphical)

The Interactive Mode allows you to visually define and modify the cutting volume directly within the 3D Viewer.


Tip: For a step-by-step visual demonstration, you can watch our video tutorial on ROI configuration in an interactive mode here.

Activation

To activate the Interactive Mode for 3D ROI, click the box icon located in the settings pane under: `Processing Settings` > `Data Cutting` > `3D ROI` > `Camera Space` (or `Point Cloud Space`).

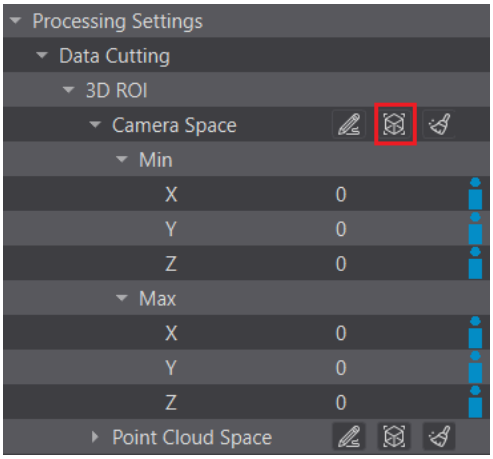

Once activated, a bounding box will appear over your point cloud in the 3D Viewer, along with a dedicated ROI toolbar at the top of the viewer.

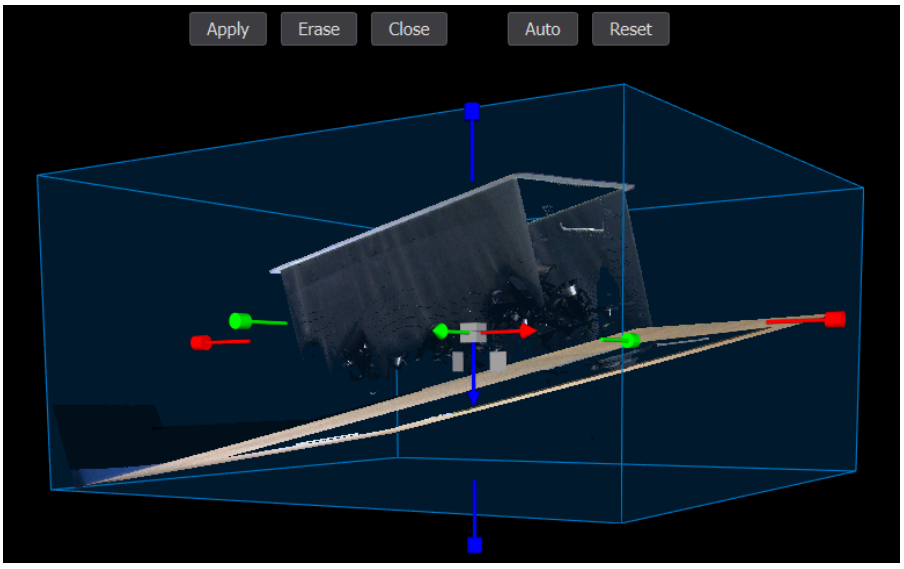


Manipulating the Bounding Box

You can modify the size and position of the bounding box using the interactive 3D widgets attached to it. The axes are color-coded: X (Red), Y (Green), and Z (Blue).


Note: The bounding box is always aligned to the coordinate axes and cannot be rotated.

- **Colored Handles (Resize)** - Click and drag the red, green, or blue handles located on the faces of the bounding box to stretch or shrink the volume along that specific axis.

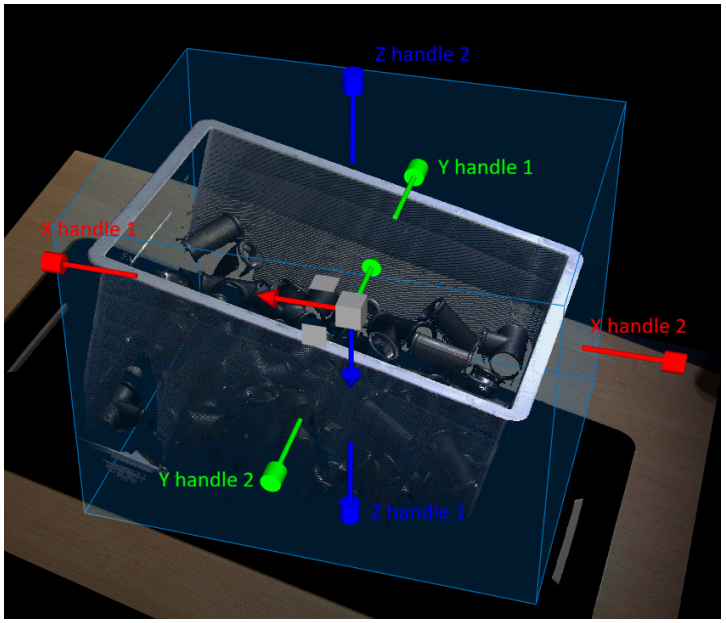

- **Grey Central Cube (Free Movement)** - Click and drag the solid grey cube in the very center to move the entire bounding box freely in 3D space.

- **Grey Planar Squares (Planar Movement)** - Click and drag one of the grey square markers (located near the center) to move the entire bounding box strictly along its corresponding 2D plane (X-Y, X-Z, or Y-Z).

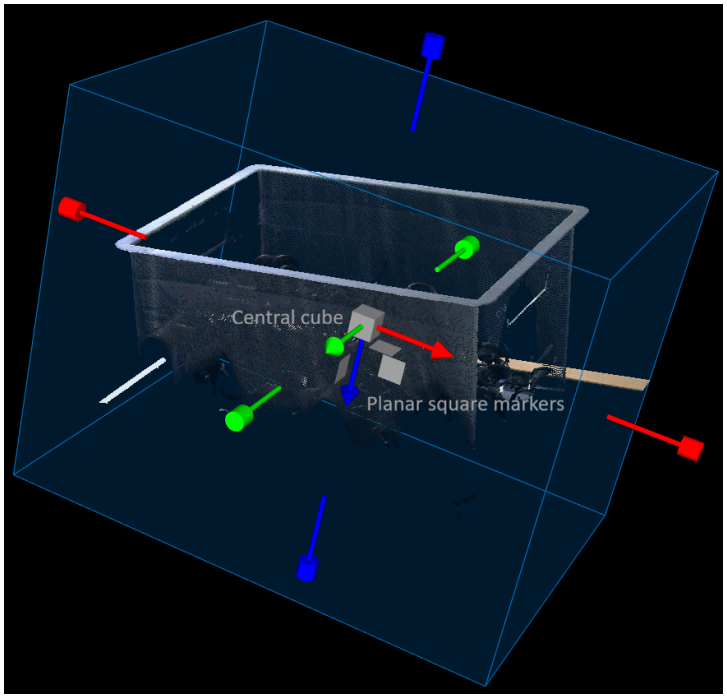

ROI Toolbar Controls


While in Interactive Mode, a new toolbar appears at the top of the 3D Viewer. Use these buttons to manage your ROI session.



- **Apply** - Confirms your adjustments. The Min and Max coordinate values in the settings panel will update automatically to match the visual box.
  Note: To see the actual cut applied to a new scan, you must hit the main Set and Trigger button).



- **Erase** - Clears the current bounding box and sets all boundary values to 0 (which disables data cutting).
- **Auto** - Automatically sizes and positions the bounding box to encapsulate all valid points in the point cloud.

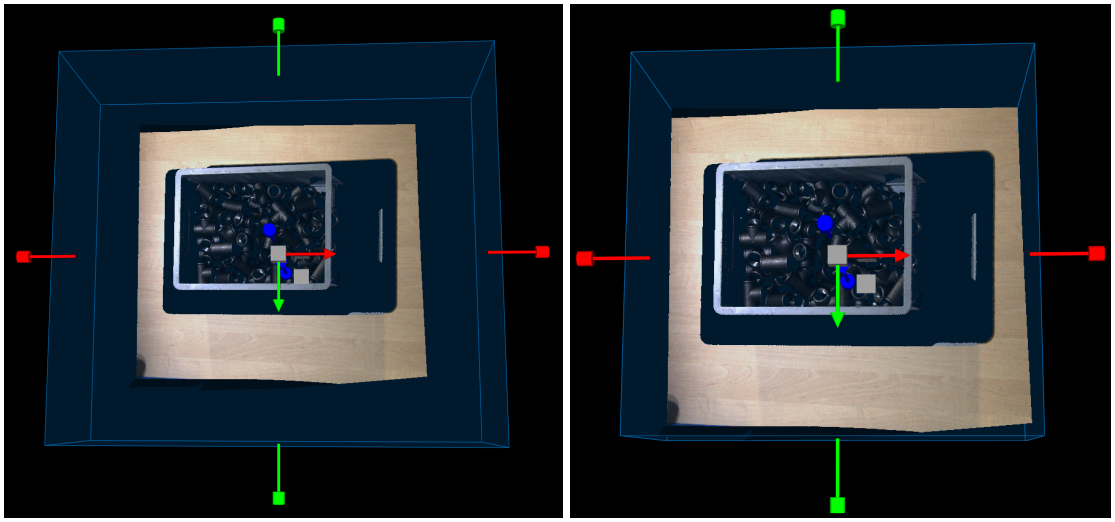


- **Reset** - Reverts the bounding box back to the exact dimensions it had before you started the current interactive session.
- **Close** - closes the interactive ROI mode.


2. Manual Mode (Numerical)

You can manually define the cutting volume by inputting exact boundary values. You have two options for entering these parameters:

- Start filling out the Min and Max values for all three coordinates directly in the settings pane.

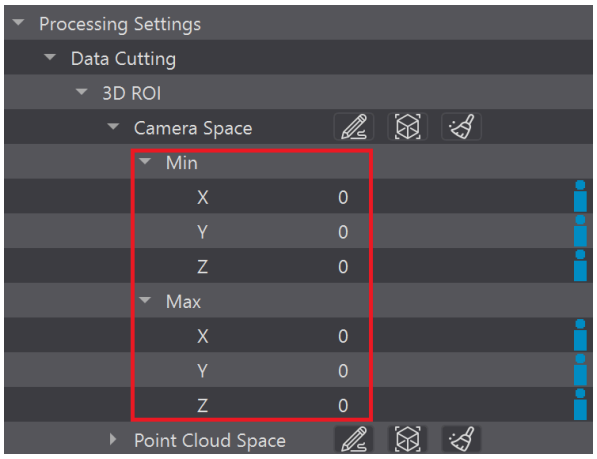

- Click the pencil icon to open the dedicated coordinate table and fill in the values.

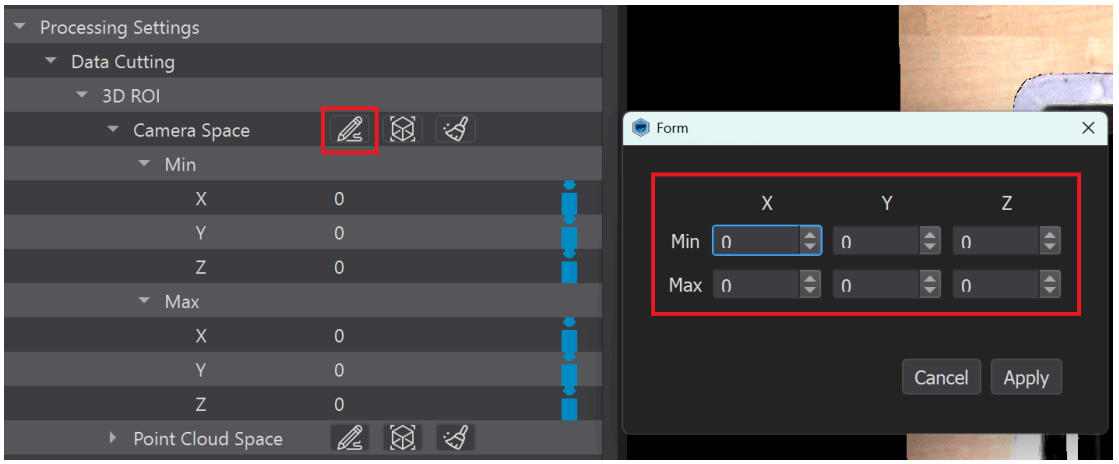

Configuration Rules & Constraints

When manually defining the ROI, the system applies the following rules to your inputted values:

- The cutting will be applied only if the minimum value is strictly smaller than the maximum value for a given axis (e.g., min. X is smaller than max. X).
- Setting any boundary value to 0 disables data cutting in that specific direction.
- If cutting close to 0 is necessary, use a small decimal value instead.

Hardware trigger

The hardware trigger provides the user with means of triggering devices by external means - outside of the software environment. To get further hardware specifications about the hardware trigger, see the Photoneo 3D Sensor User Manual. This functionality is mostly used for synchronization purposes:

- With external events, such as an object arriving inside the field of view of Photoneo 3D Sensor (i.e. triggered by an optical gate)

- With other devices, such as 2D cameras, PLCs, etc.
- With multiple Photoneo 3D Sensors

Software Configuration


The supported uses cases are:

- Single device triggered by HW trigger
  - Example: A MotionCam-3D Color triggered by an optical sensor to capture a moving object on a conveyor belt
- A device sending an output signal to a PLC
  - Example: A MotionCam-3D sends an output signal to a robotic controller after the acquisition to start a solution. Locator Studio picking from a moving conveyor belt.
- Multiple devices triggered by HW trigger independently from each other
  - 2 Photoneo 3D Sensors triggered by a PLC with a specific delay
- Two or more devices triggered sequentially in a chain → Daisy chain
  - PhoXi Instant Meshing model creation
- Two or more devices triggered sequentially in a loop → daisy chain in a loop

Simple configurations

Single device triggered by HW trigger (SEXT)

The device can be triggered with a software (default) or a hardware trigger. There is a dedicated parameter in PhoXi Control / PhoXi API to control device trigger mode. To trigger the device via hardware trigger:

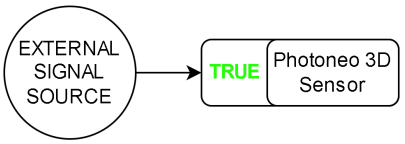


- Set `Hardware Trigger = TRUE`
- Put the device into freerun
- Send the signal to trigger input

With hardware trigger mode enabled, the device will capture a new scan each time an input signal is detected. If the trigger input signal arrives during an active device acquisition, it will be ignored. To stop the device from listening to the hardware trigger signal, turn the freerun OFF. To disable hardware trigger mode, set the `Hardware Trigger = FALSE`. The response to the trigger signal is around 3 ± 2 milliseconds.


Photoneo 3D Sensor output signal to PLC or other device (OUT)

Photoneo 3D Sensor sends a signal to trigger a secondary device, which can be a PLC or other signal acceptor.

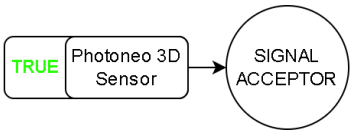

Multiple devices triggered by HW trigger independently from each other (MEXT)

In this case, an external trigger would be triggering 2 or more devices independently. The devices need to be set up the same way as in the previous use case with a single device. If the devices' FOVs (fields of view) overlap, make sure the input signals are timed adequately in order to acquire 3D data without any distortions caused by the projection interference.

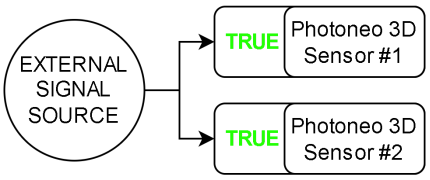

Daisy Chain and Daisy Chain in a Loop


Daisy chain and daisy chain in a loop are special setups in which two or more Photoneo 3D Sensors are interconnected and are triggered consecutively by each other. They are mostly used to prevent interference between two projections if the devices have overlapping fields of view. In a daisy chain, the trigger sequence is always triggered by external means. In a daisy chain in a loop, once the acquisition has started it will continue until the loop is broken.

Two or more devices triggered sequentially in a daisy chain (EXTSEQ, INTSEQ)


In a daisy chain consisting of, for example, 4 devices, the output pin of the first device is connected to the trigger input of the second device. The output of the second device is connected to the input on the third device and so on. The output on the last (fourth device) is not connected to any Photoneo 3D Sensor (but can be connected to a different device).

There are two options on how to set up the chain:

- Sequential triggering with external signal source - EXTSEQ
  - Set `Hardware Trigger = TRUE` on all devices.
  - Start freerun on all devices. In this scenario nothing will happen unless
    - Hardware trigger from an external source is sent to the trigger input of the first device in the chain

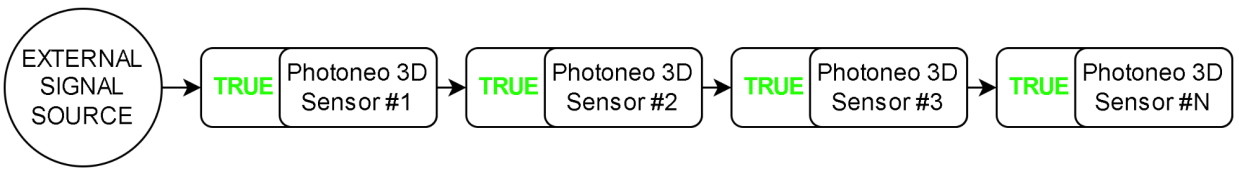

- Sequential internal triggering - INTSEQ
  - Set `Hardware Trigger = TRUE` on the last three devices and put them into freerun.
  - Trigger the first device by software trigger/ freerun. This will start the chain and trigger all consecutive devices.
  - In case the freerun is used, to stop the acquisition of all devices, it is necessary to disable freerun on the first device




Limiting the FPS in some applications might be necessary to achieve stable results. For example, we can have 4 MotionCam-3Ds with overlapping FoVs of which one is primary and it is running on freerun (via PhoXi Control or API) which triggers the other 3 secondary devices via the hardware trigger (connected in series). If, theoretically, the acquisition takes 15 ms for each MotionCam-3D and the Maximum FPS is set to 20 (frame every 50 ms), there is enough time to trigger only 2 secondary devices and part of the acquisition of the last device would be overlapping with the following frame on the primary device. If we limit the FPS of the primary device to 15 (frame every 66 ms), there is enough time to trigger all secondary devices to avoid overlapping. The acquisition windows of the secondary device and tertiary device need to fit in the window between the frames of the first device.

Two or more devices triggered sequentially in a loop - daisy chain in a loop (EXTDCL)

This case is very similar to the basic daisy chain explained above. We can have 4 devices, where the output pin of the first device is connected to the trigger input of the second device. The output of the second device is connected to the input on the third device and so on. However, in this case, the output signal from the last device is connected to the input of the first device, creating a loop.

The picture below illustrates the daisy chain loop with three devices. The red rectangle represents the time period in which the device is in acquisition (the laser is sweeping the scene). During this time period the signal, which is represented by the black line, is opposite to what it was before the acquisition. Once the acquisition on the first device is finished, the signal changes back and thus produces a trigger signal (blue arrow) for the second device that is connected to the first one. A few milliseconds later the acquisition on the second device is started. The yellow rectangle represents the delay between when the trigger signal is received and when the acquisition starts. This delay is typically around 3 milliseconds.

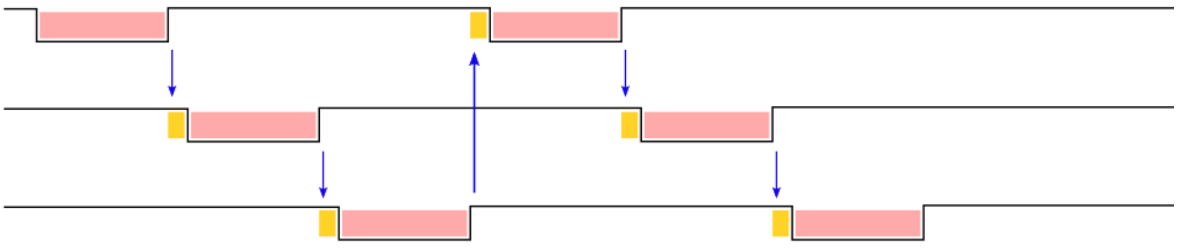


Simplified signal representation for 3 devices in a daisy chain in a loop

In these setups, the end of acquisition on MotionCam-3D #1 produces a falling edge on its output pin which triggers acquisition on MotionCam-3D #2. This is followed by the acquisition on the MotionCam-3D #3.

To set up Photoneo 3D Sensors in a daisy chain in a loop configuration:

- Set `Hardware Trigger = TRUE` on all devices.
- Enable free run on all devices
- Send a signal from an external signal source to initialize the acquisition

To stop the acquisition, disable freerun on one of the devices.

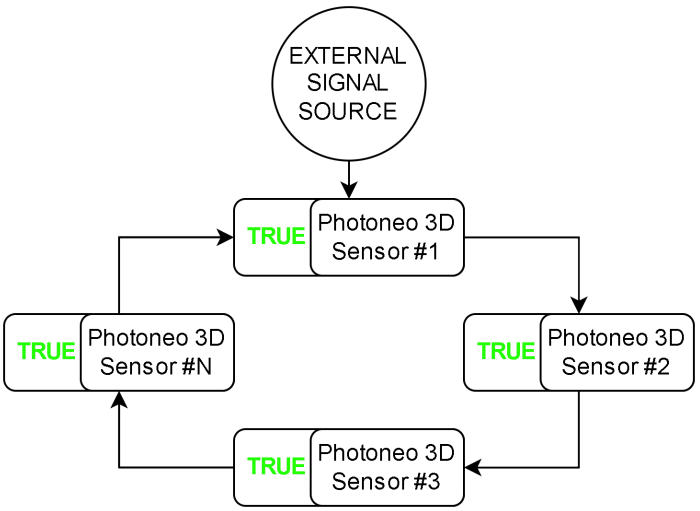

See our API example for the daisy chain to learn how to control the devices via hardware trigger.

Troubleshooting

If the following section does not help in solving the difficulty you are experiencing, contact our support team at the Help Center.

The more information that you provide, the faster and more accurate the answer can be. The following section explains how to collect the log files that you are kindly asked to attach to your support requests.

Additionally, please describe what you have been trying to do, what the result was, and what you expected. Depending on the nature of the problem, please also report the version of the operating system being used, your PC configuration, and other additional information that would be helpful in replicating the problem and identifying its root cause.

Collecting Log Files

There are several types of diagnostic information to collect and attach to your support request:

1) Logs from the device
2) Logs from PhoXi Control
3) Crash dump of PhoXi Control (in case PhoXi Control crashes)
4) Logs from your API application
5) Crash dump of API application

Downloading Logs From Device


Logs from the device can be downloaded using

a) A built-in functionality of PhoXi Control
b) A stand-alone utility for downloading logs from device


It is recommended to set up your error handling process to collect the logs immediately after experiencing any issue with the device.

PhoXi Control built-in functionality

1. In the Network Discovery, click the Utils button (previously “Maintain”) in the bottom right corner and choose the Log Downloader option.

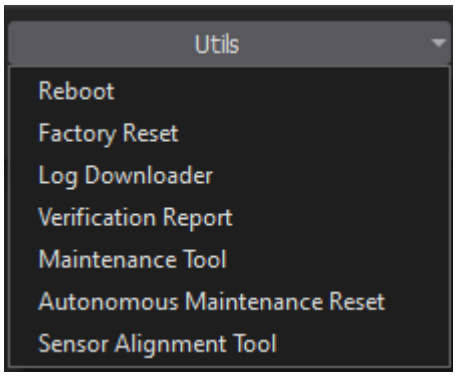

2. Follow up the prompt in the window to save the log file in desired location

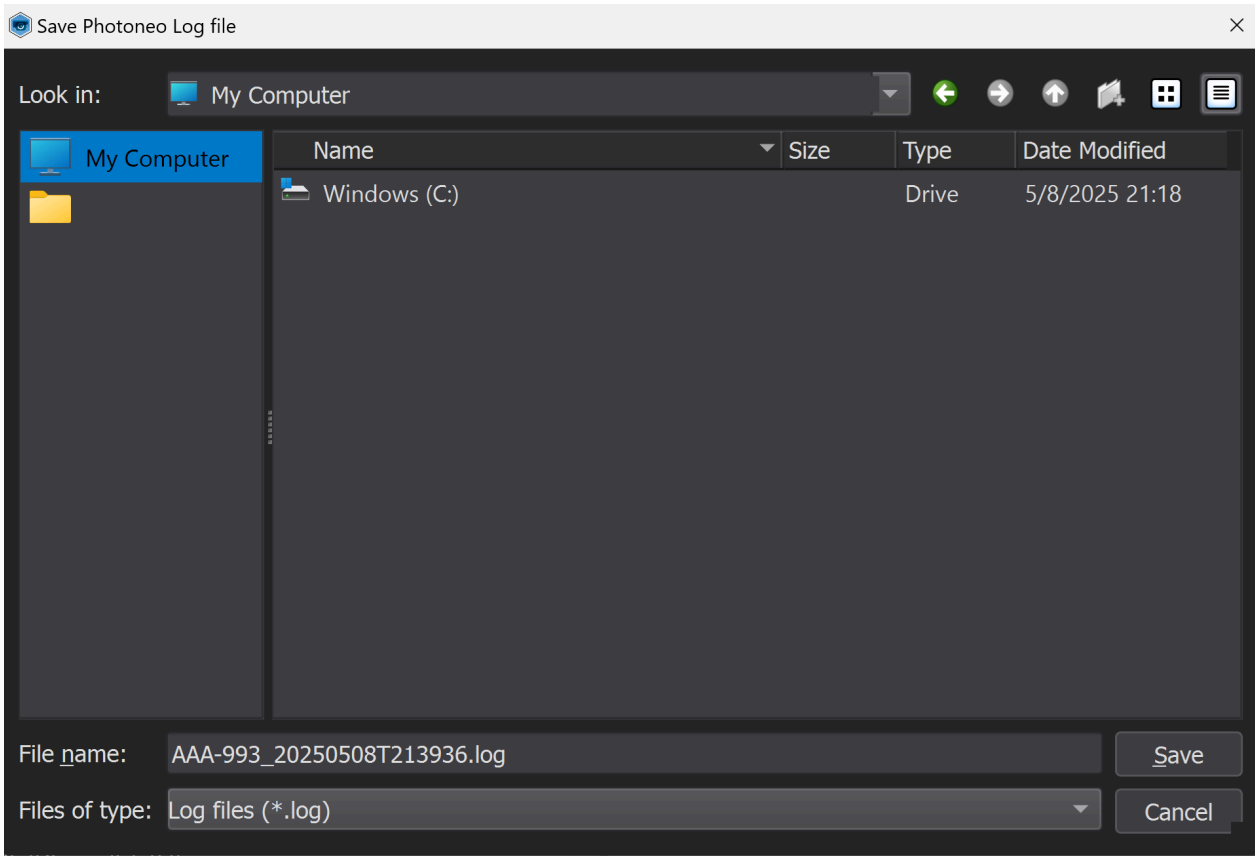

Standalone LogDownloader Utility

Windows

a) Log Downloader Utility
   i) Download the utility from https://www.photoneo.com/dl/logdl-win.
   ii) The downloader has two modes
      1) Interactive mode

(a) Double click the phoxi-log-downloader application

(b) Input device ID or IPv4/IPv6 address upon request

2) Direct mode

i) Call the application in command prompt or by your application and supply the ID or IP address of the device

```
<name_of_the_chosen_log_downloader> <IPv6>
```

2) Once the application finishes (Result: OK), all the logs are stored in file log.txt in the folder with the application.

3) Send the file log.txt to Photoneo Support.

Ubuntu

1. Download the utility from https://www.photoneo.com/dl/logdl-lin or use the use the Utils button in PhoXi Control as explained in the Log Downloder section.
2. Open a new terminal in the folder with the application
3. Give the application executable rights:

```
chmod +x <name_of_the_chosen_log_downloader>
```

4. Execute the application with its ID or IPv4 or IPv6 as an argument

```
./<name_of_the_chosen_log_downloader> <IPv6>
```

5. Once the application finishes (Result: OK), the logs are stored in the file log.txt which was created in the folder with the application.

Device Log Level

By default, the logging level on the device is optimized for performance. To extend the logging level to contain extensive information on PhoXi 3D Scanners, turn on Extended logging in PhoXi Control and reconnect to the device (the logging level is determined at the time of connection to the device.) Extended log level on MotionCam-3D needs to be enabled by our support during the remote sessions.

PhoXi Control Log Files

PhoXi Control log files are located in the application folder:

Windows 10

- `C:\Users\<user>\AppData\Roaming\PhotoneoPhoXiControl\PhotoneoLogFiles`

Ubuntu

- `~/.PhotoneoPhoXiControl/PhotoneoLogFiles`

PhoXi Control Log Level

PhoXi Control always creates basic log files. If you experience any problem with Phoxi Control please collect the logs from the folders mentioned above. If you are able to recreate the problem, please set up Extended Logs:

- Open LogConfig.txt in the PhotoneoLogFiles folder
- On the first line, change 0 to 10 to enable extended logs
- Restart PhoXi Control
- Once you have replicated the issue and collected logs, change the first number in LogConfig.txt back to 0.

PhoXi Control Core Dumps

If you have experienced a crash of PhoXi Control, please collect the core dump located in the ProgramData folder on Windows and in the /tmp folder on Ubuntu. The core dumps are available for all PhoXi Controls with version above 1.2.22:

Windows 10

- The core dump generation is enabled automatically during the installation
- Location: C:\ProgramData\PhotoneoPhoXiControl\CrashDumps
- The dump file looks like this: %ProgramData%\PhotoneoPhoXiControl\CrashDumps\PhoXiControl.exe.6548.dmp

Ubuntu

- The core dump generation needs to be enabled first using the following commands:

```
ulimit -c unlimited
sudo sysctl -w kernel.core_pattern=/tmp/core.%e.%u.%p.%t.dmp
```

    - Note: this will enable the core dump generation for any Linux process, not only PhoXi Control

- Location: /tmp
- The dump file looks like this: /tmp/core.PhoXiControl.1000.5503.1602775821.dmp
- After successful diagnostics, disable the core dump generation using the following command:

```
ulimit -c 0
```

API Log Files

Client API application does not create logs by default.

To set up API logging (generating a lot of data):

- Navigate to your application folder and open PhotoneoLogFiles folder
- Open LogConfig.txt and change the value on the first row to 10
- Restart your application
- Once you have replicated the issue, you can turn off the logs by changing the first-row value back to 0

The API log files directory can be changed by setting up the environment variable PHO_API_LOG_FILES_DIR or PHO_LOG_FILES_DIR. If PHO_API_LOG_FILES_DIR environment variable is defined, logs will be saved in the direction it points to. If it is not defined, logs are saved in the directory pointed by the PHO_LOG_FILES_DIR. If none of these is defined, the logs will be saved directly on the desktop. In case both of the variables are defined, PHO_API_LOG_FILES_DIR is prioritized.

API Core Dumps

If you are experiencing crashes of your application, you can set up creating crash dumps.

Windows 10

Crash dumps for your application need to be activated in the Windows registry.

- Download the following file crashdump.reg
- Unzip the archive
- Open it in the text editor
- Overwrite UserAPiApp.exe with the name of your application and save the changes. The .exe is a necessary part of the name.
- Double click on the crashdump.reg and allow it to become part of the Windows registers
- The crash dumps should be generated in the same folder as the PhoXi Control crash dump %PROGRAMDATA%\PhotoneoPhoXiControl\CrashDumps

Ubuntu

Type the following command into the terminal:

```
ulimit -c unlimited
sudo sysctl -w kernel.core_pattern=/tmp/core.%e.%u.%p.%t.dmp
```


The crash dumps are generated in the /tmp folder. Here's an example core dump file::
/tmp/core.my_app_name.1000.5503.1602775821.dmp

Troubleshooting Network Connection

Cannot connect to the device or scanning time is too long

The device is listed in the PhoXi Control application, but after trying to connect to it, it disconnects:

- Check your ethernet connection speed; the minimum speed should be 1 Gbps.

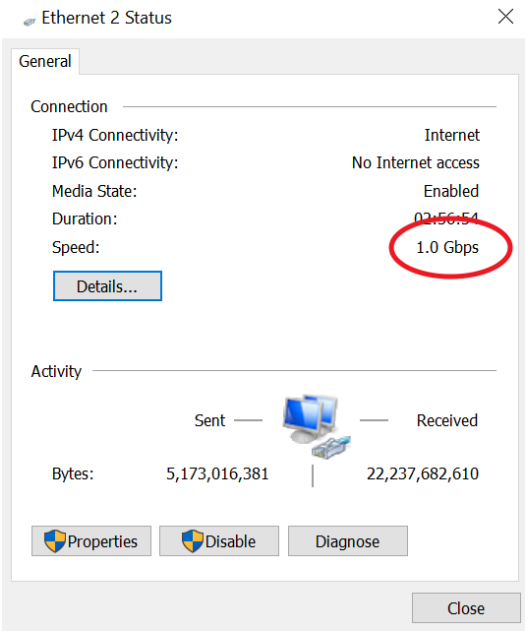

- If your connection is very slow (10 Mbps), the connection will most likely time out.
- If your connection is slow (100 Mbps), data transfer will take more time.
- Use the Speed test to verify the right connection speed


The device is not visible in PhoXi Control on a network with a dynamic IP assignment

Make sure your device is connected correctly - you are using network media supporting Gigabit Ethernet or higher and your network topology is either star or direct (see sections Network media and Network topology).

Reboot the device.


Check the LED lights on the backside of the device. The last two indicate the status of the Ethernet connection. Please note that the PoE devices have a different set of LEDs than the 12 V devices.

12 V devices

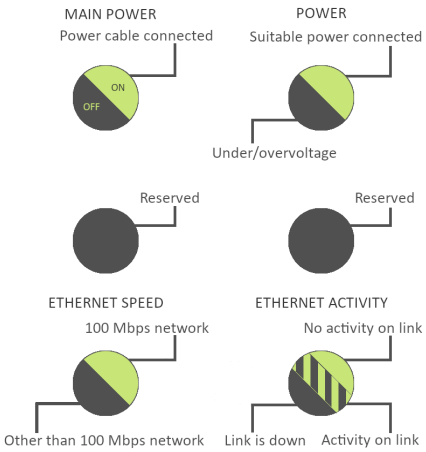

- The left diode indicates speed:
  - ON - 100 Mbps
  - OFF - other than 100 Mbps, usually 1 Gbps
- The right diode indicates Ethernet activity:
  - OFF - link is down
  - Flashing - link is up with activity
  - Steady - link is up without activity

PoE devices:

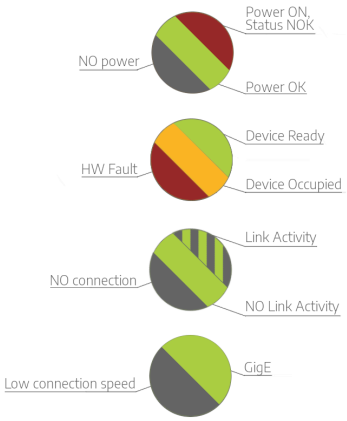

- 3rd LED from top:
  - OFF - link is down
  - Flashing - link is up with activity
  - Steady - link is up without activity
- 4th LED from top:
  - ON - Gigabit connection
  - OFF - slower than gigabit connection

Check the network configuration of your computer:

- Your firewall is blocking communication with the device.
- Zeroconf implementations (Avahi or Bonjour service) are not running or are running incorrectly.

To resolve the problems listed above:

- Check your Network Connection status in system settings. If networking is disabled, enable it.
- Check if your firewall is not blocking Bonjour Service: www.digitalcitizen.life/how-change-windows-firewalls-list-allowed-blocked-apps
- Check the settings of your firewall. The device communicates with the computer on ports - 5353 and 5354 on the computer side and ports - 65499 and 65534 on the device side.
  - Allow incoming UDP traffic on ports 5353 (mDNS), 5354 (mDNS responder).
  - Allow outgoing TCP traffic on ports 65499 and 65534.
- **On Ubuntu (16.04):**
  - Check if avahi-daemon is running.

```
systemctl status avahi-daemon.service
systemctl status dbus-org.freedesktop.Avahi.service
systemctl status dbus.service
```

- **On Windows:**
  - Is Bonjour service installed and running?
  - Open Windows Task Manager (Ctrl + Shift + Esc) → Services.
  - Find Bonjour service and check its status.
  - If it is not running, try to start it.
  - If starting it fails, open the Event Viewer application.
  - Go to Windows Logs → Application in the left pane and look for Errors (Event Level column) reported by Bonjour Service (event Source column).
  - Reinstall Bonjour Service if needed.

Bonjour Service cannot be started on Windows

If you try to start Bonjour Service and it fails due to exception 1067, download the 32-bit version of Bonjour Service from Apple. The name of the 32-bit version is 'Bonjour Print Services for Windows v2.0.2' and can be found in the following link: support.apple.com/kb/dl999?locale=en_US.

Ubuntu does not show IPv4 address - creating a Link-local connection

When the PhoXi 3D Scanner or MotionCam-3D is connected to Ubuntu and you want to use dynamic IP address assignment relying on Zeroconf, the network discovery usually requires a Link-local connection. It is necessary to create Link-local connection when:

- PhoXi Control does not display IPv4 address in the corresponding field
- Running the following command does not show 169.254.x.x IPv4 address


```
ip addr show <INTERFACE-NAME>
```

To create Link-local connection:

1. Connect the device to your computer.
2. Find out the system name of the network interface you have used. It is usually **ethN** or **enpNs0** where N is some small number, e.g. eth0 or enp2s0. You can find out the list of network interfaces by typing `ip -br -c link shown` into a terminal window. Your device will be shown as UP. Note that if you use more than one Ethernet interface you'll see more than one device UP. In that case, disconnect the network cable from the Photoneo device, run the `ip -br -c link show` command again to see which one went DOWN, and plug the network cable back again. Note the hardware (MAC) address of the device. In our example, the device is `enp2s0` and its hardware address is `7c:67:a2:9e:57:c3`.

```
peterko@peterko-dell:~$ ip -br -c link show
lo               UNKNOWN        00:00:00:00:00:00 <LOOPBACK,UP,LOWER_UP>
enp2s0           UP             7c:67:a2:9e:57:c3 <BROADCAST,MULTICAST,UP,LOWER_UP>
wlp3s0           DOWN           50:9a:4c:b5:0f:93 <NO-CARRIER,BROADCAST,MULTICAST,UP>
tap0             UNKNOWN        ea:cd:74:7a:4d:04 <BROADCAST,MULTICAST,UP,LOWER_UP>
```

3. Create a new network connection using NetworkManager. In the *Ethernet*, tab choose the right device (the field is under *the Identity* tab and called *MAC address* on some versions of Ubuntu). In the *IPv4 Settings* choose ***Link-local Only*** as the connection method.

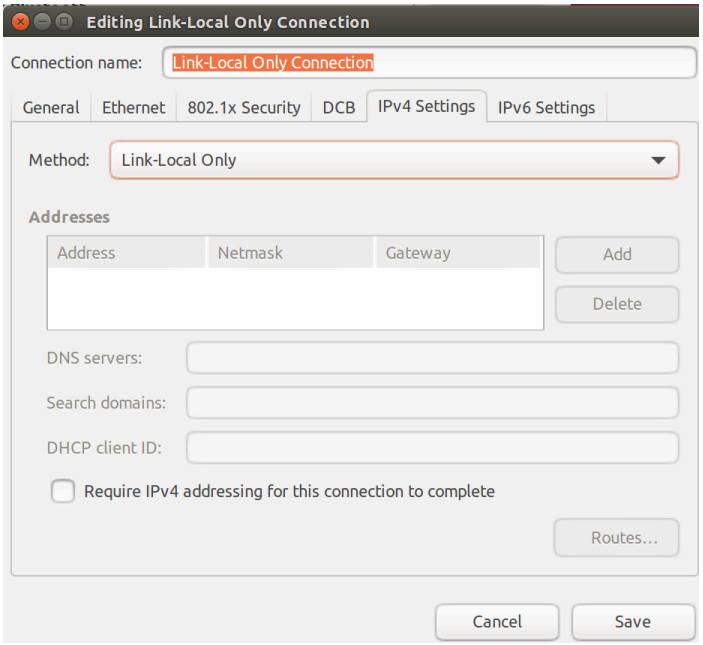

4. Name the connection for example as "Link-local Only Connection" and save its configuration.
5. Activate the connection by clicking on its name in the network connections list in the top right corner of your screen.

In case of other issues


Please report any issues to Help Center.

Please describe what you have been trying to do, what the result was, and what you expected. Depending on the nature of the problem, please also report the version of the operating system being used, your PC configuration, and other additional information that would be helpful in replicating the problem and identifying its root cause. Thank you!

Appendix 1 - Marker Space

Introduction


Every point in a point cloud is identified by three numbers - its XYZ coordinates. Coordinates give the precise position of each 3D point relative to the point of origin of the specific coordinate system.

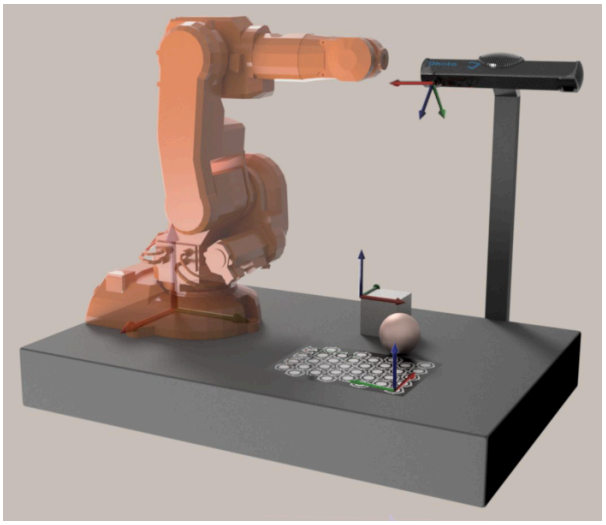

Different coordinate systems.


By default, all Photoneo 3D Sensors are set to generate point clouds in the camera coordinate space (the point of origin is located in the center of the camera sensor). Additionally, they provide the internal capability to real-time transform the point cloud to any arbitrary coordinate space. Once the transformation parameters are known the device generates the point cloud (using 3D rotation and translation) in the selected coordinate system. .

In PhoXi Control there are five coordinate spaces to choose from

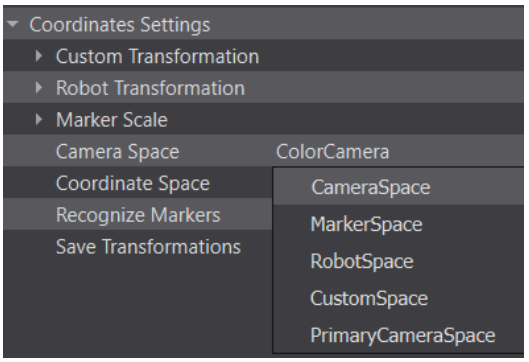

- Camera space
- Marker space
- Robot space
- Custom space
- PrimaryCameraSpace

The default setting for all Photoneo 3D Sensors is to use CameraSpace. This coordinate system has a point of origin in the center of the camera sensor.
In PhoXi Control, use the checkbox Axis under the Coordinates box in the right pane to visualize the axis defining the default coordinate system. (XYZ axes follow the RGB color convention).

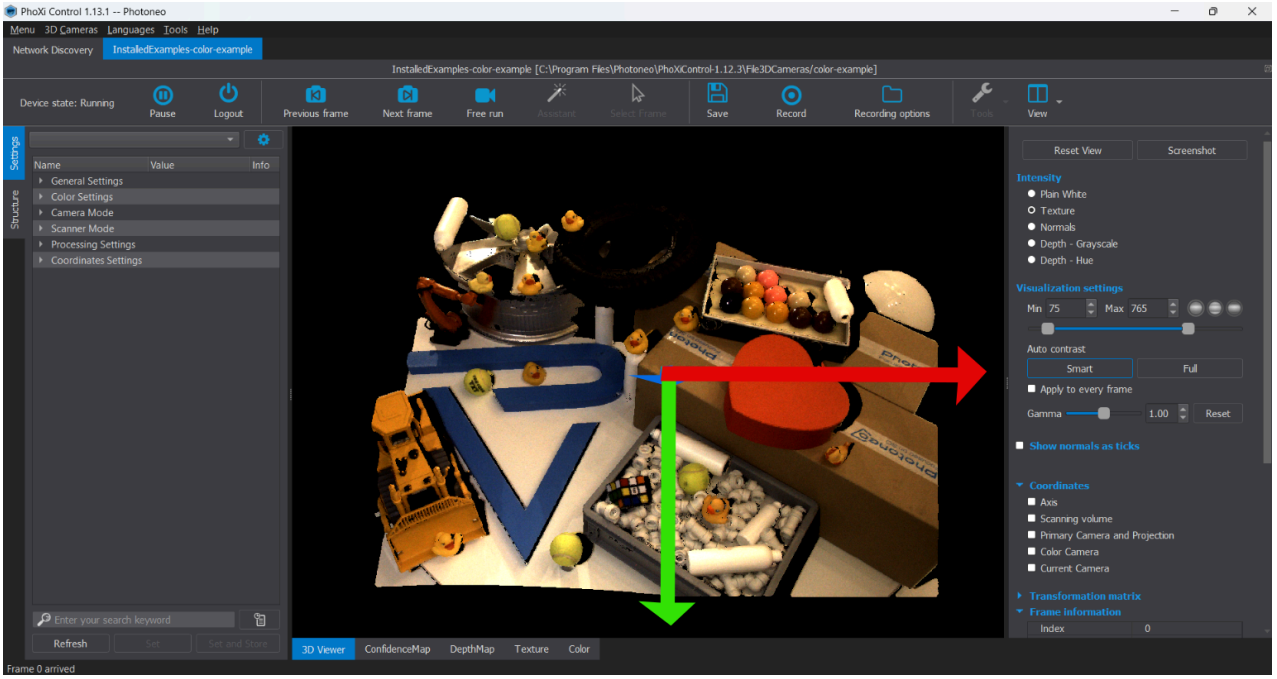

Camera space in PhoXi Control.
Z-axis (blue) lines up perfectly with the direction of the view, so it is not visible.

- In the camera space, X-axis aims to the right side of the device, and Y-axis aims downwards. The sensor is mounted at a specific angle relative to the sensor body. This angle varies for different device models, so the XY-plane is not parallel with the outer casing of the device (see Table 1 for details).
- Z-axis aims at the scene and defines the “depth” at which the object is observed by the device. It’s the perpendicular distance of every single point on the scene to the XY-plane defined by the camera sensor.

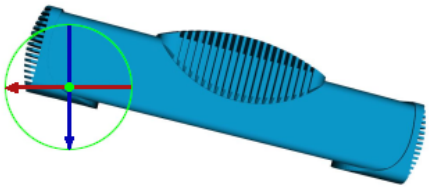


Figure 3: Orientation of camera space coordinate system in relation to the device.
The X-axis is red, the Y-axis is green and the Z-axis is blue.

Table 1: Angles at which the camera sensor is mounted in different models of PhoXi 3D Scanner.

Device	XS	S	M	L	XL
Angle	0°	15.45°	11.75°	9.45°	7.50°

Table 2: Angles at which the camera sensor is mounted in different models of Alpha 3D Scanner.


Device	L	XL

Angle	7.50°	7.50 °

Table 3: Angles at which the camera sensor is mounted in different models of MotionCam-3D (Color).

Device	S	S+	M	M+	L	*L+
Angle	0°	0°	0°	0°	0°	0°

* Only available as MotionCam-3D Color

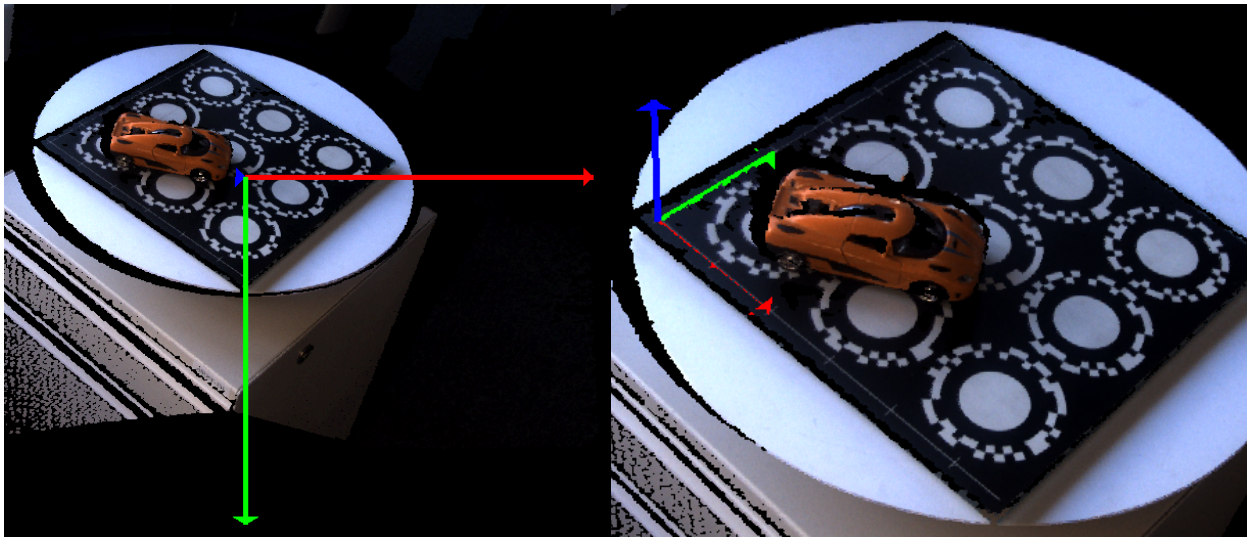

Camera space (left - the origin is in the camera unit of the device) and marker space (right - the origin is in the origin of the marker pattern) in PhoXi Control.

Marker Space

Marker space provides you with a practical tool for many different real-world applications. Marker space transformation is useful in situations like: calibration of a coordinate system with a specific plane, multiple scan alignment (one moving device), multiple device calibration (scanning scene from different directions), or calibration of a device mounted on a moving robot arm.

Marker space has the point of origin and its axes defined by marker pattern:

- The origin point lies at the origin point of axes printed on the pattern..
- The XY-plane is aligned with the XY-plane visible on the marker pattern. The X-axis and Y-axis match the X-axis and Y-axis printed on the pattern.
- The Z-axis points upwards from the marker pattern perpendicular to the XY plane.

Marker Pattern

Marker pattern is a specially developed printed pattern recognized by Photoneo 3D sensors used to transform the coordinate system from default camera space to marker space. It contains N uniquely recognizable white circles on black background with encoded coordinates. Marker patterns are available in different sizes - in the PhoXi Control installation folder or for downloading from our website www.photoneo.com/downloads/device-resources/.

Use PhoXi Control Menu → Tools → Marker Patterns to open a folder containing two subfolders. In the subfolder `Patterns`, you can find PDF versions of all available marker pattern sizes. Since different device models are able to scan different volumes from different distances, they also need different sizes of marker pattern.

Table 3: Recommended sizes of marker patterns for PhoXi 3D Scanner models.

	XS	S	M	L	XL Scanning distance [mm]: < 1900	XL Scanning distance [mm]: > 1900
A5	✔	-	-	-	-	-
A4	-	✔	✔	-	-	-
A3	-	-	✔	✔	✔	-
A2	-	-	-	-	✔	✔
S30		✔	✔	✔	✔	✔

Table 4: Recommended sizes of marker patterns for MotionCam-3D models.

	S	S+	M	M+	L	L+ < 1900	L+ > 1900
A5	✔	✔	-		-	-	-
A4	✔	✔	✔	✔	✔	-	-
A3	✔	✔	✔	✔	✔	✔	✔
A2	-	-	-		✔	✔	✔
S30	✔	✔	✔	✔	✔	✔	✔

Table 5: Recommended sizes of marker patterns for Alpha 3D Scanner models.

	L		XL		
A5	-	-	-	-	-
A4	-	✔	-	-	-
A3	-	✔	✔		-
A2	-	✔	✔		
S30		✔	✔		

For complete information about minimal/maximal distances and maximal angles from which marker pattern is recognizable by Photoneo 3D Sensors please refer to Table 6, 7, and 8..

Table 6: Sizes, distances, and angles at which the marker pattern is still recognizable by PhoXi 3D Scanner devices

XS	A5	A4	A3	A2	S30
Minimal distance	150	230	230	-	-
Maximal distance	250	250	250	-	-
Maximal angle (~180 mm)	30	-	-	-	-
S					
Minimal distance	380	380	380	-	380
Maximal distance	580	580	580	-	580
Maximal angle (~440 mm)	60	60	60	-	60
M					
Minimal distance	460	460	460	-	460
Maximal distance	620	1160	1160	-	1160
Maximal angle (~650 mm)	15	60	60	-	60
L					
Minimal distance	-	870	870	1300	870
Maximal distance	-	1950	1950	2200	2200
Maximal angle (~1240 mm)	-	15	15	60	15
XL					
Minimal distance	-	1680	1680	1680	1680
Maximal distance	-	1950	1950	3950	3950
Maximal angle (~2300 mm)	-	15	15	15	15

Table 7: Sizes, distances, and angles at which the marker pattern is still recognizable by different models of MotionCam-3D.

S	A5	A4	A3	A2	S30
Minimal distance	-	380	380	-	380
Maximal distance	-	580	580	-	580
Maximal angle	-	60	60		60
S+					
Minimal distance	-	630	635	-	635
Maximal distance	-	1570	1540	-	1540


Maximal angle	-	15	60		15
M					
Minimal distance	-	500	500	-	500
Maximal distance	-	935	935	-	935
Maximal angle	-	60	60		60
M+					
Minimal distance	-	630	635	-	635
Maximal distance	-	1570	1540	-	1540
Maximal angle	-	15	60		15
L					
Minimal distance	-	780	780	780	780
Maximal distance	-	1400	2350	3030	3030
Maximal angle	-	15	15	15	15
L+					
Minimal distance	-	-	1300	1300	1300
Maximal distance	-	-	2950	3780	3780
Maximal angle	-	-	15	15	15

Table 8: Sizes, distances, and angles at which the marker pattern is still recognizable by different models of Alpha 3D Scanner.


L	A5	A4	A3	A2	S30
Minimal distance	-	870	870	870	870
Maximal distance	-	1630	2150	2150	2150
Maximal angle	-	15	15	15	15
XL					
Minimal distance	-	-	1680	1680	1680
Maximal distance	-	-	2840	3780	3780
Maximal angle	-	-	15	15	15

Table 6, 7, 8 explanations:

- Minimal distance - minimal distance at which the device can still recognize the marker pattern.
- Maximal distance - the maximal distance at which the device can still recognize the marker pattern.
- Maximal angle - maximal angle to which the marker device can be rotated away from the position parallel with the device as can be seen in the following figure.

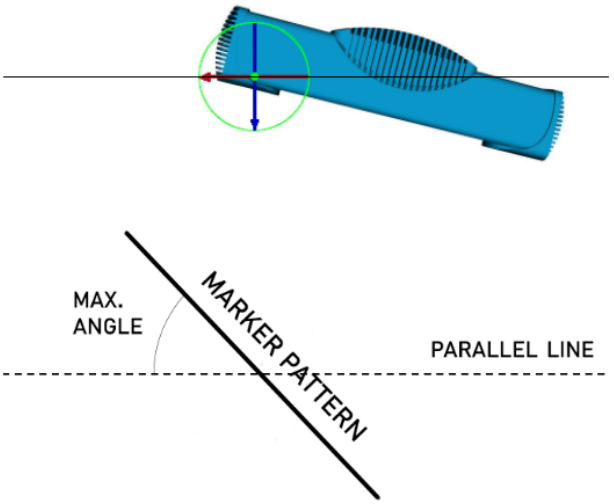

Maximal angle to which the marker pattern can be rotated away from position parallel with the device for the pattern to be still recognizable. For maximal angles for different sizes of devices and marker patterns refer to Tables 3 and 4.
Note: When using a marker pattern, whose maximal center-to-center distance is 4-times smaller than the calibration range of the device, the maximal angle is 15°. Refer to Tables 6, 7 and 8 for more information.

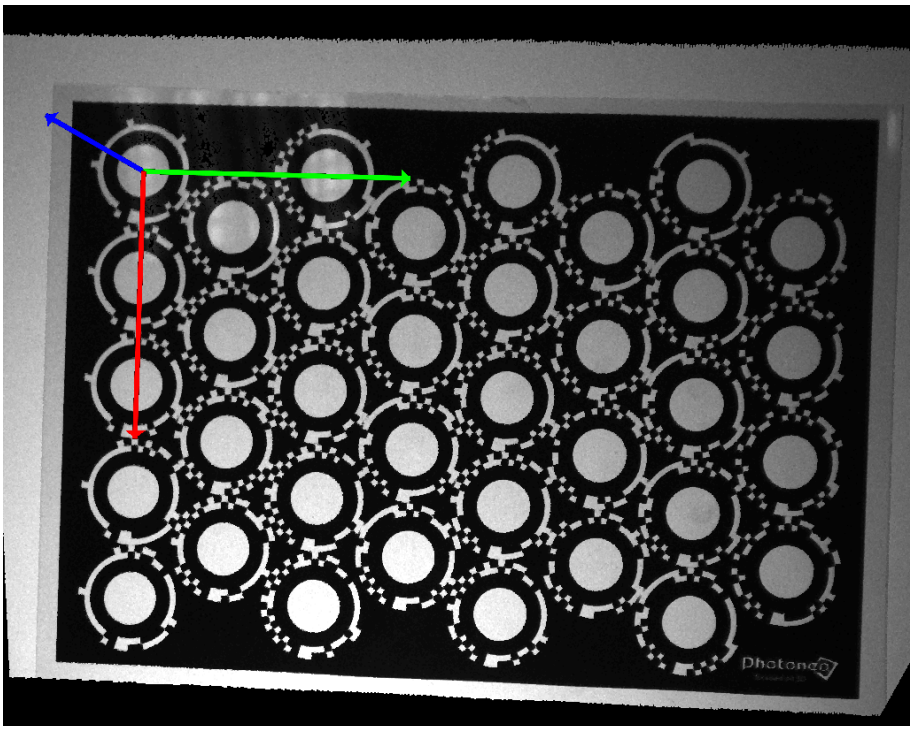


Marker pattern with the point of origin and X (red), Y (green), and Z (blue) axes depicted.

The origin of marker space always lies in one specific circle (see Figure 5). Even if this circle is not visible in the initial scan, the design of the pattern ensures that the point of origin can be calculated based on which circles are visible in the scan. If the marker pattern is printed scaled and the corresponding scale is not set in PhoXi Control, the marker pattern will not be recognized correctly (i.e. the point of origin will be on the edge of the circle instead of in the middle.

For applications where the highest accuracy is necessary, the marker pattern can also be ordered as a metal plate. Paper marker patterns usually are not perfectly flat, which can cause small deviations in the setting of the XY plane. Even though this error is small, for objects that are larger or further away this initial error multiplies and can cause millimeter deviations in measurements far from the pattern. Marker patterns on metal plates have better flatness and eliminate these types of errors.

For applications where scaled versions of the above-mentioned marker patterns are used, the scale of the pattern has to be reflected by setting up the Marker Scale in PhoXi Control. The marker Scale is part of the Coordinate Settings menu. For lower versions of PhoXi Control, this utility is used to change the scale of the marker pattern.

In most cases at least an area of 2 columns x 3 rows of the marker pattern has to be visible to the device. The circles on the marker pattern visible to the device cannot be collinear or the device will not be able to recognize them.

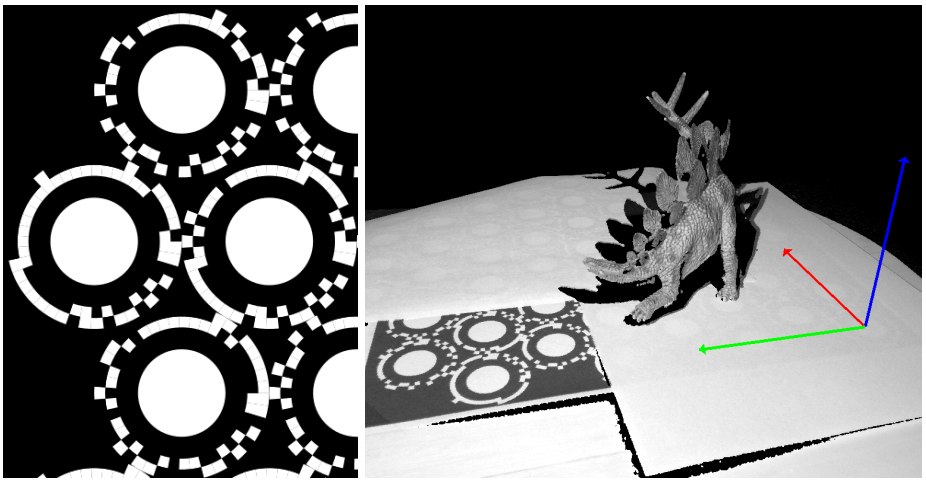

Minimal part of the marker pattern that has to be visible for the device to correctly recognize it and set marker space. It does not matter which part of the marker pattern is visible to the device.

Marker Space Set Up

Marker space set up is a two-step process:


1. Calibration
2. Usage

Calibration

“Calibration” is the process of recognizing the position of the marker pattern and setting up the marker space coordinate system. It can be done one time, e.g. to calibrate the coordinate system with the table or the floor, or every time the scan is taken, e.g. to be used on rotary tables.metadata

To calibrate the device for marker space:

- Connect to Photoneo 3D Sensor as usual. See section Connecting to the device in this manual
- If using a MotionCam-3D, for the **Camera mode**, markers should be 1.5x larger than in the Scanner mode to accommodate the reduced resolution (if not using the “Full Grid” Output Topology).
- In the **Coordinates Settings** menu set **Coordinate Space** to **Marker Space**.
- Check **Recognize Markers**.
- Check **Save Transformations**.
- Hit the **Set** button.
- You can also save this marker space transformation into your current profile, and hit the **Set and Store** button.
- Place the marker pattern in the scene, and trigger the scan.
  - If any object is in the scene, make sure the minimal part of the marker pattern is visible (Figure 5).

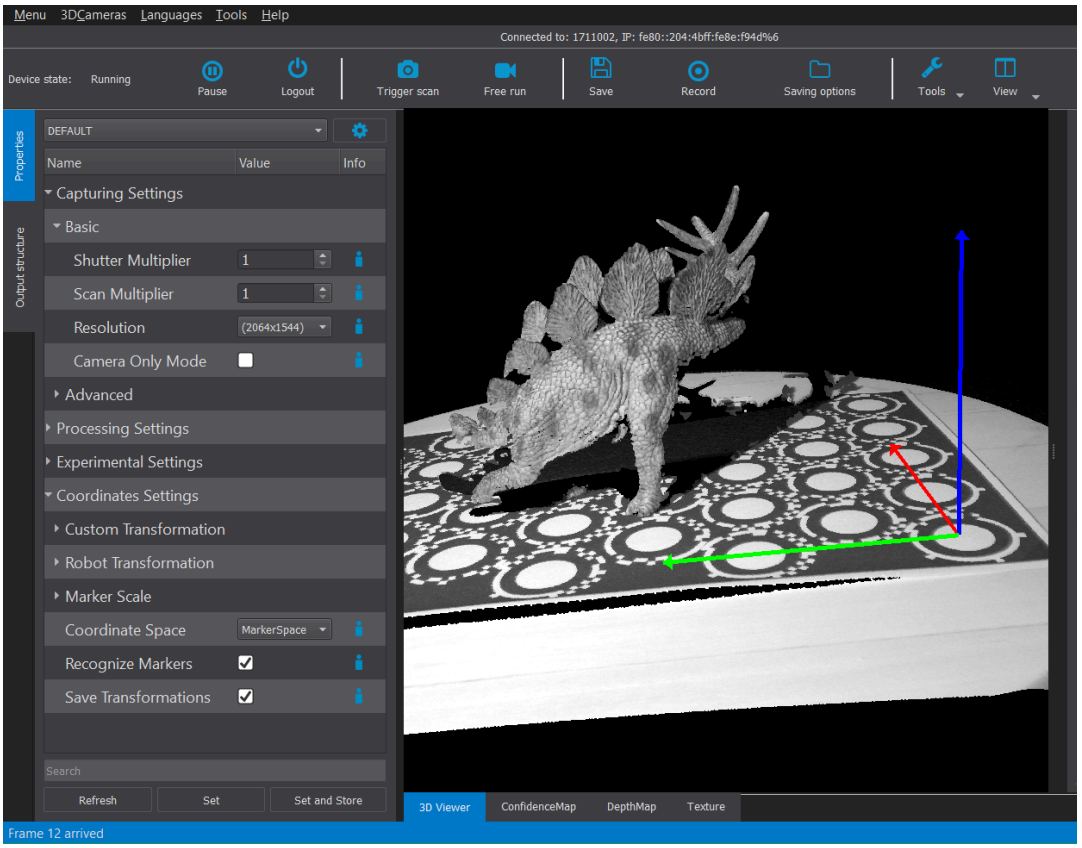


Calibration of marker space.

Usage

Once the calibration is completed, the marker coordinate system is stored in the device, so the marker pattern can be removed from the scene.

For the following scans:

- Set Coordinate Space to Marker Space.
- Set Recognize Markers to off.
- Set Save Transformations to off.
- If using a MotionCam-3D, after the calibration is complete, **Operation Mode** can be either set to **Camera** or **Scanner** while preserving the **Marker Space**

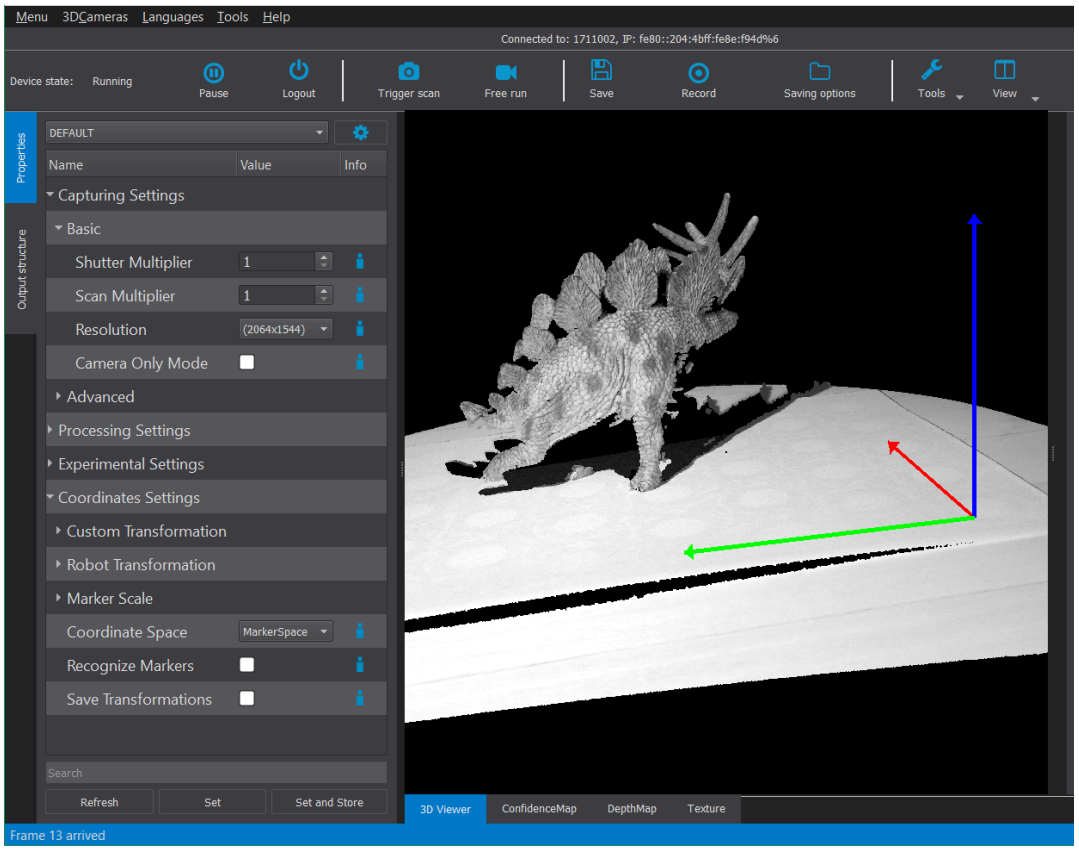

Usage of marker space.

Recognize Markers parameter is used to tell the device to look for the marker pattern in the scene:

- When this option is checked and the marker pattern is in the scene, transformation to marker space occurs.
- When this option is checked and the marker pattern is not in the scene, PhoXi Control shows the status **Error: Marker pattern was not recognized (3D-Based)!**, but still displays the texture of the last frame.
- It is only necessary for Recognize Markers to be checked during marker space calibration. Once the transformation is known it is saved on the device by the Save Transformations parameter.
- Moving the device between sessions or making other adjustments to the scene in terms of distances and/or angles between the device and plane defined by the marker pattern makes the transformation incorrect.


Save Transformations parameter is used to permanently save transformations from camera space to other coordinate spaces (marker space, custom, or robot space) to the device. This means that even when marker space is selected in the following session (after the device restart) and the pattern is not set to be recognized again, the transformation is applied to the point cloud.

Marker Space Advantages and Use

There are several uses of Photoneo 3D Sensors where the Marker Space presents an advantage:

- **Calibration with a plane**: for applications that need to have a specific plane as their base, marker space provides an easy way to achieve this. The marker pattern can be removed after the initial calibration.

- **Multiple scan alignment**: for applications where multiple scans from different points of view are used to create a model of the scanned object. Point clouds that have coordinates in camera space can be aligned by complex algorithms or manually. However, when the point clouds are generated in marker space the scans can be automatically pre-aligned with each other.

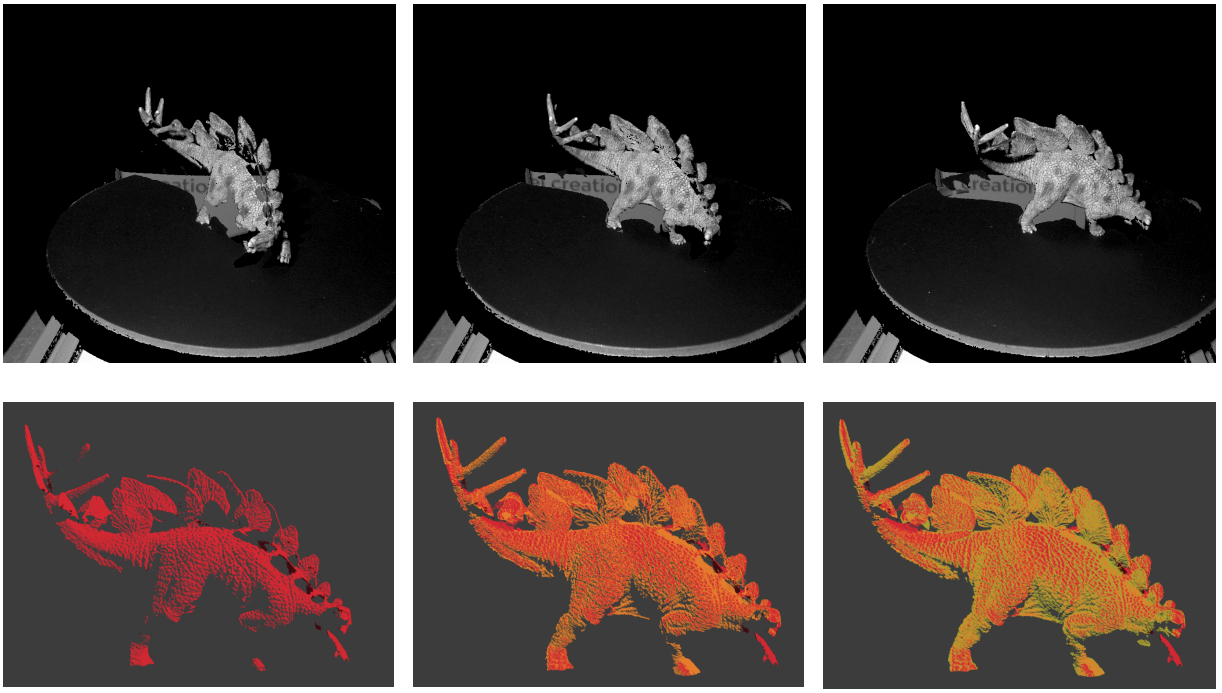

Alignment of scans from multiple points of view.

- **Multiple devices calibration**: for applications where multiple devices are used to scan the scene from different points of view. If all the devices in the scene have coordinates set to marker space they generate point clouds with the same coordinates. This is very similar to scanning objects with one device from different points of view.


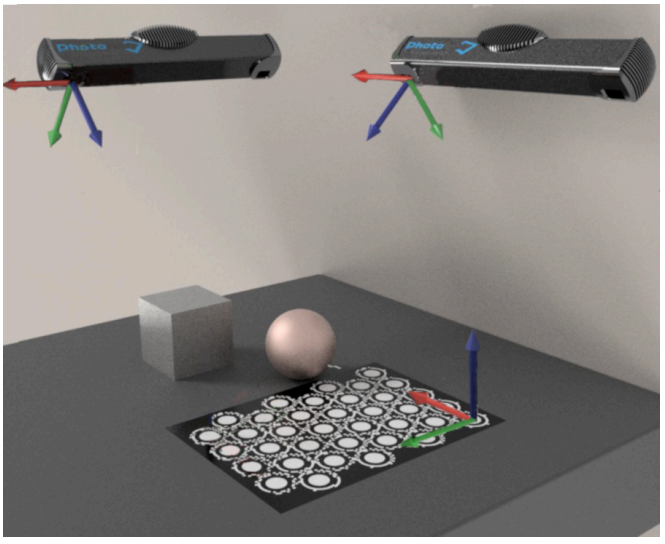


Figure 10: Multiple devices in one scene using marker space generated point clouds with the same coordinates.

- **Calibration of the device on a moving robot arm** allows determining the exact position of the device mounted on the moving robot arm with regards to the tool center point (TCP) of the robot. The calculation is done based on several scans of the marker pattern in different positions of the robot (its TCP). Knowledge of the exact position of the device on the robot is necessary to transform the position of the scanned object into the coordinate space of the robot.

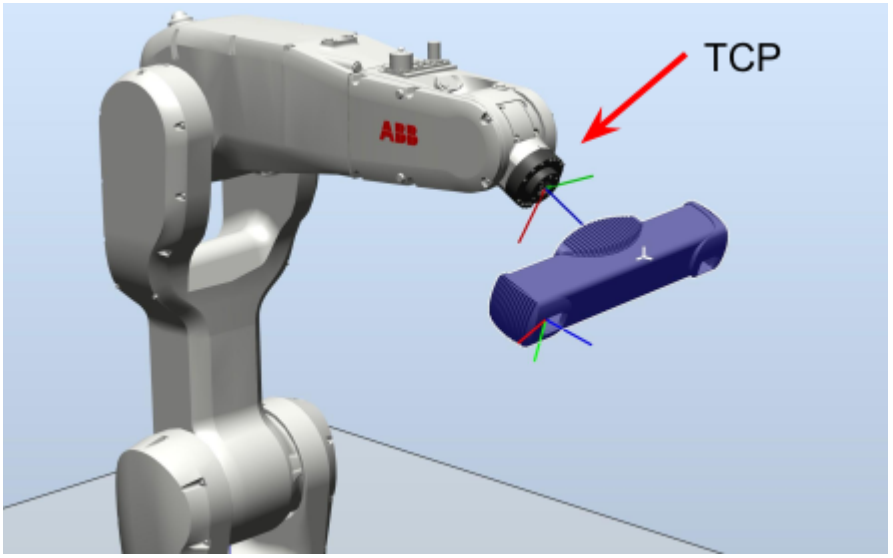


Marker space allows finding the transformation between the tool center point of the robot and the fixed position of the device on the robot arm.

Troubleshooting and FAQ

How do I find out if my point cloud is in the Marker space?

On the right side of the Viewer Pane in the Coordinates menu check the Axis box. This displays the axes of the point cloud coordinate system. Marker space axes can be easily visually checked in a 3D viewer to see if they are set correctly.

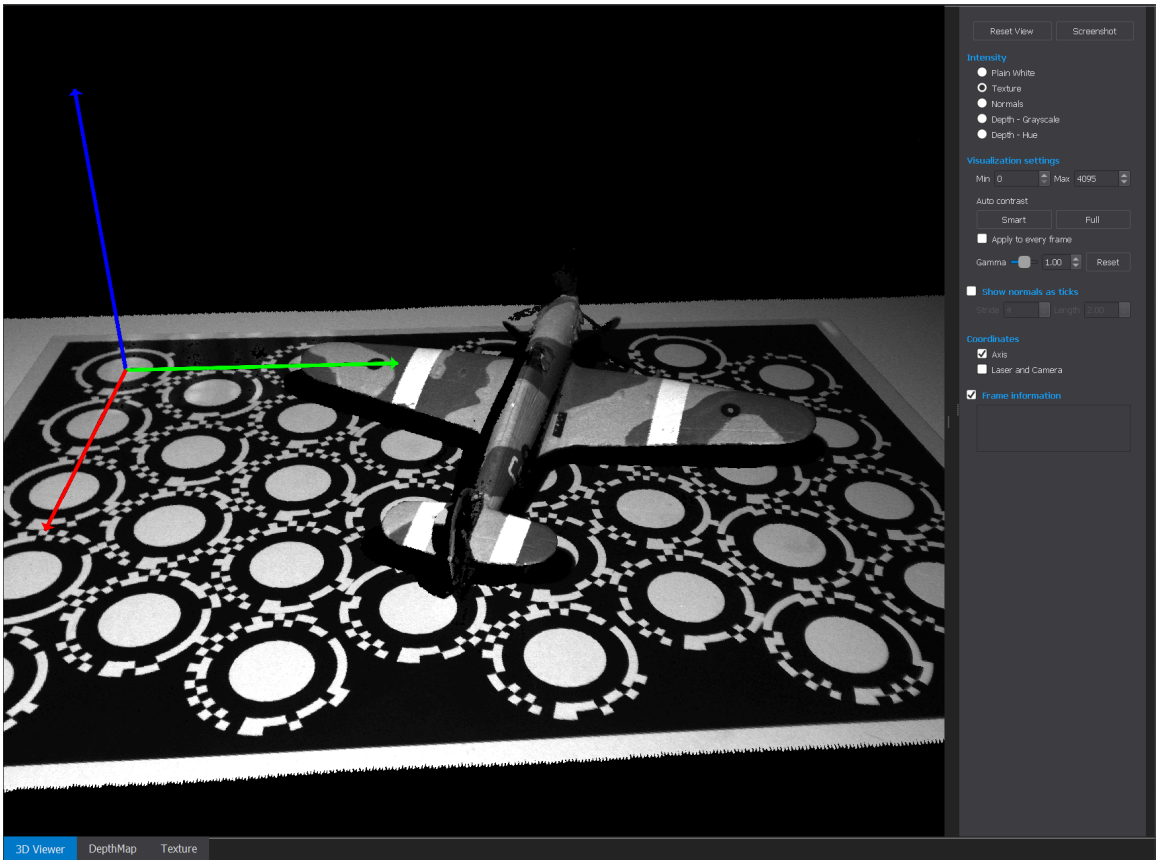

Scan in Marker space with displayed axes.

Point cloud is not generated, and the status bar shows Error: Marker pattern was not recognized (3D-Based)!.

The marker pattern is not detected correctly. Either:

- The visible portion of the marker pattern is too small
- There are only collinear circles in the visible portion of the marker pattern
- The angle between the marker pattern and the device is too big (please refer to Table 3, Table 4 and Figure 13),
- The point cloud is in half resolution.
- If using MotionCam-3D, the Operation mode is set to Camera

The point of origin of Marker Space is not in the center of the circle.

Check if the marker pattern is printed correctly without scaling or fitting it to paper. When the pattern is scaled the size of the circles is different, and the position of the point of origin is not calculated correctly.

Always use marker patterns available in PhoXi Control or downloaded from our website.

Does the origin point of Marker Space have to be visible to the device?

No. All the circles are unique so the origin point is calculated based on the circles that are visible.

Appendix 2 - Sensor Alignment Tool

This tool is a command-line application designed for the spatial alignment of multiple Photoneo 3D Sensors. It calculates and applies the spatial transformations to align two or more scanners into a single, shared coordinate system.

The alignment tool also supports chaining transformations through intermediate devices. This enables alignment even when not all devices have direct overlap with the master device, as long as there is a chain of overlapping observations. In all methods, one scanner is designated as the master device (the first in the device list).

Alignment Methods


There are four alignment methods available.

1. **Texture-Based:** Relies on identifying and matching common 2D features in the textures of the scans.
2. **Sphere-Based:** Uses at least three spheres of a known diameter placed in the scene. The application automatically detects these spheres and uses their 3D positions to compute the transformation.
3. **Multi-Marker:** An interactive method that uses a marker board to collect multiple marker positions across different placements. The user moves/rotates the marker board to multiple positions, capturing marker detections from all devices at each capture. The alignment is computed from the captured marker poses.
4. **Marker-Dot:** Uses the device's built-in marker dot recognition to detect marker dots placed in the scene. The 3D positions of the detected dots are used to compute the alignment transformation. Requires at least three marker dots visible to all devices.


General Alignment Workflow

This workflow applies to all alignment methods. The specific actions required for your chosen method are detailed in the console and in the "Method-Specific Preparations" section below.


1. **Launch the Tool:** In the Network Discovery window, select the primary (master) device and navigate to Utils > Sensor Alignment Tool.

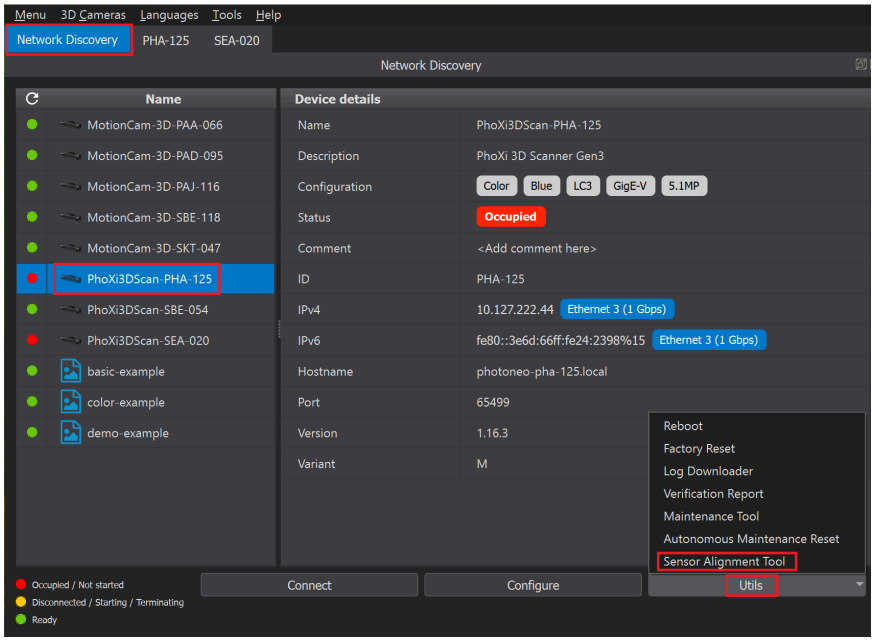


2. **Select Devices:** A command-line application will open. Follow the prompts to select one or more secondary devices.

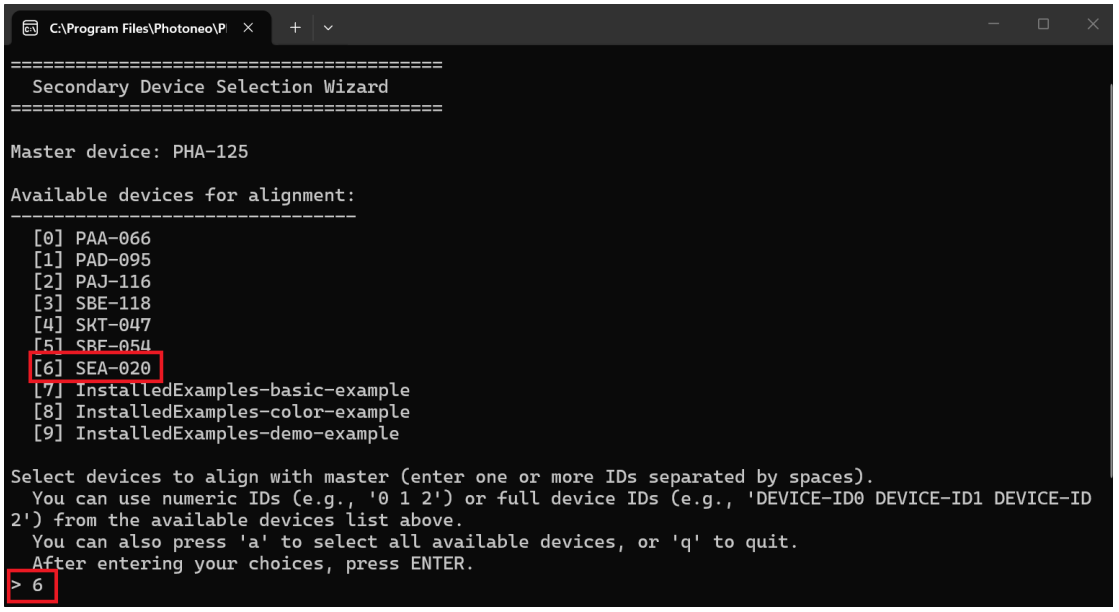


3. **Choose Alignment Mode:** Select the alignment method you wish to use (e.g., Texture-Based, Sphere-Based, etc.).

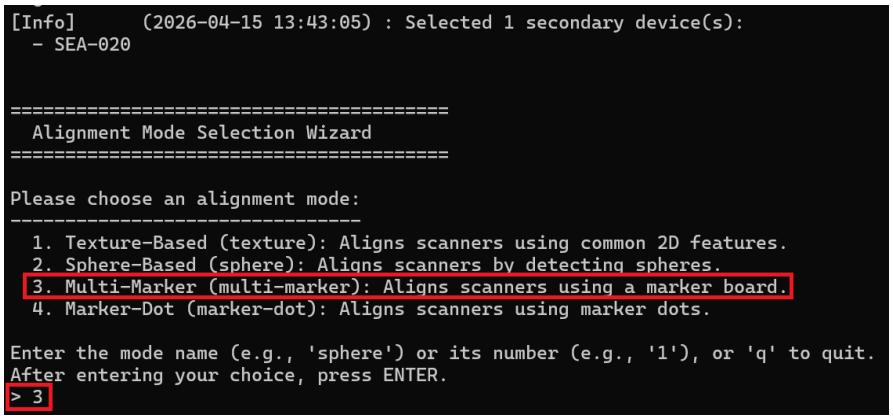


4. **Set Coordinate Space:** Decide if you want the tool to automatically set the coordinate space to CustomSpace after a successful alignment..

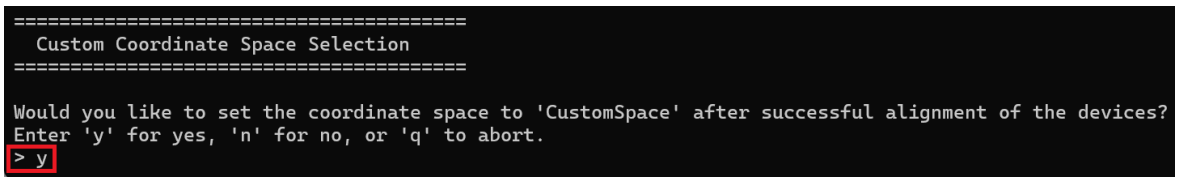

5. **Configure Profile Settings:** Choose whether to save the resulting alignment to a specific scanning profile.

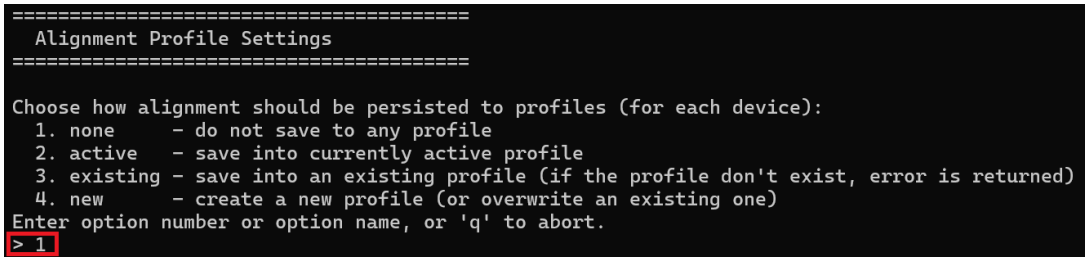

6. **Follow On-Screen Instructions:** The console will now provide specific instructions based on the chosen alignment method. This may involve moving objects, capturing scans, or entering data.
7. **Review Results:** Once the process is complete, the application closes. If you choose to do so in Step 4, the transformation is automatically applied to the secondary devices. All scanners will now operate in the master device's coordinate space.

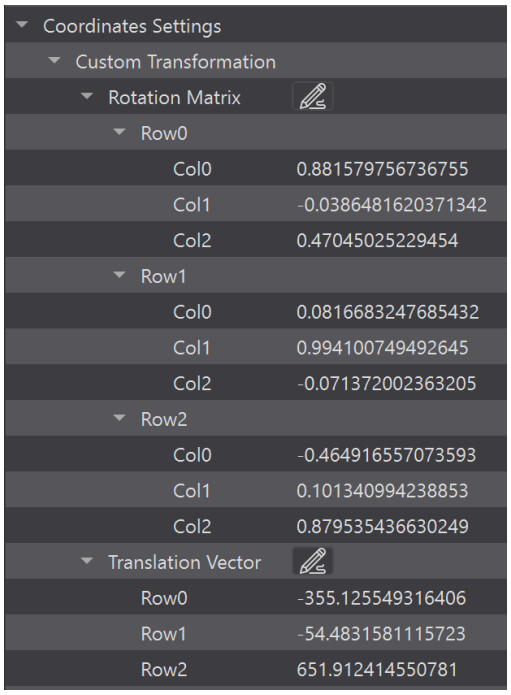

Method-Specific Preparations and Instructions

Before starting the general workflow, prepare your physical setup according to the method you plan to use. During the workflow (Step 6), the console will guide you through the unique actions required for each method.

Method 1: Texture-Based

- **Setup:** Ensure the scanners have an overlapping field of view. Place at least one flat, texture-rich object (like an open magazine or a detailed poster) within the shared area to ensure a high-contrast, non-repetitive texture. This significantly improves the likelihood of a successful alignment.



Method 2: Sphere-Based


- **Setup:** Place at least three alignment spheres of the same, known diameter into the scene so they are visible to all scanners. The spheres should not form an equilateral or isosceles triangle; ensure that each pair of spheres in the triplet has a different distance between them.



- **In-Tool Action:** When prompted by the console, you will need to enter the diameter of the spheres in millimeters.

Method 3: Multi-Marker

- **Setup:** Have a marker board ready. During capture, the marker board must be detectable by at least two scanners at a time.

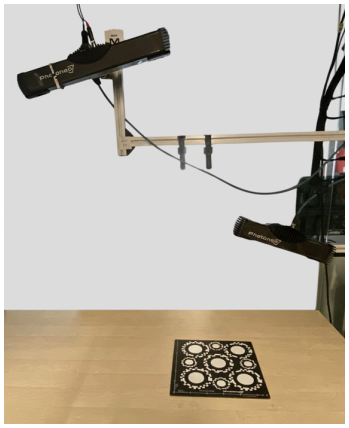


- **Interactive Data Collection:** The application will prompt you to place the marker board in different positions:
    - Place the marker board so it is visible to at least two scanners
    - Follow instructions shown in the console to capture scans from all devices
    - Move or rotate the marker board to a new position and repeat (more positions improve accuracy)
    - Only scan batches where at least 2 devices detect the marker are recorded

- The tool reports which devices can be aligned with master after each scan batch and guides which devices still need more shared marker board captures

Method 4: Marker-Dot

- **Setup:** Place at least three marker dots in the scene so that they are visible to all scanners you wish to align. The dots should be well-distributed in 3D space (not collinear).

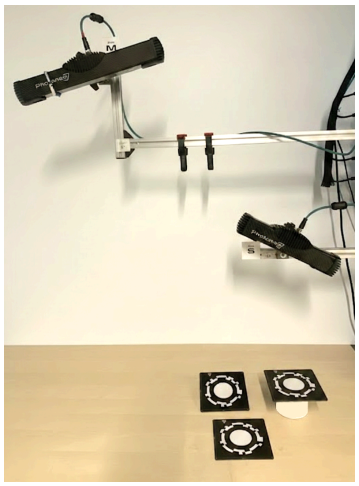

Standalone Application

The Sensor Alignment Tool is also available as a standalone command-line application. Both the executable and a detailed guide containing instructions are located in the `SensorAlignmentTool` directory within the PhoXi Control installation folder.

Note: The paths below assume the default installation directory and version 1.17.0. If you installed PhoXi Control in a different location or are using a different version, please adjust the paths accordingly.

Windows:

- Application: `SensorAlignmentTool.exe`
  Path: `C:\Program Files\Photoneo\PhoXiControl-1.17.0\bin\SensorAlignmentTool\SensorAlignmentTool.exe`
- Instructions: `README.md`
  Path: `C:\Program Files\Photoneo\PhoXiControl-1.17.0\bin\SensorAlignmentTool\README.md`

Ubuntu:

- Application: `SensorAlignmentTool`
  Path: `/opt/Photoneo/PhoXiControl-1.17.0/bin/SensorAlignmentTool/SensorAlignmentTool`
- Instructions: `README.md`
  Path: `/opt/Photoneo/PhoXiControl-1.17.0/bin/SensorAlignmentTool/README.md`

Note: If you are using a different version of PhoXi Control, replace 1.17.0 in the paths above with your installed version.

Sensor Alignment Tool Configuration

While it is not typically necessary, you can adjust several parameters for the Sensor Alignment Tool by editing the `config.txt` file.

Both the configuration file and a detailed guide are located in the `SensorAlignmentTool` directory within the PhoXi Control installation folder.

Windows:

- `config.txt`
  - **Path:** `C:\Program Files\Photoneo\PhoXiControl-1.17.0\bin\SensorAlignmentTool\config.txt`
  - This file contains the adjustable parameters.
- `README.md`
  - **Path:** `C:\Program Files\Photoneo\PhoXiControl-1.17.0\bin\SensorAlignmentTool\README.md`
  - The Configuration section of this guide explains how to use the `config.txt` file.

Ubuntu:

- `config.txt`
  - **Path:** `/opt/Photoneo/PhoXiControl-1.17.0/bin/SensorAlignmentTool/config.txt`
  - This file contains the adjustable parameters.
- `README.md`
  - **Path:** `/opt/Photoneo/PhoXiControl-1.17.0/bin/SensorAlignmentTool/README.md`

The Configuration section of this guide explains how to use the `config.txt` file.

Appendix 3 - External Camera Calibration

Introduction

Image sensors inside PhoXi 3D Scanners and MotionCam-3D (non-color) are capable of providing grayscale images only. Applications that require color information along with the 3D data can be performed using the MotionCam-3D Color or by a calibration (also referred to as alignment) of an additional color camera with the PhoXi 3D Scanners and MotionCam-3D (non-color).

The calibration is achieved via PhoXi C++ API by capturing multiple images of marker pattern both from the device and the external camera. The output of this calculation is a transformation from the default device coordinate space to the coordinate space of the external camera. As a result, the API can provide a depth map from the perspective of the external camera as well as a 3D point cloud with a mapped color texture.

This manual will guide you through the use of the API example ExternalCamera in the following steps:

1. Calibration of sample external camera with PhoXi 3D Scanner or MotionCam-3D.
2. Calculation of the depth map from the point of view of the external camera.
3. Application of color information on the 3D point cloud.

Provided example application has two modes of operation:

1. Batch mode controlled by command line arguments capable of calibration of the device with an external camera, depth map calculation, and color point cloud processing using saved files.
2. Interactive mode where each step is based on user input. This mode is capable of calibrating the external camera with the device, calculating the depth map, and processing the color point cloud while connected to the device.

Running the Example with Sample Data

Provided API application runs with sample data to demonstrate the process of calibration with an external camera, producing a depth map and colored point cloud. Implementation and use of your own external camera is described in later parts of this document.

The **ExternalCamera** API example can be found in

- Windows: `Program Files/PhotoneoPhoXiControl/API/examples/CPP/ExternalCamera`
- Linux: `/opt/PhotoneoPhoXiControl/API/examples/CPP/ExternalCamera`

It is recommended to copy the example folder into your user folder or other location where you have writing rights.

Download example data for calibration from the following link and copy the Data folder into your project folder:
http://photoneo.com/files/installer/PhoXi/api/external_camera_example_1.2.zip

Install OpenCV 3.1.0 on the following path:

- Windows: `C:/opencv`
- Linux: `home/OpenCV`

Calibration

The process of calibration serves to compute the transformation between the default coordinate space of the device and the coordinate space of the external camera which has origin in the external camera. The computation is achieved by processing:

- Ten pairs of images of marker pattern taken by the device and the external camera, each taken from a different point of view. For calibration purposes, the images from the external camera have to be in greyscale. The images are located in `<path>/Data` directory with the following naming convention:
  - Prefix **frame** for images captured by the internal camera of the device.
  - Prefix **image** for images captured by the external camera.
- Input parameters from files located in the `<path>/Settings` directory:
  - `FocalLength` → focal length of the external camera.
  - `PixelSize` → pixel size of the external camera.
  - `MarkerPositions` → positions of centers of circles on the marker pattern. Different sizes of marker patterns have different positions of the circles.

The calibration is handled by connecting to file camera `1.praw` located in the `<path>/Data` folder.

The result of calibration is file `calibration.txt` containing a set of estimates of intrinsic and extrinsic parameters of the external camera and transformation from the native Photoneo 3D Sensor coordinate space to the external camera coordinate space.

To calibrate the application with sample data, use the following command line argument:

```
./ExternalCameraExample --calibrate ExternalCamera/Data/1.praw Data/frame1.png
Data/frame2.png Data/frame3.png Data/frame4.png Data/frame5.png Data/frame6.png
Data/frame7.png Data/frame8.png Data/frame9.png Data/frame10.png Data/image1.png
Data/image2.png Data/image3.png Data/image4.png Data/image5.png Data/image6.png
Data/image7.png Data/image8.png Data/image9.png Data/image10.png
```

Note: At least 5 pairs of frames & images need to be processed for a successful calibration.

Aligned Depth Map Computation

During this step, the depth map aligned from the point of view of the external camera is calculated.

The aligned depth map is calculated based on the data loaded from `calibration.txt`. The application connects to a file camera `<folder>/Data/1.praw` and then computes the aligned depth map, which is saved as an image in `<folder>/fileCamera_1.jpg`. The following command line argument is used to calculate the depth map:

```
./ExternalCameraExample --depthmap
```

Colored Point Cloud Computation

This step serves to apply the color texture captured by the external camera to the point cloud.

The colored point cloud is calculated based on the data loaded from `calibration.txt`. The application connects to a file camera `<path>/Data/1.praw`, loads a color texture from `<path>/Data/1.bmp,` and applies it to the point cloud. The result is saved as `<path>/1.ply`. The following command line argument is used to calculate the colored point cloud:

```
./ExternalCameraExample --colorpc
```

Integration of External Camera

To use your own external camera with Photoneo 3D Sensor, the following steps are necessary:

- Preparation of the external camera and configuration of the input files.
- Implementation of the external camera into the API code.
- Preparation of marker pattern.

External Camera

For successful integration of the external camera with Photoneo 3D Sensor the following requirements have to be met:

- The external camera is C++ compatible and the user is able to trigger images via API calls.
- Its pixel size and focal length (both in millimeters) are known.
- The position of the external camera with regards to the device is fixed.
- The field of view of the external camera overlaps the field of view of the device camera as much as possible. It is recommended to mount the external camera very close to the camera unit of the device.

The following files have to be modified with the information about intrinsic parameters of the external camera:

- `<path>/Data/FocalLength.txt` - contains the focal length in millimeters.
- `<path>/Data/PixelSize.txt` - contains pixel size in millimeters.

Marker Pattern

The calibration of Photoneo 3D Sensor with an external camera requires a marker pattern and text file detailing the positions of circles on the pattern. A standard marker pattern bundled within PhoXi Control is used for this purpose. The folder containing marker patterns (Menu → Tools → Marker Patterns) also contains the subfolder `Patterns_with_Metadata` with text files where the position of each circle on the marker pattern is written. Each size of the pattern has different positions of the circles.

- Alternatively, download the Marker Patterns with metadata
- Please select the appropriate size of the marker pattern based on the device model and scanning distance and print it at 100 % scale.
- Copy the corresponding file with positions of the circles into
  - `<path>/Settings/MarkersPositions.txt`.

- When choosing the right size of the marker pattern, refer to Table 1 or Table 2.

External Camera Implementation

In order to gather images from the external camera, it is necessary that the user implements the following functions:

```
ExternalCamera:getCalibrationImage
ExternalCamera:getColorImage
```

Calibration

Frames and images of the marker pattern from which the transformation to the coordinate space of the external camera is calculated, are acquired during the calibration. The application prompts the user to trigger the frame, after which the method `ExternalCamera:getCalibrationImage` is called to capture the image from the external camera. **At least five pairs** of frames and images from different points of view have to be processed for the calibration to be successful. When the point of view is changed, the relative position of the external camera and the native camera of Photoneo 3D Sensor has to remain the same. The output of the calibration is saved into `<path>/calibration.txt`. The calibration is valid for all consecutive scans.

Using Already Saved Data

This mode allows for quick calibration of the external camera with the device with previously captured files.

```
--calibrate [full path to praw file] frames... cameraImages...
```

The full command for calibration with 10 pairs of frames and images would look like this:

```
./ExternalCameraExample --calibrate D:/ExternalCammera_CPP/Data/1.praw Data/frame1.png
Data/frame2.png Data/frame3.png Data/frame4.png Data/frame5.png Data/frame6.png
Data/frame7.png Data/frame8.png Data/frame9.png Data/frame10.png Data/image1.png
Data/image2.png Data/image3.png Data/image4.png Data/image5.png Data/image6.png
Data/image7.png Data/image8.png Data/image9.png Data/image10.png
```

Aligned Depth Map Computation

The application loads `calibration.txt`. The aligned depth map is calculated right after a new pair of frames and images is triggered and saved into `<folder>/device_1.jpg`. The number in the file name is increased every time a new scan is triggered and a new depth map is saved.

Using Already Saved Data

The calculation of the aligned depth map from previously captured data can be achieved with the following command line arguments:

```
--depthmap [full path to praw file] [output file]
```

The `calibration.txt` has to be present for this command to work, otherwise the application will exit with an error. The output file is where the resulting depth map is saved. The full command would look like this:

```
./ExternalCameraExample --depthmap D:/ExternalCamera_CPP/Data/scan.praw depthmap.jpg
```

Colored Point Cloud Computation

The application loads `calibration.txt`. After the new scan is triggered the application calls `ExternalCamera:getColorImage` method to capture color texture by the external camera. This texture is then applied to the native point cloud and saved into `<path>/device_1.ply`. The number in the file name is increased each time a new point cloud is saved.

Using Already Saved Data

The alignment of existing color texture over previously captured data can be handled by following command line arguments:

```
--colorpc [full path to praw file] [color image] [output file]
```

The `calibration.txt` has to be present for this command to work, otherwise, the application will exit with an error. The color image is the texture from the external camera that is going to be aligned with the point cloud and the output file is where the resulting point cloud is saved. The full command looks like this:

```
./ExternalCameraExample --colorpc D:/ExternalCamera_CPP/Data/scan.praw texture.bmp
pointcloud.ply
```

Appendix 4 - Intrinsic Parameters

Use Cases

Point Cloud Calculation from Depth Map

Depth map is a basic output calculated by Photoneo devices, transferred to PhoXi Control, and used for point cloud calculation. In some applications, the users might calculate the point cloud from the depth map by themselves and not rely on the calculation done by PhoXi Control. Some information about how the 2D camera “sees” the world is necessary for this procedure. This information is carried either by intrinsic camera matrix or by reprojection map.

In Photoneo scanning devices the texture and depth map have a direct relationship → each pixel in the texture has corresponding depth information in the depth map. Therefore operations like segmenting out the only object of interest in the texture and then calculating only the 3D points that were segmented are possible.

The point cloud can be calculated from depth map using these approaches:

- Using intrinsic camera matrix and triangle similarity described in pinhole camera model together with distortion coefficients to calculate point cloud for each pixel
- Using reprojection map to multiply the depth of given pixel by a reprojection vector corresponding to that pixel

Image Processing on Undistorted Data

Texture, ColorCameraImage and a depth map from Photoneo devices are distorted. This means that straight lines at some parts of the picture appear bent or round-shaped objects appear to be oval-shaped in the texture. Therefore image processing for such geometric shapes is not possible on distorted data and we have to undistort them first.

To undistort we first apply the inverse of distortion function to each pixel, for example by using the OpenCV method. Once we have the undistorted texture, we can identify the feature points of our object. Then there are two possibilities:

- To undistort the depth map as well and use the intrinsic parameters to calculate a new, undistorted point cloud
- Distort the feature points back to see to which camera pixels they belong and then use this information to identify them in the point cloud

Intrinsic Parameters Provided by Photoneo Devices

All provided intrinsic parameters can be retrieved by PhoXi API or via Chunk Data Control in GigEV protocol on devices with FW 1.14.0 or higher. There are two different types of intrinsic parameters:

- Intrinsic camera matrix and distortion coefficients
- Reprojection map

All available intrinsic parameters can be now retrieved via PhoXi API through corresponding pho::api::PhoXiCoordinatesSettings class members:

- CurrentCamera: Current (effective) camera settings; depends on “CameraSpace” setting selector.
- CurrentPrimaryCamera: Parameters of the camera which the original depth map (before reprojection) was created with.
- CurrentColorCamera: Parameters of the color camera with which the color texture was created.

Intrinsic Camera Matrix and Distortion Coefficients

Intrinsic camera matrix describes the transformation from 3D coordinates to 2D coordinates on an image plane using the pinhole camera model. It is a 3x3 matrix containing focal length - the distance between the pinhole and the image plane and principal point offset - the pixel offset from the principal point.

Distortion coefficients describe the properties of the camera lens and how it distorts the real shape of an object to the shape on the image. OpenCV compatible coefficients (k1, k2, p1, p2, k3) are used to describe the distortion introduced by the camera lens in Photoneo devices.

- Intrinsic camera matrix and distortion coefficient can be retrieved using PhoXi API by two different approaches:
- Global method: PhoXiDevice→CalibrationSettings:
  - provides the Camera Matrix and Distortion Coefficients at maximum device resolution:
    - PhoXi 3D Scanner → 2064x1544
    - MotionCam-3D → Scanner mode 1680x1200
- PerFrame method: FrameInfo→Camera
  - provides the Camera Matrix and Distortion Coefficients for current device resolution
    - PhoXi 3D Scanner → 2064x1544 or 1032x772
    - MotionCam-3D → respects current Operation mode and Output topology. Empty for Raw and Irregular grid topologies

Global Method

See **GetISCalibParams** API example:

```
void printCalibParams(pho::api::PPhoXi &PhoXiDevice)
{
    pho::api::PhoXiCalibrationSettings CalibrationSettings = PhoXiDevice->CalibrationSettings;

    std::cout << "CalibrationSettings: " << std::endl;
    std::cout << "  FocusLength: " << CalibrationSettings.FocusLength << std::endl;
    std::cout << "  PixelSize: "
        << CalibrationSettings.PixelSize.Width << " x "
        << CalibrationSettings.PixelSize.Height
        << std::endl;
    printMatrix("CameraMatrix", CalibrationSettings.CameraMatrix);
    std::cout << "  DistortionCoefficients: " << std::endl;
    std::cout << "    Format is the following: " << std::endl;
    std::cout << "    (k1, k2, p1, p2[, k3[, k4, k5, k6[, s1, s2, s3, s4[, tx, ty]]]])" <<
std::endl;
```

```
    std::vector<double> distCoeffs = CalibrationSettings.DistortionCoefficients;
    std::stringstream currentDistCoeffsSS;
    std::size_t brackets = 0;
    currentDistCoeffsSS << "(";
    currentDistCoeffsSS << distCoeffs[0];
    for (std::size_t i = 1; i < distCoeffs.size(); ++i)
    {
        if (i == 4 || i == 5 || i == 8 || i == 12 || i == 14)
        {
            currentDistCoeffsSS << "[";
            ++brackets;
        }
        currentDistCoeffsSS << ", " << distCoeffs[i];
    }
    for (std::size_t j = 0; j < brackets; ++j)
    {
        currentDistCoeffsSS << "]";
    }
    currentDistCoeffsSS << ")";
    std::cout << "    " << currentDistCoeffsSS.str() << std::endl;
}
```

Per Frame Method

See **FullAPI** example:

```
void FullAPIExample::PrintFrameInfo(const pho::api::PFrame &Frame)
{
    const pho::api::FrameInfo &FrameInfo = Frame->Info;
    std::cout << "  Frame params: " << std::endl;
    std::cout << "    Frame Index: " << FrameInfo.FrameIndex << std::endl;
    std::cout << "    Frame Timestamp: " << FrameInfo.FrameTimestamp << " s" << std::endl;
    std::cout << "    Frame Acquisition duration: " << FrameInfo.FrameDuration << " ms" <<
std::endl;
    std::cout << "    Frame Computation duration: " << FrameInfo.FrameComputationDuration << "
ms" << std::endl;
    std::cout << "    Frame Transfer duration: " << FrameInfo.FrameTransferDuration << " ms"
<< std::endl;
    std::cout << "    Sensor Position: ["
        << FrameInfo.SensorPosition.x << "; "
        << FrameInfo.SensorPosition.y << "; "
        << FrameInfo.SensorPosition.z << "]"
        << std::endl;
    PrintMatrix("Camera calibration matrix", FrameInfo.CameraMatrix);
    PrintDistortionCoefficients("Frame Distortion Coefficients",
FrameInfo.DistortionCoefficients);
    std::cout << "     Camera binning height: " << FrameInfo.CameraBinning.Height <<
std::endl;
    std::cout << "     Camera binning width: " << FrameInfo.CameraBinning.Width << std::endl;
    std::cout << "    Total scan count: " << FrameInfo.TotalScanCount << std::endl;
}
```

Reprojection Map

Reprojection map is a field of vectors that describes the direction from which each pixel gathers data. Each pixel has its own vector, therefore when we multiply the depth information by the vector from the reprojection map we get a point cloud.

Reprojection map can only be retrieved by one method:

- Global method: PhoXiDevice→ReprojectionMap
  - Provides current reprojection map that respect current device settings
    - PhoXi 3D Scanner → both resolutions
    - MotionCam-3D both operations modes and all output topologies

Global Method

See **PointCloudCalculation** API example:

```
bool calculatePointCloud(pho::api::PointCloud32f& pointCloud,
    pho::api::DepthMap32f depth,
    pho::api::PhoXiReprojectionMap reprojection) {
    if (pointCloud.Size != reprojection.Map.Size) {
        return false;
    }
    for (int row = 0; row < pointCloud.Size.Height; ++row) {
        for (int col = 0; col < pointCloud.Size.Width; ++col) {
            if (depth.At(row, col) > 0.0f) {
                pointCloud.At(row, col).x = depth.At(row, col) * reprojection.Map.At(row,
col).x;
                pointCloud.At(row, col).y = depth.At(row, col) * reprojection.Map.At(row,
col).y;
                pointCloud.At(row, col).z = depth.At(row, col) * reprojection.Map.At(row,
col).z;
            }
            else {
                pointCloud.At(row, col).x = 0.0f;
                pointCloud.At(row, col).y = 0.0f;
                pointCloud.At(row, col).z = 0.0f;
            }
        }
    }
    return true;
}
    pho::api::PhoXiReprojectionMap map = PhoXiDevice->ReprojectionMap;
    PhoXiDevice->StartAcquisition();
    if (!PhoXiDevice->isAcquiring())
    {
        std::cout << "Your device could not start acquisition!" << std::endl;
        return 0;
    }
    int id = PhoXiDevice->TriggerFrame();
    if (id < 0) {
        std::cout << "Trigger frame unsuccessful" << std::endl;
    }
```

```
    auto frame = PhoXiDevice->GetSpecificFrame(id);
    if (frame) {
        auto depth = frame->DepthMap;
        pho::api::PointCloud32f pointCloud;
        pointCloud.Resize(depth.Size);
        calculatePointCloud(pointCloud, depth, map);
        //pointCloud now contains your point cloud data
    }

    return 0;
```

Overview

	PhoXi 3D Scanner		MotionCam-3D		Alpha 3D Scanner
How to retrieve when using:	Full resolution	Half resolution	Scanner mode	Camera mode	Full resolution
Camera Matrix and Distortion Coefficients	Global PerFrame when operating in full resolution	~~Global~~ PerFrame when operating in half resolution	Global PerFrame when operating in Scanner mode	~~Global~~ PerFrame when operating in Camera Mode Only applicable for Output Topology = Regular Grid	Global PerFrame when operating in full resolution
Reprojection Map	Global	Global	Global	Global	Global

Contact Information

Headquarters:

Zebra Technologies Slovakia s.r.o.

Plynárenská 6

821 09 Bratislava,

Slovakia

Technical support

Contact us at the Help Center.

Visit Photoneo support pages at www.photoneo.com/support.

Orders and inquiries:
photoneo-sales@zebra.com
photoneo-sales-us@zebra.com